

RQ-2021-07-12-61

Login Checklist

Login Station ID: #1

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 9/29/2021 0945

*Cooler Temperature	Samples Frozen?	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Waybill Tracking #
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
2.1				2	✓		✓		9293 8015 5811

COOLER CHECK

*All samples received on ice unless otherwise noted. HNO3 and Formalin preserved samples do NOT have a temperature requirement.

- If the temperature of a cooler exceeds 6.0 oC (above 10.0 oC for W-1-4-DIOX and microbiology) or received without ice, identify affected samples in an NCR. NCR# _____
- DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C for W-1-4-DIOX) without login confirmation from customer for samples requiring ice preservation; identify affected samples in an NCR. NCR# _____
- If cooler or samples are received with a damaged Evidence Seal; identify the affected samples in an NCR. NCR# _____
- If coolers or samples are received late; identify the affected samples in an NCR. NCR# _____

Chain of Custody/ Field Sheet(s) Included?

Yes ☒ No ☐

Micro-Biology Overflow Chain of Custody/ FieldSheet(s) Included?

Yes ☐ No ☒

CONTAINER CHECK

Evidence Tape on Bottles?

Yes ☐ No ☐ NA ☒Evidence Tape intact? Yes ☐ No ☐

If Criminal, photographs taken?

Yes ☐ No ☐Containers intact? Yes ☒ No ☐

Caps on tight?

Yes ☒ No ☐

Sufficient Sample Volume:

Yes ☒ No ☐If **NO** is checked above, generate an NCR listing affected sample IDs in its appropriate category. NCR# _____

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes ☐ No ☒ Init: 

Chlorine detected? (One container checked per Field ID)

Yes ☐ No ☐ Init: _____


If chlorine is detected, generate an NCR listing affected sample IDs . NCR# _____

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH< 2.0?

Yes ☐ No ☐ NA ☒ Init: 

**W-1-4-DIOX (Green dot on container) preserved to pH<4.0?

Yes ☐ No ☐ NA ☒ Init: 

If samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____

Coolers Unpacked/Checked by: 

Date: 9/29/2021

Event contains NCRs (Y/N)? ☒

Event ID: SFWMD Bloom Response

— SFWMD-2021-09-29-01 (BLOOM-RESP)

Page 1 of 2, (Date Received: 29-SEP-2021 09:45

Login Checklist

Login Preservation Equipment

Lot # & Exp: Date

Additional Comments:

Infrared Thermometer ID:	#1 Temp Gun EXP:10/28/2021
pH Test Strips 0 – 6	N/A
pH Paper 0 – 3	N/A
pH Paper 0 – 13	231019 EXP:11/01/2022
Chlorine Test Strips	0261 EXP:05/2023

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ Init: _____

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ No _____

If no, were samples shipped on dry ice? Yes _____ No _____

If S-VOC-MS samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Request Number: RQ-2021-07-12-61

Florida Department of Environmental Protection

Page 1 of 2

SFWMD Bloom Response (Okeechobee)

Central Laboratory Submittal Form

last revised Jan 25, 2018

Customer: SFWMD

Requester: Amelia G. Rankin

Field Report Prepared By:

Drew Gaskins

Project ID: BLOOM-RESP

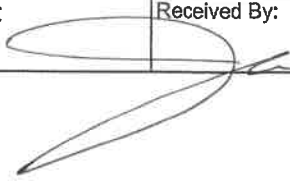
Collected By:

Drew Gaskins

Sampling Agency:

SFWMD

Location Kissimmee River		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 09/27/2021 Time 0816		☒ Eastern ☐ Central	Composite end Date _____ Time _____		Bottle Group(s) (See pg 2) A B
Field ID S65 - canal side		Matrix (type, e.g., Salt, Fresh, etc) Fresh		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C) _____	pH _____	Sample Depth 0.3 ☐ ft ☒ m	Sp. Conductance (umho/cm) _____			
Latitude 27.803°N ☒ dd ☐ dms	Longitude 81.198°W ☒ dd ☐ dms	Salinity (ppt) _____	Comments No visible BGA. Visible flow at time of sampling. Flow is towards the South. No Sonde data.					
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central	Composite end Date _____ Time _____		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C) _____	pH _____	Sample Depth ☐ ft ☐ m	Sp. Conductance (umho/cm) _____			
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) _____	Comments					
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central	Composite end Date _____ Time _____		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C) _____	pH _____	Sample Depth ☐ ft ☐ m	Sp. Conductance (umho/cm) _____			
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) _____	Comments					
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central	Composite end Date _____ Time _____		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C) _____	pH _____	Sample Depth ☐ ft ☐ m	Sp. Conductance (umho/cm) _____			
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) _____	Comments					
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central	Composite end Date _____ Time _____		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C) _____	pH _____	Sample Depth ☐ ft ☐ m	Sp. Conductance (umho/cm) _____			
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) _____	Comments					

Relinquished By: D. Gaskins	Date/Time 09/27/2021 1700	Shipping Method FEDEX	Number of Coolers Shipped: 1	Received By: 	Date/Time 9/29/2021 0945
---------------------------------------	-------------------------------------	---------------------------------	--	---	------------------------------------

Group: A	Bottle Type:	PT-50ML	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
BLOOM-ID							

Group: B	Bottle Type:	BG-250ML-WDMT H	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
W-MCYST-AA							

Date of Request: 15-JUL-2021
Created By: RANKIN_A On: 15-JUL-2021
Modified By: JASROTIA_P On: 16-JUL-2021
Customer: SFWMD
Project: BLOOM-RESP
Division:
District: Not Applicable
Event Description: SFWMD Bloom Response

Send Coolers To:

Phone: 863-462-5280 ext. 3199
SFWMD
1000 NE 40th Ave.
Okeechobee, FL 34972
Attn: James Doak
Cooler Ship EMail: jdoak@sfwmd.gov

Priority: 1
Event Status: R
Criminal Investigation: NO
Chemistry Request Reviewed By: WATTS_J On: 16-JUL-2021
Biology Request Reviewed By: JASROTIA_P On: 16-JUL-2021
Sampling Kit Required: YES Ship on: 19-JUL-2021
Sampling Kit Shipped: YES On: 16-JUL-2021
Sampling Kit Packed By: KLUG_K
Preservatives Needed: NO
Date to Receive Samples: 15-JUL-2021
Logged In By: KLUG_K On: 08-SEP-2021

Send Final Report To:

SFWMD
8894 Belvedere Rd. B374
West Palm Beach, FL 33411
Attn: Mickael Tompkins
Report Notification EMail: mtompkin@sfwmd.gov; Kirby.Wolfe@FloridaDEP.gov; Jordan.Skaggs@FloridaDEP.gov

Comments: Please pack in 10 coolers.

Bottle Groups A/B: same event - Priority 1

Bottle Group A - Priority 1
For algal dominant taxon.

Bottle Group B - Priority 1
For toxin testing.

There are multiple bottles per Group in case multiple sample targets or sample locations are needed. Samplers use best professional judgement to decide which samples are appropriate to collect for a particular response. All sets of bottles do not have to be filled at one time.

Please print two copies of algal job labels at login.

Bottle Group A (Biological) With 20 Samples:

Bottle Type: PT-50ML Number of Bottles: 20 Preserved With: ICE
BLOOM-ID Template: DEFAULT (SOP-AB05) Assessment of dominant algal taxa in bloom or mat sample

Bottle Group B (Water) With 20 Samples:

Bottle Type: BG-250ML-WDMTH Number of Bottles: 20 Preserved With: ICE
W-MCYST-AA Template: (EPA 8321B) Microcystins in water matrices by HPLC/MS/MS

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.