

Log-in Checklist

RQ- 2018-08-20-22

Log Station ID: #4

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 9/19/18 9:50

Cooler Temperature*	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # (fill out only if waybill copy is damaged)
	HNO ₃	Formalin		Present?		*Intact?		
				Yes	No	Yes	No	
<u>5.6°C</u>			<u>3</u>		☒			

* HNO₃ and Formalin persevered samples do **NOT** have a temperature requirement. For all others, if the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX), or if Evidence Seal is damaged. Identify the containers in the affected cooler(s) on back of this form.

****Note:** If "No" is checked in any of the fields below, fill out the back of this form with additional details (Field ID, Test IDs, etc.) and generate an NCR.

****Chain of Custody/ Field Sheet(s) Included?** Yes ☒ No ☐

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes ☐ No ☒ Date

CONTAINER CHECK

****Evidence Tape on Bottles?** Yes ☐ No ☒ If yes, is it intact? Yes ☐ No ☐

****Caps on tight?** Yes ☒ No ☐ ****Containers intact?** Yes ☒ No ☐

****Sufficient Sample Volume:** Yes ☒ No ☐

CHLORINE CHECK REQUIRED? (Blue dot on container) Yes ☐ No ☒ Init: J. Q.

Check the Box marked "Yes" or "No" for the Presence of Chlorine. If Cl detected, an NCR is required.					
Analysis	Yes	No	Analysis	Yes	No
W-1,4 DIOX			W-PC-AA-SF		
W-E8321-DI, -MS, -21			W-NP-AA-SF		
W-BNA (-625, -R)			W-PDQUAT		
W-CARB-AA (-CAB-AA-R)			W-PCL-SQ-R		
W-U2060-MS			W-TR-TQ		
W-PCB-R			W-CT-CI-R		
W-PAH (-R)			W-PSNP-TQ		

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

****Acid Preserved Samples: pH ≤ 2.0?** Yes ☒ No ☐ NA ☐ Init: J. Q.

****W-1-4-DIOX (Green dot on container) preserved to pH < 4.0?** Yes ☐ No ☐ NA ☒ Init: J. Q.

Coolers Unpacked/Checked by: J. Q. Date: 9/19/18 NCRs (Y/N)?

Event ID: WVAP-2018-09-19-03 NCR #

Log-in Checklist

Samples with Incorrect pH Preservation or presence of Chlorine

Field ID	Bottle Test ID(s)	pH / Cl	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_04_2018
pH Paper 0.0 – 3.0 Lot #	230515 EXP: 10/30/2018
pH Paper 0 – 13 Lot #	222516 EXP: 08/15/2019
Chlorine Test Strips Lot #	7226 EXP: 07/2020

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF; W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Algal Bloom Response - As needed

Central Laboratory Submittal Form

last revised Jan 25, 2018

Customer: WQAP

Requester: Kirby Wolfe

Field Report Prepared By:

Nicole Reistad

Project ID: BLOOM-RESP

Collected By:

Nicole Reistad, Steve Cofone

Sampling Agency:

FDEP - SROC

Location SE 31 st Terrace		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 09/18/18 Time 1600		Eastern ☒ Central	Composite end Date Time		Bottle Group(s) (See pg 2) A, B, C, D
Field ID SD091818-001		Matrix (type, e.g., Salt, Fresh, etc) Fresh		Diss. Oxygen 11.79	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)		
WIN/STORET #		Temp (C) 33.0	pH 7.86	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 1286		
Latitude 26 35 40.216 N ☐ dd ☒ dms		Longitude 81. 56 43.262 W ☐ dd ☒ dms		Salinity (ppt) 0.63				
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time		Eastern ☐ Central	Composite end Date Time		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)		
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)		
Latitude ☐ dd ☐ dms		Longitude ☐ dd ☐ dms		Salinity (ppt) Comments				
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time		Eastern ☐ Central	Composite end Date Time		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)		
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)		
Latitude ☐ dd ☐ dms		Longitude ☐ dd ☐ dms		Salinity (ppt) Comments				
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time		Eastern ☐ Central	Composite end Date Time		Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)		
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)		
Latitude ☐ dd ☐ dms		Longitude ☐ dd ☐ dms		Salinity (ppt) Comments				

Relinquished By: Nicole Reistad	Date/Time 09/18/18 1635	Shipping Method FedEx	Number of Coolers Shipped: 1	Received By: J. Q.	Date/Time 9/19/18 9:50
------------------------------------	----------------------------	--------------------------	---------------------------------	-----------------------	---------------------------

Group	Bottle Type	# of Bottles	Preservative	Enter Number of Bottles Sent to Lab
Group: A	Bottle Type: PT-50ML BLOOM-ID	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab 2 (1 has filamentous algae sample)
Group: B	Bottle Type: BG-500ML-WDMT H W-MCYST-AA	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab 1
Group: C	Bottle Type: BP-1L CHLSUITE-W	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab 1
Group: C	Bottle Type: P-500ML W-NH3 W-NO2NO3 W-S-A-TP W-TKN	# of Bottles: 2	Preservative: ICE And H2SO4 H2SO4 LOT# SA8085170 EXP: 03/26/19	Enter Number of Bottles Sent to Lab 1
Group: C	Bottle Type: P-125ML W-PO4-F	# of Bottles: 2	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab 1
Group: D	Bottle Type: BP-1L DTY-QN-C PKD-QN-C	# of Bottles: 2	Preservative: Lugols	Enter Number of Bottles Sent to Lab 1

Date of Request: 30-JUL-2018
 Created By: WOLFE_K On: 30-JUL-2018
 Modified By: SWANSON_C On: 09-AUG-2018
 Customer: WQAP
 Project: BLOOM-RESP
 Division: Division of Environmental Assessment and Restoration
 District: SROC
 Sampling Event: Algal Bloom Response - As needed

Send Coolers To:

Phone: 850-245-8416
 2295 Victoria AVE
 Suite 364
 Fort Myers, FL 33901
 Attn: Kirby Wolfe

Send Final Report To:

2295 Victoria AVE
 Suite 364
 Fort Myers, FL 33901
 Attn: Kirby Wolfe

Program Module Number:

Priority: 3
 Event Status: R
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 01-AUG-2018
 Biology Request Reviewed By: SWANSON_C On: 09-AUG-2018
 Sampling Kit Required: YES Ship on: 15-AUG-2018
 Sampling Kit Shipped: YES On: 14-AUG-2018
 Sampling Kit Packed By: REYNOLDS_T
 Preservatives Needed: NO
 Date to Receive Samples: 20-AUG-2018
 Received By: REYNOLDS_T On: 21-AUG-2018

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments: Analyze toxin upon receipt after consultation with Biology's Taxonomy Manager.

Bottle Groups A/B - separate event, priority 1
 Bottle Groups C/D - separate event, C - priority 3, D - priority 12

Bottle Group A - Priority 1
 For algal dominant taxon.

Bottle Group B - Priority 1
 For toxin testing.

Bottle Group C - Priority 3
 Water quality testing

Bottle Group D - Priority 12
 For algal full ID.

There are multiple bottles per Group in case multiple sample targets or sample locations are needed. Samplers use best professional judgement to decide which samples are appropriate to collect for a particular response. All sets of bottles do not have to be filled at one time.

Bottle Group A (Biological) With 2 Samples:

Bottle Type: PT-50ML Number of Bottles: 2 Preserved With: ICE
 BLOOM-ID Template: DEFAULT (SOP-AB05) Assessment of dominant algal taxa in bloom or mat sample

Bottle Group B (Water) With 2 Samples:

Bottle Type: BG-500ML-WDMTH Number of Bottles: 2 Preserved With: ICE
 W-MCYST-AA Template: DEFAULT (EPA 8321B) Microcystins in water matrices by HPLC/MS/MS

Bottle Group C (Water) With 2 Samples:

Bottle Type: BP-1L Number of Bottles: 2 Preserved With: ICE
 CHLSUITE-W Template: DEFAULT (SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry

Bottle Type: P-500ML Number of Bottles: 2 Preserved With: ICE And H2SO4
 W-NH3 Template: DEFAULT (EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
 W-NO2NO3 Template: DEFAULT (EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L

Bottle Group C (Water) With 2 Samples:

Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H2SO4
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group D (Water) With 2 Samples:

Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: Lugols
DTY-QN-C	Template: DEFAULT	(SOP-AB05_1) No. of diatom taxa of quantitative phytoplankton sample.
PKD-QN-C	Template: DEFAULT	(SOP-AB05) No. of wet taxa of quantitative phytoplankton sample.

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.

Do Not Lift Using This Tag

RT 856
10:30 B
3929
09:19
FZ

ORIGIN ID: TLHA (238) 344-5719
KIRBY WOLFE
FLDEP SOUTH DISTRICT OFFICE
2295 VICTORIA AVE.
SUITE 354
FORT MYERS, FL 33901
UNITED STATES US.

SH
ACT.
CAD:

TO JOHN WATTS
FLORIDA DEP/CHEMISTRY SECTION
2600 BLAIRSTONE RD


TALLAHASSEE FL 32399

(850) 245-8077

REF:

DEPT:

RMA: 01111111

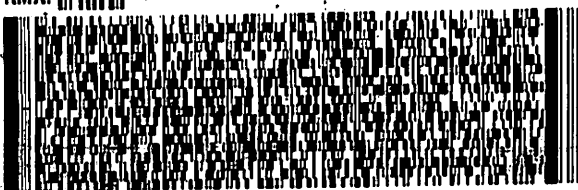

FedEx
Express



J18118042001ev

RETURNS MON - FRI

WED - 19 SEP 10:30A
PRIORITY OVERNIGHT

32399

FL-US
TLH

FedEx

TRK# 4385 5032 3929

XH TLHA



FID 643454 18SEP18 PGDA 553C1/F78C/8C8A

Cooler Packing Worksheet for Request: RQ-2018-08-20-22

Algal Bloom Response - As needed

Ship Cooler On: 8/15/2018

Customer/Project: WQAP/BLOOM-RESP

Assigned To: REYNOLDS_T

Requester: Kirby Wolfe

Priority: 3

850-245-8416
2295 Victoria AVE
Suite 364
Fort Myers, FL 33901

Attn: Kirby Wolfe

Comments:

No preservatives needed.

Analyze toxin upon receipt after consultation with Biology's Taxonomy Manager.

Bottle Groups A/B - separate event, priority 1

Bottle Groups C/D - separate event, C - priority 3, D - priority 12

Bottle Group A - Priority 1

For algal dominant taxon.

Bottle Group B - Priority 1

For toxin testing.

Bottle Group C - Priority 3

Water quality testing

Bottle Group D - Priority 12

For algal full ID.

There are multiple bottles per Group in case multiple sample targets or sample locations are needed. Samplers use best professional judgement to decide which samples are appropriate to collect for a particular response. All sets of bottles do not have to be filled at one time.

Requested Analyses:

Bottle Group: A

of Sites: 2

Container ID: PT-50ML

Qty: 2 Preservation: ICE

Lot # 0377 5003

Description: Plastic Tube 50 mL

Analysis

BLOOM-ID

Description

Assessment of dominant algal taxa in bloom or mat sample

Bottle Group: B

of Sites: 2

Container ID: BG-500ML-WDMTH Qty: 2 Preservation: ICE

Lot # 00067864

Description: Wide Mouth Amber Glass Bottle 500 ml

Analysis
W-MCYST-AA

Description
Microcystins in water matrices by HPLC/MS/MS

Bottle Group: C

of Sites: 2

Container ID: BP-1L

Qty: 2 Preservation: ICE

Lot # 1727219

Description: Brown Plastic Bottle 1L

Analysis
CHLSUITE-W

Description
Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry

Container ID: P-500ML

Qty: 2 Preservation: ICE And H2SO4

Lot # 00071230

Description: Plastic Bottle 500 mL

Affix YELLOW sulfuric acid dot to container.

Analysis
W-NH3
W-NO2NO3
W-S-A-TP
W-TKN

Description
Ammonia in aqueous matrices as mg N/L
Nitrite/Nitrate in aqueous matrices as mg N/L
Total Phosphorus in aqueous matrices as mg P/L
Total Kjeldahl Nitrogen in aqueous matrices

Container ID: P-125ML

Qty: 2 Preservation: FILTER-ICE

Lot # 00070882

Description: Plastic Bottle 125 mL

Analysis
W-PO4-F

Description
Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group: D

of Sites: 2

Container ID: BP-1L

Qty: 2 Preservation: Lugols

Lot # 1727219

Description: Brown Plastic Bottle 1L

Analysis
DTY-QN-C
PKD-QN-C

Description
No. of diatom taxa of quantitative phytoplankton sample.
No. of wet taxa of quantitative phytoplankton sample.

Cooler Packed By: Tyler R. Number of Coolers: 1 Date: 08/13/18

Kit must also include:

- ☒ Field Sheets
- ☒ Temperature Control Bottle
- ☒ FedEx Bills, if applicable
- ☒ Plastic Bags/Zip Ties
- ☒ Acid Labels (sets of 24)

If Preservation Included:

ID _____	Exp _____	Lot # _____
ID _____	Exp _____	Lot # _____
ID _____	Exp _____	Lot # _____
ID _____	Exp _____	Lot # _____
ID _____	Exp _____	Lot # _____

PLEASE RETURN ALL COOLERS FOR RQ-2018-08-20-22