


From: [Swanson, Cheryl](#)
To: [Klug, Kyle](#); [Pendleton, Christopher](#)
Subject: Ortega River bloom sample
Date: Tuesday, September 12, 2023 10:01:35
Attachments: [2023-07-24-49_NEHAB0112_09112023.pdf](#)
[image001.png](#)

I believe I have found the field sheet for the Ortega River sample but it is missing the Location. If you could log in based on the bottle's location for now and we will verify the sampler.

Cheryl

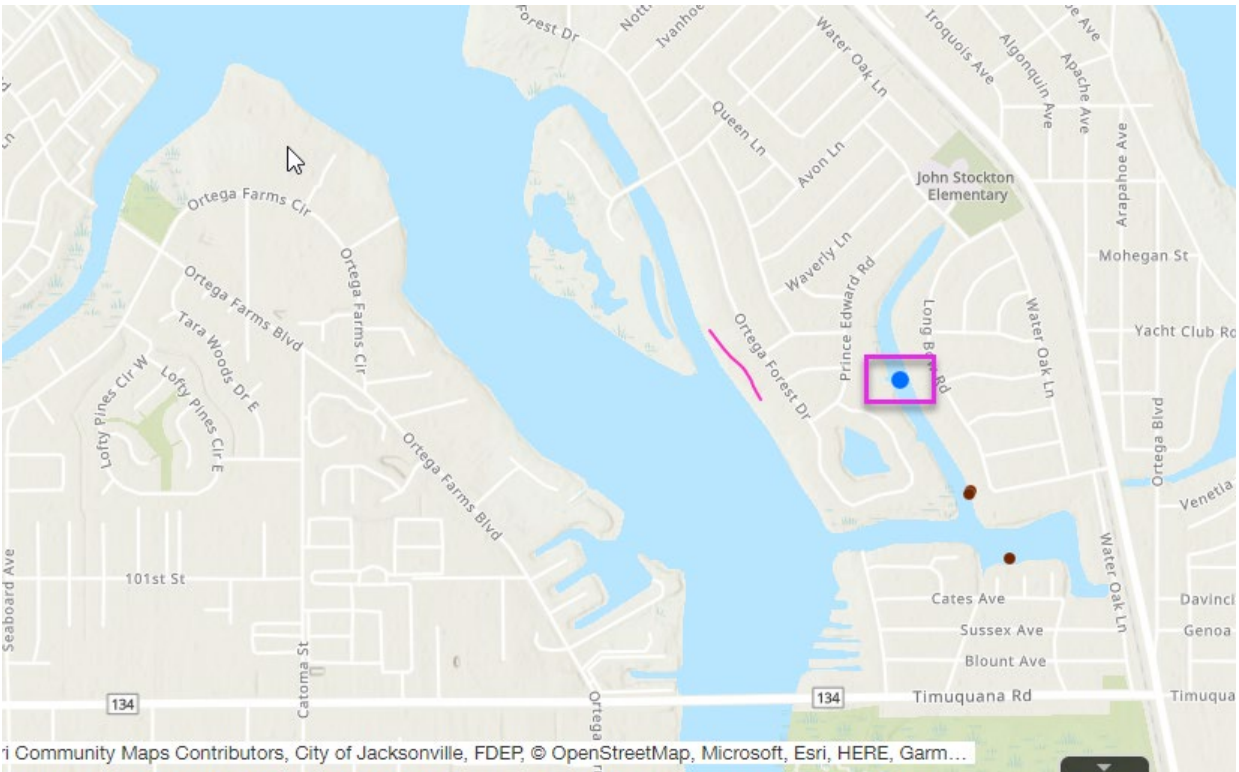

Login Checklist

RQ- 2023-07-24-74

Login Station ID: 5

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 9/12/23 @ 9:08

*Cooler Temperature	Samples Frozen?	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Waybill Tracking #
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
0.9				1		X			58947286783

COOLER CHECK

*All samples received on ice unless otherwise noted. HNO₃ and Formalin preserved samples do NOT have a temperature requirement.

- If the temperature of a cooler exceeds 6.0 oC (above 10.0 oC for W-1-4-DIOX and microbiology) or received without ice, identify affected samples in an NCR. NCR# _____
- DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C for W-1-4-DIOX) without login confirmation from customer for samples requiring ice preservation; identify affected samples in an NCR. NCR# _____
- If cooler or samples are received with a damaged Evidence Seal; identify the affected samples in an NCR. NCR# _____
- If coolers or samples are received late; identify the affected samples in an NCR. NCR# _____

Chain of Custody/ Field Sheet(s) Included?

Yes X No _____

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included?

Yes _____ No X

CONTAINER CHECK

Evidence Tape on Bottles?

Yes _____ No _____ NA X Evidence Tape intact? Yes _____ No _____

If Criminal, photographs taken?

Yes _____ No X Containers intact? Yes X No _____

Caps on tight?

Yes X No _____

Sufficient Sample Volume:

Yes X No _____

If **NO** is checked above, generate an NCR listing affected sample IDs in its appropriate category. NCR# _____

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes _____ No X Init: C.P

Chlorine detected? (One container checked per Field ID)

Yes _____ No _____ Init: _____

If chlorine is detected, generate an NCR listing affected sample IDs . NCR# _____

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH < 2.0?

Yes X No _____ NA _____ Init: C.P

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0?

Yes _____ No _____ NA X Init: C.P

If samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____

Coolers Unpacked/Checked by: C.P

Date: 9/12/23

Event contains NCRs (Y/N)? N

Event ID: NE-DIST-2023-09-12-01 (BLOOM-RESP)
Date Received: 12-SEP-2023 09:08

Login Checklist

Login Preservation Equipment

Lot # & Exp: Date

Additional Comments:

Infrared Thermometer ID:	221426058 10/17/23
pH Test Strips 0 – 6	207621 03/15/2024
pH Paper 0 – 3	NA
pH Paper 0 – 13	20762103 03/15/2024
Chlorine Test Strips	1196 02/2024



ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes_____ Init:_____

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ No _____

If no, were samples shipped on dry ice? Yes _____ No _____

If S-VOC-MS samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____



Cyanobacteria Bloom Response Field Data Sheet (2023-06-12 v1)

Email scanned submittal forms to lab.receiving@FloridaDEP.gov

RQ - 2023-07-24-49		Collected By:		Katrin Villinger, Katherine Halbert						
Customer:	NE-DIST	Field Report Prepared By:		Katherine Halbert						
Project ID:	BLOOM_RESP	Sampling Agency:		NEROC						
Location: Ortega River - 0.3 miles up morven Canal -t aken from container KK			Comments: Bacterial scum layer across surface.							
Field ID: NEHAB0112			Coordinates:	30.25541, -81.70513						
WIN Secondary Resource Type: River/Stream			Collection Equip:	WaterBottle						
WIN ID: NEHAB0112			High Tide Time:	09:04	Low Tide Time: 15:26					
Matrix:	Marine	Grab	Tide:	☐ Rising ☒ Falling ☐ Slack ☐ N/A						
Water Quality										
Date	Time ☒ EST ☐ CEN	D.O. (%)	D.O. (mg/L)	Temp (°C)	pH (SU)	Sample Depth (m)	Total Depth (m)	Secchi Disk (m)	Sp. Cond. (µmho/cm)	Salinity (PPT)
09/11/2023	14:00	55.4	4.13	29.7	7.11	0.3	1.4	1.3	8095	4.45
	12:57	38.9	2.87	29.6	6.97	0.9			9144	5.08
Bloom Observations										
Algal Bloom Observed? ☐ Yes ☒ No										
Water Clarity	☒ Clear	☐ Slightly Turbid		☐ Turbid		☐ Opaque				
Bloom Color	☐ Green	☐ Red		☐ Brown		☐ Other:				
Algae Type	☐ Planktonic	☐ Filamentous		☐ Other:						
Algae Accumulation	☐ Mat	☐ Specks		☐ Scum		☐ Glob				
Algae Distribution	☐ Surface-Entire	☐ Surf-Localized		☐ Surf-Windblown		☐ Suspended ☐ Benthic ☐ Epiphytic				
Parameter Suite	Parameter Methods			Preservation		pH Check	#Bottles Sent to Lab	Bottle Group		
Algae (PT-50mL)	☐ ALGAL-ID ☒ BLOOM-ID			☒ Ice			1	A		
Chlorophyll (BP-1L)	☒ CHLSUITE-W			☒ Ice			1	C		
Toxins (P-125/BG-250)	☒ W-MCYST-AA ☒ W-SAXTN-MS ☐ OV-TOXN			☒ Ice			1	C		
Physical/Aggregate	☒ W-COLOR			☒ Ice			1	C		
Preserved Nutrients (500mL HDPE)	☒ W-NH3 / W-NO2NO3 / W-TKN / W-S-A-TP			☒ Ice ☒ H2SO4		☒ <2	1	C		
	SA2299040			11/04/2023						
Filtered Nutrients (P125mL)	Acid Lot:			Exp:						
	☒ W-PO4-F			☒ Field Filtered 0.45um Filter		☒ Ice	1	C		
Quantitative Algae	Filter Lot # 0000175533			☒ Ice						
	☐ DTY-QN-C / PKD-QN-C			☐ Lugols						
Relinquished By:	Date/Time		Number of Coolers Shipped		Received By:		Date/Time			
Katherine Halbert	09/11/2023 16:30		1		C.P		9-12-23 / 9:08			

Date of Request: 18-JUL-2023
 Created By: VILLINGE_K On: 18-JUL-2023
 Modified By: AYRES_J On: 31-JUL-2023
 Customer: NE-DIST
 Project: BLOOM-RESP
 Division: Division of Environmental Assessment and Restoration
 District: Northeast District
 Event Description: Algae Bloom Response NERO-C as needed

Send Coolers To:

Phone: 904-807-3300
 8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256
 Attn: Katin Villinger
 Cooler Ship EMail: Katrin.villinger@floridadep.gov

Priority: 3
 Event Status: R
 Criminal Investigation: NO
 Chemistry Request Reviewed By: AYRES_J On: 18-JUL-2023
 Biology Request Reviewed By: SWANSON_C On: 21-JUL-2023
 Sampling Kit Required: YES Ship on: 01-AUG-2023
 Sampling Kit Shipped: YES On: 27-JUL-2023
 Sampling Kit Packed By: PENDLETO_C
 Preservatives Needed: NO
 Date to Receive Samples: 24-JUL-2023
 Logged In By: LEBRUN_T On: 18-AUG-2023

Send Final Report To:

8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256
 Attn: Katin Villinger
 Report Notification EMail: Katrin.Villinger@floridadep.gov

Comments:

Bottle Group A - Priority 1
 For Bloom ID dominant taxon.

Bottle Group B - Priority 1
 For toxin testing Nutrients, Chlorophyll, Toxin.

Bottle Group C - Priority 1
 For toxin testing Nutrients, Chlorophyll, Toxin w/ SAX.

Bottle Group D - Priority 1
 Field Blank for QC on Nutrients and Toxin.

Bottle Group A (Biological) With 12 Samples:

Bottle Type: PT-50ML Number of Bottles: 12 Preserved With: ICE
 BLOOM-ID Template: DEFAULT (SOP-AB18) Assessment of dominant algal taxa in bloom or mat sample

Bottle Group B (Water) With 6 Samples:

Bottle Type: BP-1L Number of Bottles: 6 Preserved With: ICE
 CHLSUITE-W Template: DEFAULT (SM 10150 B) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry

Bottle Type: P-250ML Number of Bottles: 6 Preserved With: ICE
 W-COLOR Template: DEFAULT (DEP SOP: NU-094-1) True Color measured at 450 nm (not valid for NPDES monitoring)
 Color (true)

Bottle Type: P-125ML Number of Bottles: 6 Preserved With: ICE
 W-MCYST-AA Template: DEFAULT (EPA 8321B) Microcystins in water matrices by HPLC/MS/MS

Bottle Type: P-500ML Number of Bottles: 6 Preserved With: ICE And H2SO4
 W-NH3 Template: DEFAULT (EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
 W-NO2NO3 Template: DEFAULT (EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
 W-S-A-TP Template: DEFAULT (EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
 W-TKN Template: DEFAULT (EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices

Bottle Type: P-125ML Number of Bottles: 6 Preserved With: FILTER-ICE
 W-PO4-F Template: DEFAULT (EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group C (Water) With 6 Samples:

Bottle Type: P-500ML	Number of Bottles: 6	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 6	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: BP-1L	Number of Bottles: 6	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10150 B) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML	Number of Bottles: 6	Preserved With: ICE
W-COLOR	Template: DEFAULT	(DEP SOP: NU-094-1) True Color measured at 450 nm (not valid for NPDES monitoring)
Color (true)		
Bottle Type: P-125ML	Number of Bottles: 6	Preserved With: ICE
W-MCYST-AA	Template: DEFAULT	(EPA 8321B) Microcystins in water matrices by HPLC/MS/MS
W-SAXTN-MS	Template: DEFAULT	(EPA 8321B) Saxitoxin in water matrices by HPLC/MS/MS

Bottle Group D (Water) With 1 Samples:

Bottle Type: P-250ML	Number of Bottles: 1	Preserved With: ICE
W-COLOR	Template: DEFAULT	(DEP SOP: NU-094-1) True Color measured at 450 nm (not valid for NPDES monitoring)
Color (true)		
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: ICE
W-MCYST-AA	Template: DEFAULT	(EPA 8321B) Microcystins in water matrices by HPLC/MS/MS
W-SAXTN-MS	Template: DEFAULT	(EPA 8321B) Saxitoxin in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.