

## Chemical Analysis Report

NE-DIST-2017-08-30-01

Florida Department of Environmental Protection  
Central Laboratory  
2600 Blair Stone Road  
Tallahassee, FL 32399-2400  
DOH Accreditation E31780

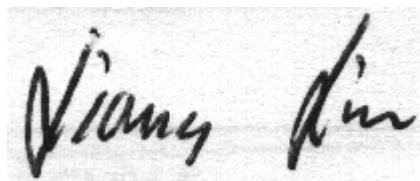
Event Description: **Gainesville 2**  
Request ID: **RQ-2017-08-28-09**  
Customer: **NE-DIST**  
Project ID: **SMP**

Send Reports to:  
FL Dept. of Environmental Protection  
8800 Baymeadows Way West  
Jacksonville, FL 32256-7577  
Attn: Jeremy Parrish

For additional information please contact  
Colin Wright, Ph.D.  
Liang-Tsair Lin, Ph.D.  
Thekkekalathil Chandrasekhar, Ph.D, QA Officer  
Phone (850) 245-8085

Certified by: Liang Lin, Environmental Administrator

Date Certified: 22-SEP-2017 10:15

A handwritten signature in black ink, appearing to read "Liang Lin", is shown on a light-colored background.

## Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical groups are included in this report: Metals, Nutrients and Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to  $1.3 \times 10^3$  or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (\*\*) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

Sample Location: Hatchett Crk @ SR 26

Collection Date/Time: 08/29/2017 09:30

Field ID: G1NE0096 08282017

Matrix: W-SURF-FRH

| Sample ID | Ref. Method                  | Component         | Result   | Code | Units      | Batch ID | QC Codes |
|-----------|------------------------------|-------------------|----------|------|------------|----------|----------|
| 1926359   | EPA 180.1 Rev. 2.0           | Turbidity         | 4.1      | A    | NTU        | P331071  |          |
|           | EPA 300.0 Rev. 2.1           | Chloride          | 5.7      |      | mg Cl/L    | P331240  |          |
|           |                              | Sulfate           | 1.4      |      | mg SO4/L   | P331236  |          |
|           | SM 2120 B                    | Color (true)      | 750      |      | PCU        | P331085  |          |
|           | SM 2320 B-97                 | Total Alkalinity  | 4.5      |      | mg CaCO3/L | P331522  |          |
|           | SM 2540 C-97                 | TDS               | 151      |      | mg/L       | P331343  |          |
|           | SM 2540 D-97                 | TSS               | 7        | I    | mg/L       | P331532  |          |
|           | SM 4500 F-C-97               | Fluoride          | 0.058    | I    | mg F/L     | P331744  |          |
| 1926360   | EPA 350.1 Rev. 2.0           | Ammonia-N         | 0.049    |      | mg N/L     | P331199  |          |
|           | EPA 351.2 Rev. 2.0           | Kjeldahl Nitrogen | 1.5      |      | mg N/L     | P331158  |          |
|           | EPA 353.2 Rev. 2.0           | NO2NO3-N          | 0.017    |      | mg N/L     | P331119  |          |
|           | EPA 365.1 Rev. 2.0           | Total-P           | 0.16     |      | mg P/L     | P331131  |          |
|           | SM 5310 B-00                 | Organic Carbon    | 51       |      | mg C/L     | P331336  |          |
| 1926361   | EPA 365.1 Rev. 2.0 dissolved | O-Phosphate-P     | 0.11     |      | mg P/L     | P331075  |          |
| 1926402   | EPA 200.7 Rev. 4.4           | Calcium           | 6.76     |      | mg/L       | P331134  |          |
|           |                              | Iron              | 1.94E+03 |      | ug/L       | P331134  |          |
|           |                              | Magnesium         | 1.88     |      | mg/L       | P331134  |          |
|           |                              | Potassium         | 0.42     | I    | mg/L       | P331134  |          |
|           |                              | Sodium            | 4.0      |      | mg/L       | P331134  |          |
|           | EPA 200.8 Rev. 5.4           | Zinc              | 5.0      | U    | ug/L       | P331134  |          |
|           |                              | Arsenic           | 1.10     |      | ug/L       | P331134  |          |
|           |                              | Cadmium           | 0.020    | U    | ug/L       | P331134  |          |
|           |                              | Chromium          | 0.96     | I    | ug/L       | P331134  |          |
|           |                              | Copper            | 0.39     | I    | ug/L       | P331134  |          |
|           |                              | Lead              | 1.17     |      | ug/L       | P331134  |          |
|           |                              | Nickel            | 0.81     |      | ug/L       | P331134  |          |
|           |                              | Silver            | 0.010    | U    | ug/L       | P331134  |          |

Ref. Method and Comment:

SM 2540 D-97: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

EPA 200.7 Rev. 4.4: Batch matrix spike recoveries for calcium are unavailable for one of two spiked samples because of high analyte concentration in the QC sample.

EPA 200.8 Rev. 5.4: The lead result was confirmed in the undigested sample on 09/16/2017.

Sample Location: Hatchett Crk @ SR 26

Collection Date/Time: 08/29/2017 09:30

Field ID: G1NE0096 08282017

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component       | Result  | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-----------------|---------|------|-------|----------|----------|
| 1926398   | EPA 8321B      | Sucralose**     | 0.016   | I    | ug/L  | P331506  | MS       |
|           | USGS O-2060-01 | 2,4-D           | 0.020   | J    | ug/L  | P331018  | SUR      |
|           |                | Diuron          | 8.0E-04 | U    | ug/L  | P331018  |          |
|           |                | Fenuron         | 0.0080  | U    | ug/L  | P331018  |          |
|           |                | Imidacloprid    | 0.0015  | I    | ug/L  | P331018  |          |
|           |                | Bentazon        | 8.0E-04 | UJ   | ug/L  | P331018  | MS, SUR  |
|           |                | Linuron         | 0.0040  | U    | ug/L  | P331018  | MS       |
|           |                | Acetaminophen** | 0.0080  | U    | ug/L  | P331018  |          |

**Field ID: G1NE0096 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component       | Result  | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-----------------|---------|------|-------|----------|----------|
| 1926398   | USGS O-2060-01 | MCP             | 0.0020  | UJ   | ug/L  | P331018  | SUR      |
|           |                | Carbamazepine** | 4.0E-04 | U    | ug/L  | P331018  |          |
|           |                | Triclopyr**     | 0.0040  | UJ   | ug/L  | P331018  | RPD      |
|           |                | Primidone**     | 0.0040  | U    | ug/L  | P331018  |          |
|           |                | Fluridone**     | 4.0E-04 | U    | ug/L  | P331018  | MS       |

Ref. Method and Comment:

USGS O-2060-01: Refer to the narrative for an explanation of QC Codes. 2,4-D-d3 surrogate spike recovery exceeding the control limits. Results confirmed in re-extraction.

USGS O-2060-01: MS accuracy for imidacloprid could not be assessed due to high concentration of parameter in the spiked sample. Results confirmed in re-extraction.

**Sample Location: Lake Forest Crk @ University Ave.**

**Collection Date/Time: 08/29/2017 09:50**

**Field ID: G1NE0098 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method                  | Component         | Result | Code | Units      | Batch ID | QC Codes |
|-----------|------------------------------|-------------------|--------|------|------------|----------|----------|
| 1926353   | EPA 180.1 Rev. 2.0           | Turbidity         | 4.7    |      | NTU        | P331070  |          |
|           | EPA 300.0 Rev. 2.1           | Chloride          | 15     | A    | mg Cl/L    | P331240  |          |
|           |                              | Sulfate           | 9.4    | A    | mg SO4/L   | P331236  |          |
|           | SM 2120 B                    | Color (true)      | 300    |      | PCU        | P331085  |          |
|           | SM 2320 B-97                 | Total Alkalinity  | 56     |      | mg CaCO3/L | P331522  |          |
|           | SM 2540 C-97                 | TDS               | 164    |      | mg/L       | P331343  |          |
|           | SM 2540 D-97                 | TSS               | 5      | I    | mg/L       | P331532  |          |
|           | SM 4500 F-C-97               | Fluoride          | 0.12   |      | mg F/L     | P331744  |          |
| 1926355   | EPA 350.1 Rev. 2.0           | Ammonia-N         | 0.070  |      | mg N/L     | P331170  |          |
|           | EPA 351.2 Rev. 2.0           | Kjeldahl Nitrogen | 0.93   |      | mg N/L     | P331158  |          |
|           | EPA 353.2 Rev. 2.0           | NO2NO3-N          | 0.17   |      | mg N/L     | P331119  |          |
|           | EPA 365.1 Rev. 2.0           | Total-P           | 0.13   |      | mg P/L     | P331131  |          |
|           | SM 5310 B-00                 | Organic Carbon    | 28     |      | mg C/L     | P331336  |          |
| 1926357   | EPA 365.1 Rev. 2.0 dissolved | O-Phosphate-P     | 0.093  |      | mg P/L     | P331075  |          |

Ref. Method and Comment:

SM 2540 D-97: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

**Sample Location: Lake Forest Crk @ University Ave.**

**Collection Date/Time: 08/29/2017 09:50**

**Field ID: G1NE0098 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component       | Result  | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-----------------|---------|------|-------|----------|----------|
| 1926399   | EPA 8321B      | Sucralose**     | 0.14    |      | ug/L  | P331112  |          |
|           | USGS O-2060-01 | 2,4-D           | 0.0020  | U    | ug/L  | P331089  |          |
|           |                | Diuron          | 8.0E-04 | U    | ug/L  | P331089  |          |
|           |                | Fenuron         | 0.0080  | U    | ug/L  | P331089  |          |
|           |                | Imidacloprid    | 0.0054  |      | ug/L  | P331089  |          |
|           |                | Bentazon        | 8.0E-04 | U    | ug/L  | P331089  | MS       |
|           |                | Linuron         | 0.0040  | U    | ug/L  | P331089  |          |
|           |                | Acetaminophen** | 0.0080  | U    | ug/L  | P331089  | MS       |
|           |                | MCP             | 0.0020  | U    | ug/L  | P331089  |          |
|           |                | Carbamazepine** | 6.7E-04 | I    | ug/L  | P331089  |          |
|           |                | Triclopyr**     | 0.0040  | U    | ug/L  | P331089  |          |

**Field ID: G1NE0098 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component   | Result  | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-------------|---------|------|-------|----------|----------|
| 1926399   | USGS O-2060-01 | Primidone** | 0.0069  | I    | ug/L  | P331089  |          |
|           |                | Fluridone** | 4.0E-04 | U    | ug/L  | P331089  |          |

Ref. Method and Comment:

EPA 8321B: MS accuracy for sucralose could not be assessed due to high concentration of parameter in the spiked sample.

USGS O-2060-01: MS accuracy for imidacloprid could not be assessed due to high concentration of parameter in the spiked sample.

**Sample Location: Sweetwater Creek above wetland**

**Collection Date/Time: 08/29/2017 10:45**

**Field ID: G1NE0001 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component       | Result | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-----------------|--------|------|-------|----------|----------|
| 1926400   | EPA 8321B      | Sucralose**     | 17     |      | ug/L  | P331112  |          |
|           | USGS O-2060-01 | 2,4-D           | 0.0057 | I    | ug/L  | P331089  |          |
|           |                | Diuron          | 0.0060 |      | ug/L  | P331089  |          |
|           |                | Fenuron         | 0.0080 | U    | ug/L  | P331089  |          |
|           |                | Imidacloprid    | 0.14   |      | ug/L  | P331089  |          |
|           |                | Bentazon        | 0.0036 | J    | ug/L  | P331089  | MS       |
|           |                | Linuron         | 0.0040 | U    | ug/L  | P331089  |          |
|           |                | Acetaminophen** | 0.0080 | UJ   | ug/L  | P331089  | MS, SUR  |
|           |                | MCP             | 0.0020 | U    | ug/L  | P331089  |          |
|           |                | Carbamazepine** | 0.14   |      | ug/L  | P331089  |          |
|           |                | Triclopyr**     | 0.0040 | U    | ug/L  | P331089  |          |
|           |                | Primidone**     | 0.067  |      | ug/L  | P331089  |          |
|           |                | Fluridone**     | 0.0018 |      | ug/L  | P331089  |          |

Ref. Method and Comment:

EPA 8321B: MS accuracy for sucralose could not be assessed due to high concentration of parameter in the spiked sample.

USGS O-2060-01: Refer to the narrative for an explanation of QC Codes.

USGS O-2060-01: Refer to the narrative for an explanation of QC Codes. MS accuracy for imidacloprid could not be assessed due to high concentration of parameter in the spiked sample. Acetaminophen-d4 surrogate spike recovery exceeding the control limits. Results confirmed.

**Sample Location: Bivens Arm Outlet @ SR 331**

**Collection Date/Time: 08/29/2017 11:05**

**Field ID: G1NE0208 08282017**

Matrix: W-SURF-FRH

| Sample ID | Ref. Method                  | Component         | Result | Code | Units      | Batch ID | QC Codes |
|-----------|------------------------------|-------------------|--------|------|------------|----------|----------|
| 1926354   | EPA 180.1 Rev. 2.0           | Turbidity         | 1.6    |      | NTU        | P331071  |          |
|           | EPA 300.0 Rev. 2.1           | Chloride          | 7.5    |      | mg Cl/L    | P331240  |          |
|           |                              | Sulfate           | 4.9    |      | mg SO4/L   | P331236  |          |
|           | SM 2120 B                    | Color (true)      | 58     |      | PCU        | P331085  |          |
|           | SM 2320 B-97                 | Total Alkalinity  | 95     |      | mg CaCO3/L | P331522  |          |
|           | SM 2540 C-97                 | TDS               | 142    | A    | mg/L       | P331343  |          |
|           | SM 2540 D-97                 | TSS               | 2      | IA   | mg/L       | P331532  |          |
|           | SM 4500 F-C-97               | Fluoride          | 0.16   |      | mg F/L     | P331744  |          |
| 1926356   | EPA 350.1 Rev. 2.0           | Ammonia-N         | 1.7    |      | mg N/L     | P331199  |          |
|           | EPA 351.2 Rev. 2.0           | Kjeldahl Nitrogen | 2.3    |      | mg N/L     | P331158  |          |
|           | EPA 353.2 Rev. 2.0           | NO2NO3-N          | 0.004  | U    | mg N/L     | P331119  |          |
|           | EPA 365.1 Rev. 2.0           | Total-P           | 0.27   |      | mg P/L     | P331131  |          |
|           | SM 5310 B-00                 | Organic Carbon    | 11     |      | mg C/L     | P331336  |          |
| 1926358   | EPA 365.1 Rev. 2.0 dissolved | O-Phosphate-P     | 0.22   |      | mg P/L     | P331075  |          |

Field ID: G1NE0208 08282017

Matrix: W-SURF-FRH

| Sample ID | Ref. Method | Component | Result | Code | Units | Batch ID | QC Codes |
|-----------|-------------|-----------|--------|------|-------|----------|----------|
|-----------|-------------|-----------|--------|------|-------|----------|----------|

Ref. Method and Comment:

SM 2540 D-97: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

Sample Location: Sweetwater Creek above wetland

Collection Date/Time: 08/29/2017 10:50

Field ID: G1NE0001 08282017 DUPLICATE

Matrix: W-SURF-FRH

| Sample ID | Ref. Method    | Component       | Result | Code | Units | Batch ID | QC Codes |
|-----------|----------------|-----------------|--------|------|-------|----------|----------|
| 1926401   | EPA 8321B      | Sucralose**     | 17     |      | ug/L  | P331112  |          |
|           | USGS O-2060-01 | 2,4-D           | 0.0050 | I    | ug/L  | P331089  |          |
|           |                | Diuron          | 0.0060 |      | ug/L  | P331089  |          |
|           |                | Fenuron         | 0.0080 | U    | ug/L  | P331089  |          |
|           |                | Imidacloprid    | 0.14   |      | ug/L  | P331089  |          |
|           |                | Bentazon        | 0.0033 |      | ug/L  | P331089  | MS       |
|           |                | Linuron         | 0.0040 | U    | ug/L  | P331089  |          |
|           |                | Acetaminophen** | 0.0080 | UJ   | ug/L  | P331089  | MS, SUR  |
|           |                | MCP             | 0.0020 | U    | ug/L  | P331089  |          |
|           |                | Carbamazepine** | 0.13   |      | ug/L  | P331089  |          |
|           |                | Triclopyr**     | 0.0040 | U    | ug/L  | P331089  |          |
|           |                | Primidone**     | 0.070  |      | ug/L  | P331089  |          |
|           |                | Fluridone**     | 0.0017 |      | ug/L  | P331089  |          |

Ref. Method and Comment:

EPA 8321B: MS accuracy for sucralose could not be assessed due to high concentration of parameter in the spiked sample.

USGS O-2060-01: Refer to the narrative for an explanation of QC Codes. MS accuracy for imidacloprid could not be assessed due to high concentration of parameter in the spiked sample. Acetaminophen-d4 surrogate spike recovery exceeding the control limits. Results confirmed.

## Quality Assurance Report

### Method Blank Results

Reference Method: EPA 180.1 Rev. 2.0

Batch ID: P331070

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Turbidity | 0.10   | U    | NTU   |

Reference Method: EPA 180.1 Rev. 2.0

Batch ID: P331071

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Turbidity | 0.10   | U    | NTU   |

Reference Method: EPA 200.7 Rev. 4.4

Batch ID: P331134

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Calcium   | 0.075  | U    | mg/L  |
| Iron      | 30     | U    | ug/L  |
| Magnesium | 0.040  | U    | mg/L  |
| Potassium | 0.30   | U    | mg/L  |
| Sodium    | 0.50   | U    | mg/L  |
| Zinc      | 5.0    | U    | ug/L  |

## Quality Assurance Report Method Blank Results

Reference Method: EPA 200.8 Rev. 5.4  
Batch ID: P331134

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Arsenic   | 0.050  | U    | ug/L  |
| Cadmium   | 0.020  | U    | ug/L  |
| Chromium  | 0.40   | U    | ug/L  |
| Copper    | 0.20   | U    | ug/L  |
| Lead      | 0.050  | U    | ug/L  |
| Nickel    | 0.20   | U    | ug/L  |
| Silver    | 0.010  | U    | ug/L  |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331236

| Component | Result | Code | Units    |
|-----------|--------|------|----------|
| Sulfate   | 0.20   | U    | mg SO4/L |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331240

| Component | Result | Code | Units   |
|-----------|--------|------|---------|
| Chloride  | 0.20   | U    | mg Cl/L |

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331170

| Component | Result | Code | Units  |
|-----------|--------|------|--------|
| Ammonia-N | 0.002  | U    | mg N/L |

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331199

| Component | Result | Code | Units  |
|-----------|--------|------|--------|
| Ammonia-N | 0.002  | U    | mg N/L |

Reference Method: EPA 351.2 Rev. 2.0  
Batch ID: P331158

| Component         | Result | Code | Units  |
|-------------------|--------|------|--------|
| Kjeldahl Nitrogen | 0.080  | U    | mg N/L |

Reference Method: EPA 353.2 Rev. 2.0  
Batch ID: P331119

| Component | Result | Code | Units  |
|-----------|--------|------|--------|
| NO2NO3-N  | 0.004  | U    | mg N/L |

Reference Method: EPA 365.1 Rev. 2.0  
Batch ID: P331131

| Component | Result | Code | Units  |
|-----------|--------|------|--------|
| Total-P   | 0.002  | U    | mg P/L |

## Quality Assurance Report Method Blank Results

Reference Method: EPA 365.1 Rev. 2.0 dissolved  
Batch ID: P331075

| Component     | Result | Code | Units  |
|---------------|--------|------|--------|
| O-Phosphate-P | 0.004  | U    | mg P/L |

Reference Method: EPA 8321B  
Batch ID: P331112

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Sucralose | 0.010  | U    | ug/L  |

Reference Method: EPA 8321B  
Batch ID: P331506

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Sucralose | 0.010  | U    | ug/L  |

Reference Method: SM 2120 B  
Batch ID: P331085

| Component    | Result | Code | Units |
|--------------|--------|------|-------|
| Color (true) | 2.5    | U    | PCU   |

Reference Method: SM 2320 B-97  
Batch ID: P331522

| Component        | Result | Code | Units      |
|------------------|--------|------|------------|
| Total Alkalinity | 0.65   | U    | mg CaCO3/L |

Reference Method: SM 2540 C-97  
Batch ID: P331343

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| TDS       | 15     | U    | mg/L  |

Reference Method: SM 2540 D-97  
Batch ID: P331532

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| TSS       | 2      | U    | mg/L  |

Reference Method: SM 4500 F-C-97  
Batch ID: P331744

| Component | Result | Code | Units  |
|-----------|--------|------|--------|
| Fluoride  | 0.035  | U    | mg F/L |

Reference Method: SM 5310 B-00  
Batch ID: P331336

| Component      | Result | Code | Units  |
|----------------|--------|------|--------|
| Organic Carbon | 0.50   | U    | mg C/L |



## Quality Assurance Report Method Blank Results

Reference Method: USGS O-2060-01  
Batch ID: P331018

| Component     | Result  | Code | Units |
|---------------|---------|------|-------|
| 2,4-D         | 0.0020  | U    | ug/L  |
| Acetaminophen | 0.0080  | U    | ug/L  |
| Bentazon      | 8.0E-04 | U    | ug/L  |
| Carbamazepine | 4.0E-04 | U    | ug/L  |
| Diuron        | 8.0E-04 | U    | ug/L  |
| Fenuron       | 0.0080  | U    | ug/L  |
| Fluridone     | 4.0E-04 | U    | ug/L  |
| Imidacloprid  | 8.0E-04 | U    | ug/L  |
| Linuron       | 0.0040  | U    | ug/L  |
| MCP           | 0.0020  | U    | ug/L  |
| Primidone     | 0.0040  | U    | ug/L  |
| Triclopyr     | 0.0040  | U    | ug/L  |

Reference Method: USGS O-2060-01  
Batch ID: P331089

| Component     | Result  | Code | Units |
|---------------|---------|------|-------|
| 2,4-D         | 0.0020  | U    | ug/L  |
| Acetaminophen | 0.0080  | U    | ug/L  |
| Bentazon      | 8.0E-04 | U    | ug/L  |
| Carbamazepine | 4.0E-04 | U    | ug/L  |
| Diuron        | 8.0E-04 | U    | ug/L  |
| Fenuron       | 0.0080  | U    | ug/L  |
| Fluridone     | 4.0E-04 | U    | ug/L  |
| Imidacloprid  | 8.0E-04 | U    | ug/L  |
| Linuron       | 0.0040  | U    | ug/L  |
| MCP           | 0.0020  | U    | ug/L  |
| Primidone     | 0.0040  | U    | ug/L  |
| Triclopyr     | 0.0040  | U    | ug/L  |

## Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 200.7 Rev. 4.4  
Batch ID: P331134

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Calcium   | 104     |         | P         | 85 - 115       |
| Iron      | 107     |         | P         | 85 - 115       |
| Magnesium | 103     |         | P         | 85 - 115       |
| Potassium | 96.1    |         | P         | 85 - 115       |
| Sodium    | 101     |         | P         | 85 - 115       |
| Zinc      | 105     |         | P         | 85 - 115       |

Reference Method: EPA 200.8 Rev. 5.4  
Batch ID: P331134

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Arsenic   | 105     |         | P         | 85 - 115       |
| Cadmium   | 101     |         | P         | 85 - 115       |
| Chromium  | 97.9    |         | P         | 85 - 115       |

## Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 200.8 Rev. 5.4  
Batch ID: P331134

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Copper    | 100     |         | P         | 85 - 115       |
| Lead      | 99.7    |         | P         | 85 - 115       |
| Nickel    | 102     |         | P         | 85 - 115       |
| Silver    | 103     |         | P         | 85 - 115       |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331236

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Sulfate   | 101     |         | P         | 90 - 110       |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331240

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Chloride  | 98.3    |         | P         | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331170

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Ammonia-N | 103     |         | P         | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331199

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Ammonia-N | 102     |         | P         | 90 - 110       |

Reference Method: EPA 351.2 Rev. 2.0  
Batch ID: P331158

| Component         | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-------------------|---------|---------|-----------|----------------|
| Kjeldahl Nitrogen | 101     |         | P         | 90 - 110       |

Reference Method: EPA 353.2 Rev. 2.0  
Batch ID: P331119

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| NO2NO3-N  | 102     |         | P         | 90 - 110       |

Reference Method: EPA 365.1 Rev. 2.0  
Batch ID: P331131

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Total-P   | 99.0    |         | P         | 90 - 110       |

Reference Method: EPA 365.1 Rev. 2.0 dissolved  
Batch ID: P331075

| Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------|---------|-----------|----------------|
| O-Phosphate-P | 98.4    |         | P         | 90 - 110       |

## Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 8321B  
Batch ID: P331112

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Sucralose | 115     |         | P         | 40 - 150       |

Reference Method: EPA 8321B  
Batch ID: P331506

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Sucralose | 92.2    |         | P         | 40 - 150       |

Reference Method: SM 2320 B-97  
Batch ID: P331522

| Component        | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|------------------|---------|---------|-----------|----------------|
| Total Alkalinity | 103     |         | P         | 95 - 108       |

Reference Method: SM 4500 F-C-97  
Batch ID: P331744

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Fluoride  | 98.3    |         | P         | 92 - 103       |

Reference Method: SM 5310 B-00  
Batch ID: P331336

| Component      | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|----------------|---------|---------|-----------|----------------|
| Organic Carbon | 98.9    |         | P         | 85 - 115       |

Reference Method: USGS O-2060-01  
Batch ID: P331018

| Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------|---------|-----------|----------------|
| 2,4-D         | 95.6    |         | P         | 40 - 150       |
| Acetaminophen | 120     |         | P         | 30 - 150       |
| Bentazon      | 43.3    |         | P         | 40 - 150       |
| Carbamazepine | 117     |         | P         | 40 - 150       |
| Diuron        | 93.7    |         | P         | 40 - 150       |
| Fenuron       | 95.3    |         | P         | 40 - 150       |
| Fluridone     | 85.0    |         | P         | 40 - 150       |
| Imidacloprid  | 96.8    |         | P         | 40 - 160       |
| Linuron       | 79.2    |         | P         | 40 - 150       |
| MCP           | 111     |         | P         | 40 - 150       |
| Primidone     | 105     |         | P         | 40 - 150       |
| Triclopyr     | 106     |         | P         | 40 - 150       |

Reference Method: USGS O-2060-01  
Batch ID: P331089

| Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------|---------|-----------|----------------|
| 2,4-D         | 63.3    |         | P         | 40 - 150       |
| Acetaminophen | 128     |         | P         | 30 - 150       |
| Bentazon      | 40.6    |         | P         | 40 - 150       |
| Carbamazepine | 126     |         | P         | 40 - 150       |
| Diuron        | 103     |         | P         | 40 - 150       |

## Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: USGS O-2060-01  
Batch ID: P331089

| Component    | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|--------------|---------|---------|-----------|----------------|
| Fenuron      | 110     |         | P         | 40 - 150       |
| Fluridone    | 109     |         | P         | 40 - 150       |
| Imidacloprid | 88.6    |         | P         | 40 - 160       |
| Linuron      | 108     |         | P         | 40 - 150       |
| MCPP         | 64.5    |         | P         | 40 - 150       |
| Primidone    | 102     |         | P         | 40 - 150       |
| Triclopyr    | 64.1    |         | P         | 40 - 150       |

## Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 200.7 Rev. 4.4  
Batch ID: P331134

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1923909       | Iron      | 108     |         | P         | 80 - 120       |
| 1923909       | Magnesium | 104     |         | P         | 80 - 120       |
| 1923909       | Potassium | 98.7    |         | P         | 80 - 120       |
| 1923909       | Sodium    | 97.6    |         | P         | 80 - 120       |
| 1923909       | Zinc      | 106     |         | P         | 80 - 120       |
| 1926383       | Calcium   | 104     |         | P         | 80 - 120       |
| 1926383       | Iron      | 110     | 109     | P/P       | 80 - 120       |
| 1926383       | Magnesium | 105     |         | P         | 80 - 120       |
| 1926383       | Potassium | 98.7    | 96.5    | P/P       | 80 - 120       |
| 1926383       | Sodium    | 102     | 101     | P/P       | 80 - 120       |
| 1926383       | Zinc      | 105     | 103     | P/P       | 80 - 120       |

Reference Method: EPA 200.8 Rev. 5.4  
Batch ID: P331134

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1923909       | Arsenic   | 110     |         | P         | 80 - 120       |
| 1923909       | Cadmium   | 102     |         | P         | 80 - 120       |
| 1923909       | Chromium  | 92.7    |         | P         | 80 - 120       |
| 1923909       | Copper    | 97.5    |         | P         | 80 - 120       |
| 1923909       | Lead      | 103     |         | P         | 80 - 120       |
| 1923909       | Nickel    | 99.5    |         | P         | 80 - 120       |
| 1923909       | Silver    | 101     |         | P         | 80 - 120       |
| 1926383       | Arsenic   | 104     | 104     | P/P       | 80 - 120       |
| 1926383       | Cadmium   | 102     | 103     | P/P       | 80 - 120       |
| 1926383       | Chromium  | 97.1    | 98.0    | P/P       | 80 - 120       |
| 1926383       | Copper    | 95.4    | 94.9    | P/P       | 80 - 120       |
| 1926383       | Lead      | 100     | 100     | P/P       | 80 - 120       |
| 1926383       | Nickel    | 96.7    | 96.2    | P/P       | 80 - 120       |
| 1926383       | Silver    | 102     | 103     | P/P       | 80 - 120       |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331236

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926289       | Sulfate   | 92.7    |         | P         | 90 - 110       |

## Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 300.0 Rev. 2.1  
 Batch ID: P331236

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926353       | Sulfate   | 92.8    |         | P         | 90 - 110       |

Reference Method: EPA 300.0 Rev. 2.1  
 Batch ID: P331240

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926289       | Chloride  | 95.9    |         | P         | 90 - 110       |
| 1926353       | Chloride  | 94.2    |         | P         | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0  
 Batch ID: P331170

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926296       | Ammonia-N | 99.3    | 100     | P/P       | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0  
 Batch ID: P331199

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926451       | Ammonia-N | 97.6    | 97.8    | P/P       | 90 - 110       |

Reference Method: EPA 351.2 Rev. 2.0  
 Batch ID: P331158

| Spiked Sample | Component         | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-------------------|---------|---------|-----------|----------------|
| 1926299       | Kjeldahl Nitrogen | 106     | 98.9    | P/P       | 90 - 110       |

Reference Method: EPA 353.2 Rev. 2.0  
 Batch ID: P331119

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926355       | NO2NO3-N  | 100     | 102     | P/P       | 90 - 110       |

Reference Method: EPA 365.1 Rev. 2.0  
 Batch ID: P331131

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926367       | Total-P   | 101     | 101     | P/P       | 90 - 110       |

Reference Method: EPA 365.1 Rev. 2.0 dissolved  
 Batch ID: P331075

| Spiked Sample | Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------------|---------|---------|-----------|----------------|
| 1926302       | O-Phosphate-P | 98.0    | 99.7    | P/P       | 90 - 110       |

Reference Method: EPA 8321B  
 Batch ID: P331506

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1928742       | Sucralose | 38.7    | 64.2    | F/P       | 40 - 150       |

## Quality Assurance Report Matrix Spike Accuracy

Reference Method: SM 4500 F-C-97  
 Batch ID: P331744

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 1926521       | Fluoride  | 97.3    | 97.9    | P/P       | 91 - 105       |

Reference Method: SM 5310 B-00  
 Batch ID: P331336

| Spiked Sample | Component      | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|----------------|---------|---------|-----------|----------------|
| 1926239       | Organic Carbon | 103     | 102     | P/P       | 85 - 115       |

Reference Method: USGS O-2060-01  
 Batch ID: P331018

| Spiked Sample | Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------------|---------|---------|-----------|----------------|
| 1925991       | 2,4-D         | 96.6    | 88.7    | P/P       | 40 - 150       |
| 1925991       | Acetaminophen | 91.2    | 86.8    | P/P       | 30 - 150       |
| 1925991       | Bentazon      | 20.2    | 17.9    | F/F       | 40 - 150       |
| 1925991       | Carbamazepine | 90.4    | 84.6    | P/P       | 40 - 150       |
| 1925991       | Diuron        | 44.2    | 42.0    | P/P       | 40 - 150       |
| 1925991       | Fenuron       | 65.1    | 68.6    | P/P       | 40 - 150       |
| 1925991       | Fluridone     | 17.9    | 13.2    | F/F       | 40 - 150       |
| 1925991       | Linuron       | 37.9    | 35.7    | F/F       | 40 - 150       |
| 1925991       | MCP           | 101     | 80.8    | P/P       | 40 - 150       |
| 1925991       | Primidone     | 91.2    | 91.6    | P/P       | 40 - 150       |
| 1925991       | Triclopyr     | 84.8    | 61.1    | P/P       | 40 - 150       |

Reference Method: USGS O-2060-01  
 Batch ID: P331089

| Spiked Sample | Component     | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|---------------|---------|---------|-----------|----------------|
| 1926400       | 2,4-D         | 63.5    | 63.5    | P/P       | 40 - 150       |
| 1926400       | Acetaminophen | 22.5    | 22.0    | F/F       | 30 - 150       |
| 1926400       | Bentazon      | 26.3    | 24.4    | F/F       | 40 - 150       |
| 1926400       | Carbamazepine | 94.8    | 91.4    | P/P       | 40 - 150       |
| 1926400       | Diuron        | 81.0    | 78.9    | P/P       | 40 - 150       |
| 1926400       | Fenuron       | 101     | 98.9    | P/P       | 40 - 150       |
| 1926400       | Fluridone     | 110     | 104     | P/P       | 40 - 150       |
| 1926400       | Linuron       | 116     | 105     | P/P       | 40 - 150       |
| 1926400       | MCP           | 64.7    | 58.2    | P/P       | 40 - 150       |
| 1926400       | Primidone     | 148     | 129     | P/P       | 40 - 150       |
| 1926400       | Triclopyr     | 62.1    | 57.4    | P/P       | 40 - 150       |

## Quality Assurance Report Precision

Reference Method: EPA 180.1 Rev. 2.0  
 Batch ID: P331070

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926237                  | Turbidity | 0.866     | Sample            | P         | 0 - 20         |

## Quality Assurance Report Precision

Reference Method: EPA 180.1 Rev. 2.0  
Batch ID: P331071

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926359                  | Turbidity | 1.94      | Sample            | P         | 0 - 20         |

Reference Method: EPA 200.7 Rev. 4.4  
Batch ID: P331134

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926383                  | Calcium   | 1.39      | Spike             | P         | 0 - 20         |
| 1926383                  | Iron      | 0.653     | Spike             | P         | 0 - 20         |
| 1926383                  | Magnesium | 0.466     | Spike             | P         | 0 - 20         |
| 1926383                  | Potassium | 1.92      | Spike             | P         | 0 - 20         |
| 1926383                  | Sodium    | 0.788     | Spike             | P         | 0 - 20         |
| 1926383                  | Zinc      | 1.38      | Spike             | P         | 0 - 20         |

Reference Method: EPA 200.8 Rev. 5.4  
Batch ID: P331134

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926383                  | Arsenic   | 0.291     | Spike             | P         | 0 - 20         |
| 1926383                  | Cadmium   | 1.14      | Spike             | P         | 0 - 20         |
| 1926383                  | Chromium  | 0.956     | Spike             | P         | 0 - 20         |
| 1926383                  | Copper    | 0.534     | Spike             | P         | 0 - 20         |
| 1926383                  | Lead      | 0.0946    | Spike             | P         | 0 - 20         |
| 1926383                  | Nickel    | 0.441     | Spike             | P         | 0 - 20         |
| 1926383                  | Silver    | 0.787     | Spike             | P         | 0 - 20         |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331236

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926353                  | Sulfate   | 0.356     | Sample            | P         | 0 - 20         |

Reference Method: EPA 300.0 Rev. 2.1  
Batch ID: P331240

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926353                  | Chloride  | 4.10      | Sample            | P         | 0 - 20         |

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331170

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926296                  | Ammonia-N | 0.700     | Spike             | P         | 0 - 20         |

## Quality Assurance Report Precision

Reference Method: EPA 350.1 Rev. 2.0  
Batch ID: P331199

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926451                  | Ammonia-N | 0.150     | Spike             | P         | 0 - 20         |

Reference Method: EPA 351.2 Rev. 2.0  
Batch ID: P331158

| Replicated<br>Lab Sample | Component         | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-------------------|-----------|-------------------|-----------|----------------|
| 1926299                  | Kjeldahl Nitrogen | 6.26      | Spike             | P         | 0 - 20         |

Reference Method: EPA 353.2 Rev. 2.0  
Batch ID: P331119

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926355                  | NO2NO3-N  | 0.538     | Spike             | P         | 0 - 20         |

Reference Method: EPA 365.1 Rev. 2.0  
Batch ID: P331131

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926367                  | Total-P   | 0.507     | Spike             | P         | 0 - 20         |

Reference Method: EPA 365.1 Rev. 2.0 dissolved  
Batch ID: P331075

| Replicated<br>Lab Sample | Component     | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|---------------|-----------|-------------------|-----------|----------------|
| 1926302                  | O-Phosphate-P | 1.72      | Spike             | P         | 0 - 20         |

Reference Method: EPA 8321B  
Batch ID: P331112

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926399                  | Sucralose | 2.37      | Spike             | P         | 0 - 30         |

Reference Method: EPA 8321B  
Batch ID: P331506

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1928742                  | Sucralose | 22.0      | Spike             | P         | 0 - 30         |

Reference Method: SM 2120 B  
Batch ID: P331085

| Replicated<br>Lab Sample | Component    | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|--------------|-----------|-------------------|-----------|----------------|
| 1926292                  | Color (true) | 3.57      | Sample            | P         | 0 - 20         |



## Quality Assurance Report Precision

Reference Method: SM 2320 B-97  
 Batch ID: P331522

| Replicated<br>Lab Sample | Component        | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|------------------|-----------|-------------------|-----------|----------------|
| 1926521                  | Total Alkalinity | 0.463     | Sample            | P         | 0 - 4.8        |

Reference Method: SM 2540 C-97  
 Batch ID: P331343

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926354                  | TDS       | 2.12      | Sample            | P         | 0 - 10         |

Reference Method: SM 4500 F-C-97  
 Batch ID: P331744

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 1926521                  | Fluoride  | 0.480     | Spike             | P         | 0 - 3.0        |

Reference Method: SM 5310 B-00  
 Batch ID: P331336

| Replicated<br>Lab Sample | Component      | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|----------------|-----------|-------------------|-----------|----------------|
| 1926239                  | Organic Carbon | 0.889     | Spike             | P         | 0 - 20         |

Reference Method: USGS O-2060-01  
 Batch ID: P331018

| Replicated<br>Lab Sample | Component     | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|---------------|-----------|-------------------|-----------|----------------|
| 1925991                  | 2,4-D         | 8.27      | Spike             | P         | 0 - 30         |
| 1925991                  | Acetaminophen | 4.43      | Spike             | P         | 0 - 30         |
| 1925991                  | Bentazon      | 11.5      | Spike             | P         | 0 - 30         |
| 1925991                  | Carbamazepine | 6.60      | Spike             | P         | 0 - 30         |
| 1925991                  | Diuron        | 2.85      | Spike             | P         | 0 - 30         |
| 1925991                  | Fenuron       | 5.31      | Spike             | P         | 0 - 30         |
| 1925991                  | Fluridone     | 29.7      | Spike             | P         | 0 - 30         |
| 1925991                  | Imidacloprid  | 4.74      | Spike             | P         | 0 - 30         |
| 1925991                  | Linuron       | 5.90      | Spike             | P         | 0 - 30         |
| 1925991                  | MCPP          | 22.3      | Spike             | P         | 0 - 30         |
| 1925991                  | Primidone     | 0.525     | Spike             | P         | 0 - 30         |
| 1925991                  | Triclopyr     | 32.4      | Spike             | F         | 0 - 30         |

Reference Method: USGS O-2060-01  
 Batch ID: P331089

| Replicated<br>Lab Sample | Component     | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|---------------|-----------|-------------------|-----------|----------------|
| 1926400                  | 2,4-D         | 0.0257    | Spike             | P         | 0 - 30         |
| 1926400                  | Acetaminophen | 2.07      | Spike             | P         | 0 - 30         |
| 1926400                  | Bentazon      | 5.58      | Spike             | P         | 0 - 30         |
| 1926400                  | Carbamazepine | 0.789     | Spike             | P         | 0 - 30         |
| 1926400                  | Diuron        | 2.19      | Spike             | P         | 0 - 30         |

## Quality Assurance Report Precision

Reference Method: USGS O-2060-01  
Batch ID: P331089

| Replicated<br>Lab Sample | Component    | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|--------------|-----------|-------------------|-----------|----------------|
| 1926400                  | Fenuron      | 2.28      | Spike             | P         | 0 - 30         |
| 1926400                  | Fluridone    | 5.76      | Spike             | P         | 0 - 30         |
| 1926400                  | Imidacloprid | 0.890     | Spike             | P         | 0 - 30         |
| 1926400                  | Linuron      | 9.29      | Spike             | P         | 0 - 30         |
| 1926400                  | MCP          | 10.4      | Spike             | P         | 0 - 30         |
| 1926400                  | Primidone    | 5.94      | Spike             | P         | 0 - 30         |
| 1926400                  | Triclopyr    | 7.90      | Spike             | P         | 0 - 30         |

\* Sample, spike and/or laboratory control sample precision (LCS) is reported.  
Replicate spike precision may be reported when sample results are below quantifiable levels.

## Quality Assurance Report Surrogates

Lab Sample ID: 1926398  
Field Sample ID: G1NE0096 08282017

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | Acetaminophen-d4  | 159    | P         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 131    | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 80.0   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 107    | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 60.0   | P         | 40 - 160       |
| USGS O-2060-01   | 2,4-D-d3          | 168    | F         | 40 - 160       |
| USGS O-2060-01   | Acetaminophen-d4  | 159    | P         | 30 - 160       |
| USGS O-2060-01   | Carbamazepine-d10 | 131    | P         | 30 - 160       |
| USGS O-2060-01   | Diuron-d6         | 80.0   | P         | 30 - 160       |
| USGS O-2060-01   | Primidone-d5      | 107    | P         | 30 - 160       |
| USGS O-2060-01   | Sucralose-d6      | 60.0   | P         | 40 - 160       |

Lab Sample ID: 1926399  
Field Sample ID: G1NE0098 08282017

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | Acetaminophen-d4  | 94.3   | P         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 77.0   | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 63.8   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 104    | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 64.7   | P         | 40 - 160       |
| USGS O-2060-01   | 2,4-D-d3          | 71.4   | P         | 40 - 160       |
| USGS O-2060-01   | Acetaminophen-d4  | 94.3   | P         | 30 - 160       |
| USGS O-2060-01   | Carbamazepine-d10 | 77.0   | P         | 30 - 160       |
| USGS O-2060-01   | Diuron-d6         | 63.8   | P         | 30 - 160       |
| USGS O-2060-01   | Primidone-d5      | 104    | P         | 30 - 160       |
| USGS O-2060-01   | Sucralose-d6      | 64.7   | P         | 40 - 160       |

Lab Sample ID: 1926400  
Field Sample ID: G1NE0001 08282017

| Reference Method | Surrogate | % Rec. | Pass/Fail | Control Limits |
|------------------|-----------|--------|-----------|----------------|
|------------------|-----------|--------|-----------|----------------|

## Quality Assurance Report Surrogates

Lab Sample ID: 1926400  
Field Sample ID: G1NE0001 08282017

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | Acetaminophen-d4  | 21.8   | F         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 98.5   | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 77.4   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 115    | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 87.3   | P         | 40 - 160       |
| USGS O-2060-01   | 2,4-D-d3          | 65.8   | P         | 40 - 160       |
| USGS O-2060-01   | Acetaminophen-d4  | 21.8   | F         | 30 - 160       |
| USGS O-2060-01   | Carbamazepine-d10 | 98.5   | P         | 30 - 160       |
| USGS O-2060-01   | Diuron-d6         | 77.4   | P         | 30 - 160       |
| USGS O-2060-01   | Primidone-d5      | 115    | P         | 30 - 160       |
| USGS O-2060-01   | Sucralose-d6      | 87.3   | P         | 40 - 160       |

Lab Sample ID: 1926401  
Field Sample ID: G1NE0001 08282017 DUPLICATE

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | Acetaminophen-d4  | 20.7   | F         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 97.3   | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 74.3   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 108    | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 86.1   | P         | 40 - 160       |
| USGS O-2060-01   | 2,4-D-d3          | 59.7   | P         | 40 - 160       |
| USGS O-2060-01   | Acetaminophen-d4  | 20.7   | F         | 30 - 160       |
| USGS O-2060-01   | Carbamazepine-d10 | 97.3   | P         | 30 - 160       |
| USGS O-2060-01   | Diuron-d6         | 74.3   | P         | 30 - 160       |
| USGS O-2060-01   | Primidone-d5      | 108    | P         | 30 - 160       |
| USGS O-2060-01   | Sucralose-d6      | 86.1   | P         | 40 - 160       |

## Quality Assurance Report Calibration Verification

Reference Method: EPA 180.1 Rev. 2.0  
Run ID: A78711  
Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Turbidity | 100     | 100     | P/P        | 95 - 105       |

Reference Method: EPA 365.1 Rev. 2.0 dissolved  
Run ID: A78712  
Included Lab Sample IDs: 1926357, 1926358, 1926361

| Component     | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|---------------|---------|---------|------------|----------------|
| O-Phosphate-P | 102     | 102     | P/P        | 90 - 110       |
| O-Phosphate-P | 102     | 102     | P/P        | 90 - 110       |

Reference Method: SM 2120 B  
Run ID: A78715  
Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
|-----------|---------|---------|------------|----------------|

## Quality Assurance Report Calibration Verification

Reference Method: SM 2120 B

Run ID: A78715

Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component    | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|--------------|---------|---------|------------|----------------|
| Color (true) | 101     | 101     | P/P        | 85 - 115       |
| Color (true) | 102     | 101     | P/P        | 85 - 115       |

Reference Method: EPA 353.2 Rev. 2.0

Run ID: A78723

Included Lab Sample IDs: 1926355, 1926356, 1926360

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| NO2NO3-N  | 101     | 100     | P/P        | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0

Run ID: A78741

Included Lab Sample IDs: 1926355

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Ammonia-N | 101     | 101     | P/P        | 90 - 110       |

Reference Method: EPA 365.1 Rev. 2.0

Run ID: A78751

Included Lab Sample IDs: 1926355, 1926356, 1926360

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Total-P   | 103     | 102     | P/P        | 90 - 110       |

Reference Method: EPA 350.1 Rev. 2.0

Run ID: A78752

Included Lab Sample IDs: 1926356, 1926360

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Ammonia-N | 99.6    | 98.6    | P/P        | 90 - 110       |

Reference Method: EPA 300.0 Rev. 2.1

Run ID: A78767

Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Chloride  | 108     | 101     | P/P        | 90 - 110       |
| Chloride  | 109     | 108     | P/P        | 90 - 110       |
| Sulfate   | 100     | 100     | P/P        | 90 - 110       |
| Sulfate   | 100     | 100     | P/P        | 90 - 110       |

Reference Method: EPA 351.2 Rev. 2.0

Run ID: A78778

Included Lab Sample IDs: 1926355, 1926356, 1926360

| Component         | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-------------------|---------|---------|------------|----------------|
| Kjeldahl Nitrogen | 99.6    | 101     | P/P        | 90 - 110       |

## Quality Assurance Report Calibration Verification

Reference Method: EPA 200.7 Rev. 4.4

Run ID: A78788

Included Lab Sample IDs: 1926402

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Calcium   | 103     | 103     | P/P        | 90 - 110       |
| Iron      | 105     | 104     | P/P        | 90 - 110       |
| Magnesium | 104     | 103     | P/P        | 90 - 110       |
| Potassium | 96.7    | 96.9    | P/P        | 90 - 110       |
| Sodium    | 99.4    | 99.2    | P/P        | 90 - 110       |
| Zinc      | 106     | 108     | P/P        | 90 - 110       |

Reference Method: EPA 8321B

Run ID: A78802

Included Lab Sample IDs: 1926399, 1926400, 1926401

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Sucralose | 119     | 134     | P/P        | 60 - 150       |

Reference Method: USGS O-2060-01

Run ID: A78805

Included Lab Sample IDs: 1926398

| Component     | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|---------------|---------|---------|------------|----------------|
| 2,4-D         | 123     | 119     | P/P        | 50 - 150       |
| Acetaminophen | 112     | 125     | P/P        | 60 - 150       |
| Bentazon      | 69.1    | 74.5    | P/P        | 50 - 150       |
| Carbamazepine | 129     | 136     | P/P        | 60 - 150       |
| Diuron        | 118     | 119     | P/P        | 60 - 150       |
| Fenuron       | 91.8    | 108     | P/P        | 60 - 150       |
| Fluridone     | 106     | 109     | P/P        | 60 - 160       |
| Imidacloprid  | 114     | 110     | P/P        | 60 - 150       |
| Linuron       | 98.7    | 102     | P/P        | 60 - 150       |
| MCPP          | 135     | 124     | P/P        | 50 - 150       |
| Primidone     | 106     | 115     | P/P        | 60 - 150       |
| Triclopyr     | 127     | 123     | P/P        | 50 - 160       |

Reference Method: SM 5310 B-00

Run ID: A78811

Included Lab Sample IDs: 1926355, 1926356, 1926360

| Component      | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|----------------|---------|---------|------------|----------------|
| Organic Carbon | 98.2    | 101     | P/P        | 90 - 110       |

Reference Method: EPA 200.8 Rev. 5.4

Run ID: A78818

Included Lab Sample IDs: 1926402

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Arsenic   | 101     | 102     | P/P        | 90 - 110       |
| Cadmium   | 102     | 103     | P/P        | 90 - 110       |
| Chromium  | 99.8    | 99.5    | P/P        | 90 - 110       |
| Copper    | 100     | 101     | P/P        | 90 - 110       |
| Lead      | 102     | 102     | P/P        | 90 - 110       |
| Nickel    | 99.3    | 100     | P/P        | 90 - 110       |

## Quality Assurance Report Calibration Verification

Reference Method: SM 2320 B-97

Run ID: A78870

Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component        | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|------------------|---------|---------|------------|----------------|
| Total Alkalinity | 104     | 101     | P/P        | 90 - 110       |

Reference Method: USGS O-2060-01

Run ID: A78880

Included Lab Sample IDs: 1926399, 1926400, 1926401

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| 2,4-D     | 105     | 94.7    | P/P        | 50 - 150       |
| 2,4-D     | 94.7    | 90.8    | P/P        | 50 - 150       |
| Bentazon  | 106     | 105     | P/P        | 50 - 150       |
| Bentazon  | 108     | 106     | P/P        | 50 - 150       |
| MCP       | 103     | 105     | P/P        | 50 - 150       |
| MCP       | 110     | 103     | P/P        | 50 - 150       |
| Triclopyr | 104     | 99.6    | P/P        | 50 - 150       |
| Triclopyr | 118     | 104     | P/P        | 50 - 150       |

Reference Method: USGS O-2060-01

Run ID: A78884

Included Lab Sample IDs: 1926399, 1926400, 1926401

| Component     | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|---------------|---------|---------|------------|----------------|
| Acetaminophen | 114     | 114     | P/P        | 60 - 150       |
| Acetaminophen | 114     | 114     | P/P        | 60 - 150       |
| Carbamazepine | 114     | 117     | P/P        | 60 - 150       |
| Carbamazepine | 117     | 119     | P/P        | 60 - 150       |
| Diuron        | 105     | 109     | P/P        | 60 - 150       |
| Diuron        | 109     | 110     | P/P        | 60 - 150       |
| Fenuron       | 114     | 114     | P/P        | 60 - 150       |
| Fenuron       | 114     | 116     | P/P        | 60 - 150       |
| Fluridone     | 113     | 114     | P/P        | 60 - 160       |
| Fluridone     | 113     | 113     | P/P        | 60 - 160       |
| Imidacloprid  | 91.1    | 103     | P/P        | 60 - 150       |
| Imidacloprid  | 94.1    | 91.1    | P/P        | 60 - 150       |
| Linuron       | 120     | 120     | P/P        | 60 - 150       |
| Linuron       | 120     | 124     | P/P        | 60 - 150       |
| Primidone     | 106     | 120     | P/P        | 60 - 150       |
| Primidone     | 120     | 111     | P/P        | 60 - 150       |

Reference Method: EPA 200.8 Rev. 5.4

Run ID: A78913

Included Lab Sample IDs: 1926402

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Silver    | 94.7    | 95.7    | P/P        | 90 - 110       |

Reference Method: EPA 8321B

Run ID: A78939

Included Lab Sample IDs: 1926398

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Sucralose | 110     | 102     | P/P        | 60 - 150       |

## Quality Assurance Report Calibration Verification

Reference Method: SM 4500 F-C-97

Run ID: A78959

Included Lab Sample IDs: 1926353, 1926354, 1926359

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Fluoride  | 101     | 100     | P/P        | 90 - 110       |

\* Pass/Fail determinations are made for each bracketing calibration verification check.

Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.

Where they are different, both control limits are provided.

## Quality Assurance Report Summary

| Ref. Method                  | Analyte           | LCS % Recovery | MS % Recovery |      |      | LCS | Precision<br>SMP | MS     |
|------------------------------|-------------------|----------------|---------------|------|------|-----|------------------|--------|
| EPA 180.1 Rev. 2.0           | Turbidity         |                |               |      |      |     | 0.866            |        |
|                              | Turbidity         |                |               |      |      |     | 1.94             |        |
| EPA 200.7 Rev. 4.4           | Calcium           | 104            | 104           |      |      |     |                  | 1.39   |
|                              | Iron              | 107            | 108           | 110  | 109  |     |                  | 0.653  |
|                              | Magnesium         | 103            | 104           | 105  |      |     |                  | 0.466  |
|                              | Potassium         | 96.1           | 98.7          | 98.7 | 96.5 |     |                  | 1.92   |
|                              | Sodium            | 101            | 97.6          | 102  | 101  |     |                  | 0.788  |
|                              | Zinc              | 105            | 106           | 105  | 103  |     |                  | 1.38   |
| EPA 200.8 Rev. 5.4           | Arsenic           | 105            | 110           | 104  | 104  |     |                  | 0.291  |
|                              | Cadmium           | 101            | 102           | 102  | 103  |     |                  | 1.14   |
|                              | Chromium          | 97.9           | 92.7          | 97.1 | 98.0 |     |                  | 0.956  |
|                              | Copper            | 100            | 97.5          | 95.4 | 94.9 |     |                  | 0.534  |
|                              | Lead              | 99.7           | 103           | 100  | 100  |     |                  | 0.0946 |
|                              | Nickel            | 102            | 99.5          | 96.7 | 96.2 |     |                  | 0.441  |
|                              | Silver            | 103            | 101           | 102  | 103  |     |                  | 0.787  |
| EPA 300.0 Rev. 2.1           | Chloride          | 98.3           | 94.2          | 95.9 |      |     | 4.10             |        |
|                              | Sulfate           | 101            | 92.8          | 92.7 |      |     | 0.356            |        |
| EPA 350.1 Rev. 2.0           | Ammonia-N         | 103            | 99.3          | 100  |      |     |                  | 0.700  |
|                              | Ammonia-N         | 102            | 97.6          | 97.8 |      |     |                  | 0.150  |
| EPA 351.2 Rev. 2.0           | Kjeldahl Nitrogen | 101            | 106           | 98.9 |      |     |                  | 6.26   |
| EPA 353.2 Rev. 2.0           | NO2NO3-N          | 102            | 100           | 102  |      |     |                  | 0.538  |
| EPA 365.1 Rev. 2.0           | Total-P           | 99.0           | 101           | 101  |      |     |                  | 0.507  |
| EPA 365.1 Rev. 2.0 dissolved | O-Phosphate-P     | 98.4           | 98.0          | 99.7 |      |     |                  | 1.72   |
| EPA 8321B                    | Sucralose         | 115            |               |      |      |     |                  | 2.37   |
|                              | Sucralose         | 92.2           | 38.7          | 64.2 |      |     |                  | 22.0   |
| SM 2120 B                    | Color (true)      |                |               |      |      |     | 3.57             |        |
| SM 2320 B-97                 | Total Alkalinity  | 103            |               |      |      |     | 0.463            |        |
| SM 2540 C-97                 | TDS               |                |               |      |      |     | 2.12             |        |
| SM 4500 F-C-97               | Fluoride          | 98.3           | 97.3          | 97.9 |      |     |                  | 0.480  |
| SM 5310 B-00                 | Organic Carbon    | 98.9           | 103           | 102  |      |     |                  | 0.889  |
| USGS O-2060-01               | 2,4-D             | 95.6           | 96.6          | 88.7 |      |     |                  | 8.27   |
|                              | 2,4-D             | 63.3           | 63.5          | 63.5 |      |     |                  | 0.0257 |
|                              | Acetaminophen     | 120            | 91.2          | 86.8 |      |     |                  | 4.43   |
|                              | Acetaminophen     | 128            | 22.5          | 22.0 |      |     |                  | 2.07   |
|                              | Bentazon          | 43.3           | 20.2          | 17.9 |      |     |                  | 11.5   |
|                              | Bentazon          | 40.6           | 26.3          | 24.4 |      |     |                  | 5.58   |
|                              | Carbamazepine     | 117            | 90.4          | 84.6 |      |     |                  | 6.60   |
|                              | Carbamazepine     | 126            | 94.8          | 91.4 |      |     |                  | 0.789  |
|                              | Diuron            | 93.7           | 44.2          | 42.0 |      |     |                  | 2.85   |

## Quality Assurance Report Summary

| Ref. Method    | Analyte      | LCS % Recovery | MS % Recovery |      | Precision |       |
|----------------|--------------|----------------|---------------|------|-----------|-------|
|                |              |                |               |      | LCS       | MS    |
| USGS O-2060-01 | Diuron       | 103            | 81.0          | 78.9 |           | 2.19  |
|                | Fenuron      | 95.3           | 65.1          | 68.6 |           | 5.31  |
|                | Fenuron      | 110            | 101           | 98.9 |           | 2.28  |
|                | Fluridone    | 85.0           | 17.9          | 13.2 |           | 29.7  |
|                | Fluridone    | 109            | 110           | 104  |           | 5.76  |
|                | Imidacloprid | 96.8           |               |      |           | 4.74  |
|                | Imidacloprid | 88.6           |               |      |           | 0.890 |
|                | Linuron      | 79.2           | 37.9          | 35.7 |           | 5.90  |
|                | Linuron      | 108            | 116           | 105  |           | 9.29  |
|                | MCPP         | 111            | 101           | 80.8 |           | 22.3  |
|                | MCPP         | 64.5           | 64.7          | 58.2 |           | 10.4  |
|                | Primidone    | 105            | 91.2          | 91.6 |           | 0.525 |
|                | Primidone    | 102            | 148           | 129  |           | 5.94  |
|                | Triclopyr    | 106            | 84.8          | 61.1 |           | 32.4  |
|                | Triclopyr    | 64.1           | 62.1          | 57.4 |           | 7.90  |

## Reference Method Descriptions

| Method / DoH Cert #                   | Description                                                                                                               | Associated Samples                 |
|---------------------------------------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------|
| EPA 180.1 Rev. 2.0 / E31780           | Turbidity in aqueous matrices                                                                                             | 1926353, 1926354, 1926359          |
| EPA 200.7 Rev. 4.4 / E31780           | Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects | 1926402                            |
| EPA 200.8 Rev. 5.4 / E31780           | Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects                    | 1926402                            |
| EPA 300.0 Rev. 2.1 / E31780           | Chloride in aqueous matrices                                                                                              | 1926353, 1926354, 1926359          |
| EPA 300.0 Rev. 2.1 / E31780           | Sulfate in aqueous matrices                                                                                               | 1926353, 1926354, 1926359          |
| EPA 350.1 Rev. 2.0 / E31780           | Ammonia in aqueous matrices as mg N/L                                                                                     | 1926355, 1926356, 1926360          |
| EPA 351.2 Rev. 2.0 / E31780           | Total Kjeldahl Nitrogen in aqueous matrices                                                                               | 1926355, 1926356, 1926360          |
| EPA 353.2 Rev. 2.0 / E31780           | Nitrite/Nitrate in aqueous matrices as mg N/L                                                                             | 1926355, 1926356, 1926360          |
| EPA 365.1 Rev. 2.0 / E31780           | Total Phosphorus in aqueous matrices as mg P/L                                                                            | 1926355, 1926356, 1926360          |
| EPA 365.1 Rev. 2.0 dissolved / E31780 | Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L                                                       | 1926357, 1926358, 1926361          |
| EPA 8321B / E31780                    | Analysis of sucralose in water matrices by HPLC/MS/MS                                                                     | 1926398, 1926399, 1926400, 1926401 |
| SM 2120 B / E31780                    | True Color measured at 450 nm                                                                                             | 1926353, 1926354, 1926359          |
| SM 2320 B-97 / E31780                 | Alkalinity in aqueous matrices as mg CaCO <sub>3</sub> /L                                                                 | 1926353, 1926354, 1926359          |
| SM 2540 C-97 / E31780                 | Total Dissolved Solids in aqueous matrices                                                                                | 1926353, 1926354, 1926359          |
| SM 2540 D-97 / E31780                 | Total Suspended Solids in aqueous matrices                                                                                | 1926353, 1926354, 1926359          |
| SM 4500 F-C-97 / E31780               | Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)                                       | 1926353, 1926354, 1926359          |
| SM 5310 B-00 / E31780                 | Nonpurgeable Organic Carbon in aqueous matrices                                                                           | 1926355, 1926356, 1926360          |
| USGS O-2060-01 / E31780               | Chlorinated (phenoxy acid) herbicides in water matrices by HPLC/MS/MS                                                     | 1926398, 1926399, 1926400, 1926401 |
| USGS O-2060-01 / E31780               | Urea herbicides and other chemicals in water matrices by HPLC/MS/MS                                                       | 1926398, 1926399, 1926400, 1926401 |



## Preparation and Analysis Log

| Ref. Method                  | Received Date | Prep Date/Time | Prepared By          | Analysis Date/Time | Analyzed By          | Associated Samples        |
|------------------------------|---------------|----------------|----------------------|--------------------|----------------------|---------------------------|
| EPA 180.1 Rev. 2.0           | 08/30/2017    |                |                      | 08/30/2017 15:25   | DeAsia Armster       | 1926353, 1926354, 1926359 |
| EPA 200.7 Rev. 4.4           | 08/30/2017    | 08/31/2017     | Elliott D. Healy     | 09/05/2017         | Betina Topolski      | 1926402                   |
| EPA 200.8 Rev. 5.4           | 08/30/2017    | 08/31/2017     | Elliott D. Healy     | 09/06/2017         | Nadine Brooks        | 1926402                   |
|                              | 08/30/2017    | 08/31/2017     | Elliott D. Healy     | 09/13/2017         | Nadine Brooks        | 1926402                   |
| EPA 300.0 Rev. 2.1           | 08/30/2017    |                |                      | 09/01/2017         | Julia Storbeck       | 1926353, 1926354, 1926359 |
|                              | 08/30/2017    |                |                      | 09/02/2017         | Julia Storbeck       | 1926353, 1926354, 1926359 |
| EPA 350.1 Rev. 2.0           | 08/30/2017    |                |                      | 08/31/2017         | Sofia Elnemr         | 1926355                   |
|                              | 08/30/2017    |                |                      | 09/01/2017         | Sofia Elnemr         | 1926356, 1926360          |
| EPA 351.2 Rev. 2.0           | 08/30/2017    | 09/01/2017     | Adrian Shelby        | 09/05/2017         | Joseph Suarez        | 1926355, 1926356, 1926360 |
| EPA 353.2 Rev. 2.0           | 08/30/2017    |                |                      | 08/31/2017         | Beverly Y. Sanders   | 1926355, 1926356, 1926360 |
| EPA 365.1 Rev. 2.0           | 08/30/2017    | 08/31/2017     | Sima Feizi           | 09/01/2017         | Lipi Saha            | 1926355, 1926356, 1926360 |
| EPA 365.1 Rev. 2.0 dissolved | 08/30/2017    |                |                      | 08/30/2017 14:24   | Megan Treadwell      | 1926361                   |
|                              | 08/30/2017    |                |                      | 08/30/2017 14:40   | Megan Treadwell      | 1926357                   |
|                              | 08/30/2017    |                |                      | 08/30/2017 14:41   | Megan Treadwell      | 1926358                   |
| EPA 8321B                    | 08/30/2017    | 09/01/2017     | Julie Michelle Frank | 09/05/2017         | Julie Michelle Frank | 1926399, 1926400, 1926401 |
|                              | 08/30/2017    | 09/13/2017     | Hoor Shaik           | 09/14/2017         | Julie Michelle Frank | 1926398                   |
| SM 2120 B                    | 08/30/2017    |                |                      | 08/30/2017 16:27   | Tanya Welborn        | 1926354                   |
|                              | 08/30/2017    |                |                      | 08/30/2017 16:56   | Tanya Welborn        | 1926353                   |
|                              | 08/30/2017    |                |                      | 08/30/2017 16:57   | Tanya Welborn        | 1926359                   |
| SM 2320 B-97                 | 08/30/2017    |                |                      | 09/07/2017         | Dale L. Simmons      | 1926353, 1926354, 1926359 |
| SM 2540 C-97                 | 08/30/2017    |                |                      | 09/01/2017         | Yijie Li             | 1926353, 1926354, 1926359 |
| SM 2540 D-97                 | 08/30/2017    |                |                      | 09/01/2017         | Yijie Li             | 1926353, 1926354, 1926359 |
| SM 4500 F-C-97               | 08/30/2017    |                |                      | 09/16/2017         | Dale L. Simmons      | 1926353, 1926354, 1926359 |
| SM 5310 B-00                 | 08/30/2017    |                |                      | 09/05/2017         | Ping Hua             | 1926355, 1926356, 1926360 |
| USGS O-2060-01               | 08/30/2017    | 08/31/2017     | Hoor Shaik           | 09/03/2017         | Juyoung Kim          | 1926398                   |
|                              | 08/30/2017    | 09/01/2017     | Hoor Shaik           | 09/02/2017         | Julie Michelle Frank | 1926399, 1926400          |
|                              | 08/30/2017    | 09/01/2017     | Hoor Shaik           | 09/03/2017         | Julie Michelle Frank | 1926401                   |