

RQ- 2018-03-26-08

Log-in Checklist

Login Station ID: #3Shipping Method: FedEx | UPS | HD | Greyhound | _____Date/Time of Receipt: 4-4-18/9:50

Cooler ID	Cooler Temperature*	No. Sample Containers in Cooler	Evidence Tape		*Intact?		Tracking # (fill out only if waybill copy is damaged)
			Present?		Yes	No	
Red	2.6C	10					
Red	3.1C	10					
Red	1.4C	9					

*If the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX), or if Evidence Seal is damaged, identify the containers in the affected cooler(s) on back of this form.

**Note: If "No" is checked in any of the fields below, fill out the back of this form with additional details (Field ID, Test IDs, etc.) and generate an NCR.

**Chain of Custody/ Field Sheet(s) Included? Yes ✓ No

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes ✓ No Date 4-4-18

CONTAINER CHECK

**Evidence Tape on Bottles? Yes No ✓ If yes, is it intact? Yes No

**Caps on tight? Yes ✓ No **Containers intact? Yes ✓ No

**Sufficient Sample Volume: Yes ✓ No

CHLORINE CHECK (Blue dot on container)

Check the Box marked "Yes" or "No" for the Presence of Chlorine. If Cl detected, an NCR is required.					
Analysis	Yes	No	Analysis	Yes	No
W-1,4 DIOX			W-PC-AA-SF		
W-E8321-DI, -MS, -21		<u>—</u>	W-NP-AA-SF		
W-BNA (-625, -R)			W-PDQUAT		
W-CARB-AA (-CAB-AA-R)		<u>—</u>	W-PCL-SQ-R		
W-U2060-MS			W-TR-TQ		
W-PCB-R			W-CT-CI-R		<u>—</u>
W-PAH (-R)			W-PSNP-TQ		<u>—</u>

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ✓ No NA Init: ABS

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes No NA ✓ Init: ABS

Coolers Unpacked/Checked by: ABS Date: 04/04/2018 NCRs (Y/N)? —

Event ID: Santa Fe NCR #

NE-DIST-2018-04-04-01 (SMP)

Date Received: 04-APR-2018 09:50

Log-in Checklist

Samples with Incorrect pH Preservation or presence of Chlorine

Field ID	Bottle Test ID(s)	pH / Cl	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_03_2018
pH Paper 0.0 – 3.0 Lot #	230515 EXP:10/30/2018
pH Paper 0 – 13 Lot #	222516 EXP:09/15/2019
Chlorine Test Strips Lot #	091417V EXP:09/2021

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No _____

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Santa Fe

Central Laboratory Submittal Form

last revised Jan 25, 2018

Customer: NE-DIST

Requester: Jeremy M. Parrish

Field Report Prepared By:

Project ID: SMP

Collected By: J. Parrish, P.O'Connor

Sampling Agency:

DEAR NE D ROC

Loc	WIN / Field ID:		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 04-03-18 Time 0955	Eastern Central	Composite end Date _____ Time _____	Bottle Group(s) (See pg 2)
Field	21030051FLA		Matrix (type, e.g., Salt, Fresh, etc) Surface Water Fresh		Diss. Oxygen 1.0	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L) _____
WIN	GRASSY HOLE SPRING ICHETUCKNEE		Temp (C) 21.9	pH 7.3	Sample Depth 0.1	☐ ft ☒ m	Sp. Conductance (umho/cm) 355
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.17	Comments DO% +1.5% to 11.5%		
Location	WIN / Field ID:		☐ Comp ☒ Grab	Collection (comp begin or grab) Date _____ Time _____	Eastern Central	Composite end Date _____ Time _____	Bottle Group(s)
Field ID	21030071		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L) _____
WIN/STO	OLUSTEE CREEK AT SR-18		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments NO SAMPLE COLLECTED		
Location	Field ID:		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 04-03-18 Time 1220	Eastern Central	Composite end Date _____ Time _____	Bottle Group(s)
Field ID	BLANK 04032018		Matrix (type, e.g., Salt, Fresh, etc) De-IONIZED WATER		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L) _____
WIN/STO	Field Blank Location: NE ROC DI		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments		
Location	OLustee Creek @ CR 238		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 04-03-18 Time 1150	Eastern Central	Composite end Date _____ Time _____	Bottle Group(s)
Field ID	2102 0009		Matrix (type, e.g., Salt, Fresh, etc) Surface Water Fresh		Diss. Oxygen 6.48	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L) _____
WIN/STORET #	2102 0009		Temp (C) 19.4	pH 7.3	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 79
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.04	Comments DO% 70.3		

Relinquished By:	Date/Time	Shipping Method	Number of Coolers Shipped:	Received By:	Date/Time
P.O'Connor	04-03-18 1530	Fed Ex	3	ASB	4-4-18 1450

Group: A	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS						
Group: A	Bottle Type:	BP-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	CHLSUITE-W						
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1 to AEL Gainesville</u>
	NE-ALS-ECQ						
Group: A	Bottle Type:	BG-500ML	# of Bottles: 1	Preservative:	CH2CICOOH Pre-Preserved	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-CARB-AA						
Group: A	Bottle Type:	BG-500ML	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>4</u>
	W-CT-CI-R W-PCL-SQ-R						
Group: A	Bottle Type:	BG-500ML	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-E8321-DI W-E8321-MS						
Group: A	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	HNO3	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-ICP W-ICPMS						
Group: A	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC						
Group: A	Bottle Type:	P-125ML	# of Bottles: 1	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-PO4-F						

Not submitted for Blank

Group: C	Bottle Type: CHLSUITE-W	BP-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	0
✓ Group: C	Bottle Type: W-CARB-AA	BG-500ML	# of Bottles: 1	Preservative: CH ₂ CICOOH Pre-Preserved	Enter Number of Bottles Sent to Lab	1
✓ Group: C	Bottle Type: W-CT-CI-R W-PCL-SQ-R	BG-500ML	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab	2
✓ Group: C	Bottle Type: W-E8321-DI W-E8321-MS	BG-500ML	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	1
Group: C	Bottle Type: W-ICP W-ICPMS	P-500ML	# of Bottles: 1	Preservative: HNO ₃	Enter Number of Bottles Sent to Lab	1
Group: C	Bottle Type: W-NH ₃ W-NO ₂ NO ₃ W-S-A-TP W-TKN W-TOC	P-500ML	# of Bottles: 1	Preservative: ICE And H ₂ SO ₄	Enter Number of Bottles Sent to Lab	1
Group: C	Bottle Type: W-PO ₄ -F	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab	1
✓ Group: C	Bottle Type: W-PSNP-TQ	BG-1L	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab	2

Group: A	Bottle Type: BG-1L	# of Bottles: 4	Preservative: ICE	Enter Number of Bottles Sent to Lab	4
W-PSNP-TQ					
Group: B	Bottle Type: P-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	1
ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS					
Group: B	Bottle Type: BP-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	1
CHLSUITE-W					
Group: B	Bottle Type: P-250ML-WI-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	1 to AEL Gainesville
NE-ALS-ECQ					
Group: B	Bottle Type: P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab	1
W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC					
Group: B	Bottle Type: P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab	1
W-PO4-F					
Group: C	Bottle Type: P-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	1
ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS					
Group: C	Bottle Type: BP-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	0



Tampa: 9810 Princess Palm Ave. • Tampa, FL 33619 • 813.630.9818 • Fax 813.630.4327

[illegible]

Date of Request: 09-FEB-2018
 Created By: PARRISH_J On: 09-FEB-2018
 Modified By: WATTS_J On: 04-APR-2018
 Customer: NE-DIST
 Project: SMP
 Division: Division of Environmental Assessment and Restoration
 District: Northeast District
 Sampling Event: Santa Fe

Send Coolers To:

Phone: 904-256-1700
 8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Send Final Report To:

8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Program Module Number:

Priority: 3
 Event Status: R
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 03-APR-2018
 Biology Request Reviewed By: WATTS_J On: 04-APR-2018
 Sampling Kit Required: NO Ship on:
 Sampling Kit Shipped: YES On: 15-MAR-2018
 Sampling Kit Packed By: REAVES_S
 Preservatives Needed: NO
 Date to Receive Samples: 26-MAR-2018
 Received By: SHAIK_A On: 04-APR-2018

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments: Group A: Freshwater Kit With Metals and Pesticides
 Cloned Group A to C to make Field Blank
 Added ALS Ecoli Jax to A

**Changed overflow ALS lab to Gainesville Lab in bottle group A and B per Jeremy's request from the field, CAS- 04/03/2018.

Bottle Group A (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BG-1L	Number of Bottles: 4	Preserved With: ICE
W-PSNP-TQ	Template: DEFAULT	(EPA 8270D) Organonitrogen and phosphorus pesticides (ultra trace level) in water matrices by GC/MS/MS
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type:	Number of Bottles: 1	Preserved With: ICE
NED-AEG-EC	Template: DEFAULT	(EPA 1603) Escherichia coli by membrane filter method using modified mTEC by Advanced Environmental Gainesville Overflow Laboratories for NED
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: CH2CICOOH Pre-Preserved
W-CARB-AA	Template: DEFAULT	(EPA 8321B) Carbamates in water matrices by HPLC/MS/MS
Bottle Type: BG-500ML	Number of Bottles: 4	Preserved With: ICE
W-CT-CI-R	Template: DEFAULT	(EPA 8276) Organochlorine pesticides in water matrices by GC/MS with Negative Chemical Ionization

Bottle Group A (Water) With 1 Samples:

Bottle Type: BG-500ML	Number of Bottles: 4	Preserved With: ICE
W-PCL-SQ-R	Template: DEFAULT	(EPA 8270D) Organochlorine pesticides in water matrices by GC/MS-SIM
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: ICE
W-E8321-DI	Template: ROC-ALL	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: ADD-PYRACL	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Calcium		
Chromium		
Iron		
Magnesium		
Nickel		
Potassium		
Sodium		
Zinc		
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects
Arsenic		
Cadmium		
Copper		
Lead		
Silver		
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type:	Number of Bottles: 1	Preserved With: ICE
NED-AEG-EC	Template: DEFAULT	(EPA 1603) Escherichia coli by membrane filter method using modified mTEC by Advanced Environmental Gainesville Overflow Laboratories for NED
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group C (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L

Bottle Group C (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: CH2CICOOH Pre-Preserved
W-CARB-AA	Template: DEFAULT	(EPA 8321B) Carbamates in water matrices by HPLC/MS/MS
Bottle Type: BG-500ML	Number of Bottles: 2	Preserved With: ICE
W-CT-CI-R	Template: DEFAULT	(EPA 8276) Organochlorine pesticides in water matrices by GC/MS with Negative Chemical Ionization
W-PCL-SQ-R	Template: DEFAULT	(EPA 8270D) Organochlorine pesticides in water matrices by GC/MS-SIM
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: ICE
W-E8321-DI	Template: ROC-ALL	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: ADD-PYRACL	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Calcium		
Chromium		
Iron		
Magnesium		
Nickel		
Potassium		
Sodium		
Zinc		
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects
Arsenic		
Cadmium		
Copper		
Lead		
Silver		
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: BG-1L	Number of Bottles: 2	Preserved With: ICE
W-PSNP-TQ	Template: DEFAULT	(EPA 8270D) Organonitrogen and phosphorus pesticides (ultra trace level) in water matrices by GC/MS/MS

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.

(904) 807-3300

ORIGIN ID ZPHA
JEREMY PARRISH
FL DEP NORTHEAST DISTRICT
8800 BAYMEADOWS WAY WEST
SUITE 100
JACKSONVILLE, FL 32256
UNITED STATES US

SHIP DATE: 15MAR18
ACTWGT: 20.00 LB
CAD: 100182098/NET3980

TO: AMZAD SHAIK
FL DEP
FL DEP CHEMISTRY SECTION
2600 BLAIR STONE RD
TALLAHASSEE FL 32399


(850) 245-8085

INV:

PO:

DEPT:

RMA:

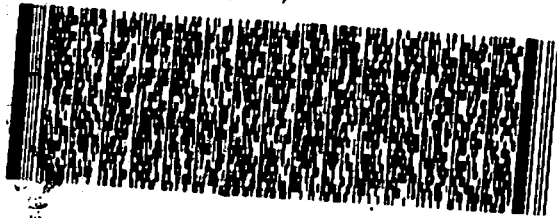


FedEx
TRK 0221 7954 4543 8033

WED - 04 APR 10:30A
PRIORITY OVERNIGHT

32399
FL-US
TLH

36 TLHA

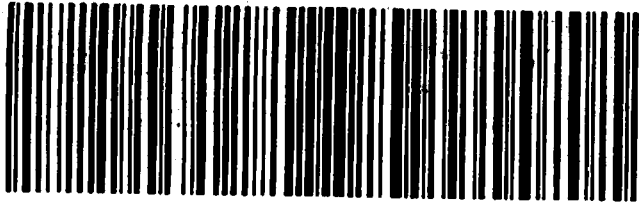

FTD 598538 03APR18 NRBA 546C1/9132/8C8A

ORIGIN ID ZPHA
JEREMY PARRISH
FL DEP NORTHEAST DISTRICT
8800 BAYMEADOWS WAY WEST
SUITE 100
JACKSONVILLE, FL 32256
UNITED STATES US

SHIP DATE: 15MAR18
ACTWGT: 20.00 LB
CAD: 100182098/NET3980

TO: AMZAD SHAIK
FL DEP
FL DEP CHEMISTRY SECTION
2600 BLAIR STONE RD
TALLAHASSEE FL 32399


(850) 245-8085

INV:

PO:

DEPT:

RMA:

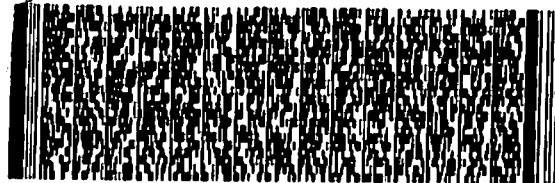


FedEx
TRK 0221 7954 4543 8022

RETURNS MON-FRI
WED - 04 APR 10:30A
PRIORITY OVERNIGHT

36 TLHA

32399
FL-US
TLH

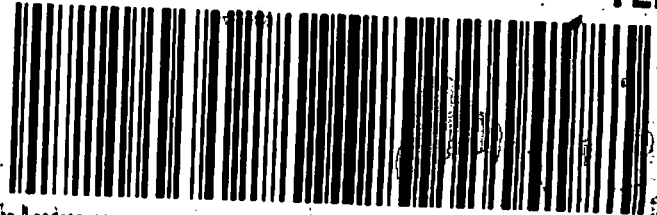

FTD 598538 03APR18 NRBA 546C1/9132/8C8A

SHIP DATE: 04APR18
ACTWGT: 20.00 LB
CAD: 100182098/NET3980

ORIGIN ID ZPHA
JEREMY PARRISH
FL DEP NORTHEAST DISTRICT
8800 BAYMEADOWS WAY WEST
SUITE 100
JACKSONVILLE, FL 32256
UNITED STATES US

TO: AMZAD SHAIK
FL DEP


FL DEP CHEMISTRY SECTION
2600 BLAIR STONE RD
TALLAHASSEE FL 32399

(850) 245-8085

INV:

PO:


RMA:

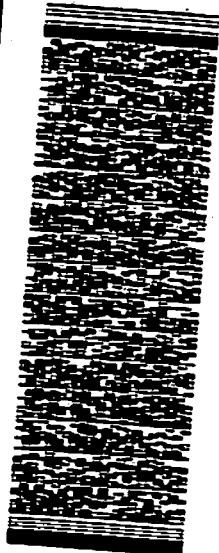

WED - 04 APR 10:30A
PRIORITY OVERNIGHT

FedEx
TRK 0221 7907 8664 5346

36 TLHA
3239 FL-TL

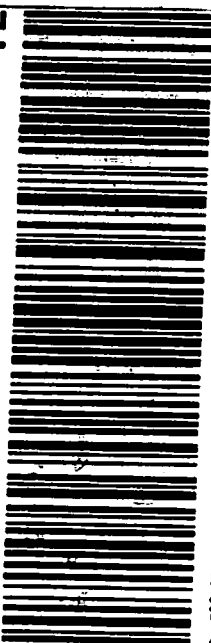

FTD 598538 03APR18 NRBA 546C1/9132/8C8A