

Log-in Checklist

RQ- 2018-10-08-12

Login Station ID: # 3

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 10-19-2018 / 10:25

Cooler Temperature*	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # (fill out only if waybill copy is damaged)
				Present?		*Intact?		
	HNO ₃	Formalin		Yes	No	Yes	No	
1.1C			8		✓			

* HNO₃ and Formalin persevered samples do **NOT** have a temperature requirement. For all others, if the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX), or if Evidence Seal is damaged. Identify the containers in the affected cooler(s) on back of this form.

****Note:** If "No" is checked in any of the fields below, fill out the back of this form with additional details (Field ID, Test IDs, etc.) and generate an NCR.

****Chain of Custody/ Field Sheet(s) Included?** Yes ✓ No

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes ✓ No Date

CONTAINER CHECK

****Evidence Tape on Bottles?** Yes No X If yes, is it intact? Yes No

****Caps on tight?** Yes X No ****Containers intact?** Yes No

****Sufficient Sample Volume:** Yes X No

CHLORINE CHECK REQUIRED? (Blue dot on container) Yes No ✓ Init: **ABS**

Check the Box marked "Yes" or "No" for the Presence of Chlorine. If Cl detected, an NCR is required.					
Analysis	Yes	No	Analysis	Yes	No
W-1,4 DIOX			W-PC-AA-SF		
W-E8321-DI, -MS, -21			W-NP-AA-SF		
W-BNA (-625, -R)			W-PDQUAT		
W-CARB-AA (-CAB-AA-R)			W-PCL-SQ-R		
W-U2060-MS			W-TR-TQ		
W-PCB-R			W-CT-CI-R		
W-PAH (-R)			W-PSNP-TQ		

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

****Acid Preserved Samples:** pH ≤ 2.0? Yes ✓ No NA Init: **ABS**

****W-1-4-DIOX (Green dot on container) preserved to pH < 4.0?** Yes No NA X Init: **ABS**

Coolers Unpacked/Checked by: **ABS** Date: **10-19-2018** NCRs (Y/N)?

Event ID: Nassau West
NE-DIST-2018-10-02 (SMP) NCR #

Date Received: 19-OCT-2018 10:25

Log-in Checklist

Samples with Incorrect pH Preservation or presence of Chlorine

Field ID	Bottle Test ID(s)	pH / Cl	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_03_2018
pH Paper 0.0 – 3.0 Lot #	2305 15 EXP:10/30/2018
pH Paper 0 – 13 Lot #	222516 EXP:09/15/2019
Chlorine Test Strips Lot #	7226 EXP:20/20/07

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No X

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF; W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Florida Department of Environmental Protection

Central Laboratory Submittal Form

Nassau West

Customer: NE-DIST

Requester: Jeremy M. ParrishField Report Prepared By: B Davis

Project ID: SMP

Collected By: B Davis, A KelbackerSampling Agency: DEAR NED

Loca	WIN / Field ID		19020069	☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____	☒ Eastern ☐ Central	Composite end Date _____ Time _____	Bottle Group(s) (See pg 2)
Field	UNNAMED TRIB TO LITTLE MILLS CR. @ US1			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN				Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments			
Loca	WIN / Field ID		19010023	☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>10/18/18</u> Time <u>945</u>	☒ Eastern ☐ Central	Composite end Date _____ Time _____	Bottle Group(s)
Field	ST MARYS S PRONG @ CR 23C			Matrix (type, e.g., Salt, Fresh, etc) <u>Fresh</u>		Diss. Oxygen <u>5.81</u>	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN				Temp (C) <u>22.8</u>	pH <u>6.20</u>	Sample Depth <u>0.2</u>	☐ ft ☒ m	Sp. Conductance (umho/cm) <u>84.7</u>
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) <u>0.04</u>	Comments			
Loca	WIN / Field ID		19010018	☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>10/18/18</u> Time <u>1035</u>	☒ Eastern ☐ Central	Composite end Date _____ Time _____	Bottle Group(s)
Field	ST MARYS R S PRONG @ SR 125			Matrix (type, e.g., Salt, Fresh, etc) <u>Fresh</u>		Diss. Oxygen <u>5.19</u>	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN				Temp (C) <u>23.9</u>	pH <u>4.91</u>	Sample Depth <u>0.1</u>	☐ ft ☒ m	Sp. Conductance (umho/cm) <u>51.5</u>
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) <u>0.02</u>	Comments			
Loca	Field ID		BLANK 10092018	☐ Comp ☐ Grab	Collection (comp begin or grab) Date _____ Time _____	☐ Eastern ☐ Central	Composite end Date _____ Time _____	Bottle Group(s)
Field	Field Blank Location: NE ROC DI			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN				Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments			

Relinquished By: B-D

Date/Time

10/18/18 1620

Shipping Method

FedEx

Number of Coolers Shipped:

1Received By: ABP

Date/Time

10-19-18/1025

Group: A	Bottle Type:	P-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	ALKALINITY						
	TURBIDITY						
	W-CL-IC						
	W-COLOR						
	W-F						
	W-SO4-IC						
	W-TDS						
	W-TSS						
Group: A	Bottle Type:	BP-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	CHLSUITE-W						
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2 to ALS
	NE-ALS-ECQ						
Group: A	Bottle Type:	P-500ML	# of Bottles: 3	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	2
	W-NH3						
	W-NO2NO3						
	W-S-A-TP						
	W-TKN						
	W-TOC						
Group: A	Bottle Type:	P-125ML	# of Bottles: 3	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	2
	W-PO4-F						
Group: B	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	
	ALKALINITY						
	TURBIDITY						
	W-CL-IC						
	W-COLOR						
	W-F						
	W-SO4-IC						
	W-TDS						
	W-TSS						
Group: B	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	
	W-NH3						
	W-NO2NO3						
	W-S-A-TP						

**SR#****CAS Contract**

Distribution: White - Return to Originator; Yellow - Retained by Client

Printed: 10/19/2018 11:43:33

Page 1 of 2

Date of Request: 20-AUG-2018
 Created By: PARRISH_J On: 20-AUG-2018
 Modified By: WATTS_J On: 21-SEP-2018
 Customer: NE-DIST
 Project: SMP
 Division:
 District: Northeast District
 Sampling Event: Nassau West

Send Coolers To:

Phone: 904-256-1700
 8800 Baymeadows Way West

 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Send Final Report To:

8800 Baymeadows Way West

 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Program Module Number:

Priority: 3
 Event Status: R
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 21-SEP-2018
 Biology Request Reviewed By: SWANSON_C On: 20-SEP-2018
 Sampling Kit Required: YES Ship on: 28-SEP-2018
 Sampling Kit Shipped: YES On: 24-SEP-2018
 Sampling Kit Packed By: REYNOLDS_T
 Preservatives Needed: NO
 Date to Receive Samples: 08-OCT-2018
 Received By: SHAIK_A On: 19-OCT-2018

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments:**Bottle Group A (Water) With 3 Samples:**

Bottle Type: P-1L	Number of Bottles: 3	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO ₃ /L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 3	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WI-THI	Number of Bottles: 3	Preserved With: ICE
NE-ALS-ECQ	Template: DEFAULT	(SM 9223 B Quanti-Tray) Escherichia coli by Colilert Quanti-Tray method by ALS Environmental Laboratory in Jacksonville
Bottle Type: P-500ML	Number of Bottles: 3	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 3	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO ₃ /L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-1L		Number of Bottles: 1	Preserved With: ICE
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0)	Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1)	Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B)	True Color measured at 450 nm
Color (true)			
W-F	Template: DEFAULT	(SM 4500 F-C-97)	Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1)	Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97)	Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97)	Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: P-500ML		Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0)	Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0)	Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0)	Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0)	Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00)	Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML		Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0)	Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

SHIP DATE: 01OCT18
ACTWGT: 5.00 LB HAN
CAD: 0446570/CAFE3210

ORIGIN ID: TLHA (904) 807-3300
JEREMY PARRISH
FL DEP NORTHEAST DISTRICT
8800 BAYMEADOWS WAY WEST
SUITE 100
JACKSONVILLE, FL 32256
UNITED STATES US


TO JOHN WATTS
FLORIDA DEP/CHEMISTRY SECTION
2600 BLAIRSTONE RD

TALLAHASSEE FL 32399

(850) 245-8077 REF: 1

REF: 1

RNA: 01 000 00

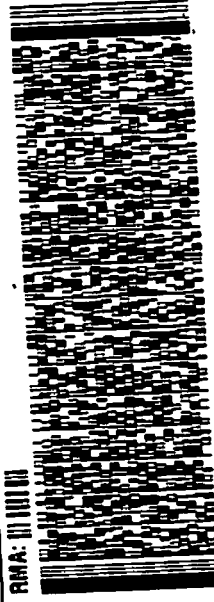

FedEx

EXPRESS



RETURNS MON - FRI
PRIORITY OVERNIGHT

TRK# 4385 5034 2225

0221

FRI - 19 OCT 10:30A
PRIORITY OVERNIGHT


FedEx
TRK# 4385 5034 2225

32399

FL-US

TLH

36 TLHA

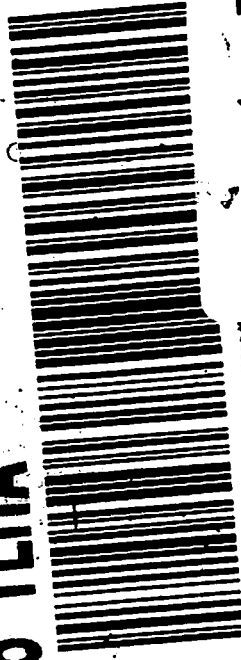

FTD 3690753 18OCT19 NRDA 553C1/6816/1

RT 856

1 10:30 B

FZ