

# Chemical Analysis Report

**NE-DIST-2018-11-20-02**

Florida Department of Environmental Protection  
Central Laboratory  
2600 Blair Stone Road  
Tallahassee, FL 32399-2400  
DOH Accreditation E31780

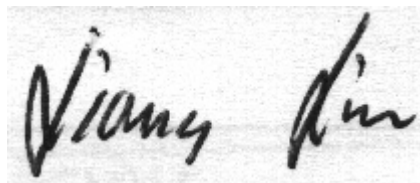
Event Description: **Alachua County Sampling**  
Request ID: **RQ-2018-11-05-18**  
Customer: **NE-DIST**  
Project ID: **SMP**

Send Reports to:  
FL Dept. of Environmental Protection  
8800 Baymeadows Way W  
Suite 100  
Jacksonville, FL 32256  
Attn: Jeremy Parrish

For additional information please contact  
Colin Wright, Ph.D.  
Liang-Tsair Lin, Ph.D.  
Kerry Tate, Ph.D.  
Dr. rer. nat. Bettina Steinbock  
Thekkekalathil Chandrasekhar, Ph.D, QA Officer  
Phone (850) 245-8085

Certified by: Liang Lin, Environmental Administrator

Date Certified: 04-DEC-2018 16:41

A handwritten signature in black ink, appearing to read "Liang Lin", is shown on a light-colored background.

## Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical group are included in this report: Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to  $1.3 \times 10^3$  or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (\*\*) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

**Sample Location: Bivens Arm Lake - west of US 441, and south of SW 16th Street**      **Collection Date/Time: 11/19/2018 10:15**

**Field ID: G1NE0904**

**Matrix: W-SURF-FRH**

| Sample ID | Ref. Method | Component        | Result  | Code | Units | Batch ID | QC Codes |
|-----------|-------------|------------------|---------|------|-------|----------|----------|
| 2043013   | EPA 8321B   | 2,4-D            | 0.063   |      | ug/L  | P354744  |          |
|           |             | Sucralose**      | 0.13    |      | ug/L  | P355085  |          |
|           |             | Bentazon         | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | MCP              | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Triclopyr**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Imidacloprid     | 0.0023  | I    | ug/L  | P354744  |          |
|           |             | Diuron           | 0.090   |      | ug/L  | P354744  |          |
|           |             | Pyraclostrobin** | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Primidone**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Linuron          | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Acetaminophen**  | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Fenuron          | 0.016   | U    | ug/L  | P354744  |          |
|           |             | Imazapyr**       | 0.0057  | I    | ug/L  | P354744  |          |
|           |             | Carbamazepine**  | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Fluridone**      | 0.0024  |      | ug/L  | P354744  |          |
|           |             | Hydrocodone**    | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Naproxen**       | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Ibuprofen**      | 0.020   | U    | ug/L  | P354744  |          |
|           |             | Acesulfame K**   | 0.14    | I    | ug/L  | P354971  |          |

**Sample Location: Hogtown Creek - Ring Park, N of NW 16th Ave (between NW 18th)**      **Collection Date/Time: 11/19/2018 11:00**

**Field ID: G1NE0912**

**Matrix: W-SURF-FRH**

| Sample ID | Ref. Method | Component        | Result  | Code | Units | Batch ID | QC Codes |
|-----------|-------------|------------------|---------|------|-------|----------|----------|
| 2043014   | EPA 8321B   | 2,4-D            | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Sucralose**      | 0.062   |      | ug/L  | P355085  |          |
|           |             | Bentazon         | 0.0024  | I    | ug/L  | P354744  |          |
|           |             | MCP              | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Triclopyr**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Imidacloprid     | 0.0087  |      | ug/L  | P354744  |          |
|           |             | Diuron           | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Pyraclostrobin** | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Primidone**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Linuron          | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Acetaminophen**  | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Fenuron          | 0.016   | U    | ug/L  | P354744  |          |
|           |             | Imazapyr**       | 0.016   |      | ug/L  | P354744  |          |
|           |             | Carbamazepine**  | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Fluridone**      | 0.0012  | I    | ug/L  | P354744  |          |
|           |             | Hydrocodone**    | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Naproxen**       | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Ibuprofen**      | 0.020   | U    | ug/L  | P354744  |          |
|           |             | Acesulfame K**   | 0.10    | U    | ug/L  | P354971  |          |

Sample Location: Possum Creek - S of NW 16th Ave

Collection Date/Time: 11/19/2018 11:15

Field ID: G1NE0900

Matrix: W-SURF-FRH

| Sample ID | Ref. Method | Component        | Result  | Code | Units | Batch ID | QC Codes |
|-----------|-------------|------------------|---------|------|-------|----------|----------|
| 2043015   | EPA 8321B   | 2,4-D            | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Sucralose**      | 0.17    |      | ug/L  | P355085  |          |
|           |             | Bentazon         | 0.0011  | I    | ug/L  | P354744  |          |
|           |             | MCPP             | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Triclopyr**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Imidacloprid     | 0.021   |      | ug/L  | P354744  |          |
|           |             | Diuron           | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Pyraclostrobin** | 0.0020  | U    | ug/L  | P354744  |          |
|           |             | Primidone**      | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Linuron          | 0.0040  | U    | ug/L  | P354744  |          |
|           |             | Acetaminophen**  | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Fenuron          | 0.016   | U    | ug/L  | P354744  |          |
|           |             | Imazapyr**       | 0.021   |      | ug/L  | P354744  |          |
|           |             | Carbamazepine**  | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Fluridone**      | 0.0041  |      | ug/L  | P354744  |          |
|           |             | Hydrocodone**    | 8.0E-04 | U    | ug/L  | P354744  |          |
|           |             | Naproxen**       | 0.0080  | U    | ug/L  | P354744  |          |
|           |             | Ibuprofen**      | 0.020   | U    | ug/L  | P354744  |          |
|           |             | Acesulfame K**   | 0.10    | U    | ug/L  | P354971  |          |

## Quality Assurance Report

### Method Blank Results

Reference Method: EPA 8321B  
Batch ID: P354744

| Component      | Result  | Code | Units |
|----------------|---------|------|-------|
| 2,4-D          | 0.0020  | U    | ug/L  |
| Acetaminophen  | 0.0080  | U    | ug/L  |
| Bentazon       | 8.0E-04 | U    | ug/L  |
| Carbamazepine  | 8.0E-04 | U    | ug/L  |
| Diuron         | 0.0020  | U    | ug/L  |
| Fenuron        | 0.016   | U    | ug/L  |
| Fluridone      | 4.0E-04 | U    | ug/L  |
| Hydrocodone    | 8.0E-04 | U    | ug/L  |
| Ibuprofen      | 0.020   | U    | ug/L  |
| Imazapyr       | 0.0040  | U    | ug/L  |
| Imidacloprid   | 0.0020  | U    | ug/L  |
| Linuron        | 0.0040  | U    | ug/L  |
| MCPP           | 0.0020  | U    | ug/L  |
| Naproxen       | 0.0080  | U    | ug/L  |
| Primidone      | 0.0040  | U    | ug/L  |
| Pyraclostrobin | 0.0020  | U    | ug/L  |
| Triclopyr      | 0.0040  | U    | ug/L  |

Reference Method: EPA 8321B  
Batch ID: P354971

| Component    | Result | Code | Units |
|--------------|--------|------|-------|
| Acesulfame K | 0.10   | U    | ug/L  |

Reference Method: EPA 8321B  
Batch ID: P355085

| Component | Result | Code | Units |
|-----------|--------|------|-------|
| Sucralose | 0.010  | U    | ug/L  |

## Quality Assurance Report

### Laboratory Control Sample Accuracy

Reference Method: EPA 8321B  
Batch ID: P354744

| Component      | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|----------------|---------|---------|-----------|----------------|
| 2,4-D          | 79.9    |         | P         | 40 - 150       |
| Acetaminophen  | 96.2    |         | P         | 30 - 150       |
| Bentazon       | 83.4    |         | P         | 30 - 150       |
| Carbamazepine  | 74.3    |         | P         | 40 - 150       |
| Diuron         | 68.8    |         | P         | 40 - 150       |
| Fenuron        | 84.7    |         | P         | 40 - 150       |
| Fluridone      | 94.8    |         | P         | 40 - 150       |
| Hydrocodone    | 85.3    |         | P         | 40 - 150       |
| Ibuprofen      | 70.3    |         | P         | 40 - 150       |
| Imazapyr       | 74.2    |         | P         | 40 - 150       |
| Imidacloprid   | 97.6    |         | P         | 40 - 160       |
| Linuron        | 58.2    |         | P         | 40 - 150       |
| MCPP           | 96.8    |         | P         | 40 - 150       |
| Naproxen       | 81.4    |         | P         | 40 - 150       |
| Primidone      | 64.0    |         | P         | 40 - 150       |
| Pyraclostrobin | 71.8    |         | P         | 40 - 150       |
| Triclopyr      | 60.6    |         | P         | 40 - 150       |

Reference Method: EPA 8321B  
Batch ID: P354971

| Component    | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|--------------|---------|---------|-----------|----------------|
| Acesulfame K | 94.5    |         | P         | 40 - 150       |

Reference Method: EPA 8321B  
Batch ID: P355085

| Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|-----------|---------|---------|-----------|----------------|
| Sucralose | 97.8    |         | P         | 40 - 150       |

## Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 8321B  
 Batch ID: P354744

| Spiked Sample | Component      | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|----------------|---------|---------|-----------|----------------|
| 2042354       | 2,4-D          | 103     | 99.6    | P/P       | 40 - 150       |
| 2042354       | Acetaminophen  | 114     | 117     | P/P       | 30 - 150       |
| 2042354       | Bentazon       | 45.6    | 50.4    | P/P       | 30 - 150       |
| 2042354       | Carbamazepine  | 75.5    | 79.1    | P/P       | 40 - 150       |
| 2042354       | Diuron         | 66.9    | 69.6    | P/P       | 40 - 150       |
| 2042354       | Fenuron        | 79.6    | 82.6    | P/P       | 40 - 150       |
| 2042354       | Fluridone      | 88.3    | 103     | P/P       | 40 - 150       |
| 2042354       | Hydrocodone    | 80.1    | 80.7    | P/P       | 40 - 150       |
| 2042354       | Ibuprofen      | 81.7    | 90.2    | P/P       | 40 - 150       |
| 2042354       | Imazapyr       | 92.9    | 82.5    | P/P       | 40 - 150       |
| 2042354       | Imidacloprid   | 131     | 131     | P/P       | 40 - 160       |
| 2042354       | Linuron        | 64.7    | 64.6    | P/P       | 40 - 150       |
| 2042354       | MCPP           | 142     | 131     | P/P       | 40 - 150       |
| 2042354       | Naproxen       | 86.2    | 71.7    | P/P       | 40 - 150       |
| 2042354       | Primidone      | 70.7    | 72.9    | P/P       | 40 - 150       |
| 2042354       | Pyraclostrobin | 51.6    | 51.7    | P/P       | 40 - 150       |
| 2042354       | Triclopyr      | 97.7    | 89.9    | P/P       | 40 - 150       |

Reference Method: EPA 8321B  
 Batch ID: P354971

| Spiked Sample | Component    | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|--------------|---------|---------|-----------|----------------|
| 2042005       | Acesulfame K | 137     | 131     | P/P       | 40 - 150       |

Reference Method: EPA 8321B  
 Batch ID: P355085

| Spiked Sample | Component | % Rec.1 | % Rec.2 | Pass/Fail | Control Limits |
|---------------|-----------|---------|---------|-----------|----------------|
| 2042005       | Sucralose | 85.2    | 101     | P/P       | 40 - 150       |



## Quality Assurance Report Precision

Reference Method: EPA 8321B  
Batch ID: P354744

| Replicated<br>Lab Sample | Component      | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|----------------|-----------|-------------------|-----------|----------------|
| 2042354                  | 2,4-D          | 3.35      | Spike             | P         | 0 - 30         |
| 2042354                  | Acetaminophen  | 2.12      | Spike             | P         | 0 - 30         |
| 2042354                  | Bentazon       | 9.54      | Spike             | P         | 0 - 30         |
| 2042354                  | Carbamazepine  | 4.66      | Spike             | P         | 0 - 30         |
| 2042354                  | Diuron         | 3.84      | Spike             | P         | 0 - 30         |
| 2042354                  | Fenuron        | 3.73      | Spike             | P         | 0 - 30         |
| 2042354                  | Fluridone      | 15.6      | Spike             | P         | 0 - 30         |
| 2042354                  | Hydrocodone    | 0.769     | Spike             | P         | 0 - 30         |
| 2042354                  | Ibuprofen      | 9.96      | Spike             | P         | 0 - 30         |
| 2042354                  | Imazapyr       | 11.1      | Spike             | P         | 0 - 30         |
| 2042354                  | Imidacloprid   | 0.375     | Spike             | P         | 0 - 30         |
| 2042354                  | Linuron        | 0.0690    | Spike             | P         | 0 - 30         |
| 2042354                  | MCP            | 7.96      | Spike             | P         | 0 - 30         |
| 2042354                  | Naproxen       | 18.4      | Spike             | P         | 0 - 30         |
| 2042354                  | Primidone      | 3.13      | Spike             | P         | 0 - 30         |
| 2042354                  | Pyraclostrobin | 0.156     | Spike             | P         | 0 - 30         |
| 2042354                  | Triclopyr      | 8.41      | Spike             | P         | 0 - 30         |

Reference Method: EPA 8321B  
Batch ID: P354971

| Replicated<br>Lab Sample | Component    | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|--------------|-----------|-------------------|-----------|----------------|
| 2042005                  | Acesulfame K | 4.13      | Spike             | P         | 0 - 30         |

Reference Method: EPA 8321B  
Batch ID: P355085

| Replicated<br>Lab Sample | Component | % RSD/RPD | Sample/Spike/LCS* | Pass/Fail | Control Limits |
|--------------------------|-----------|-----------|-------------------|-----------|----------------|
| 2042005                  | Sucralose | 16.6      | Spike             | P         | 0 - 30         |

\* Sample, spike and/or laboratory control sample precision (LCS) is reported.  
Replicate spike precision may be reported when sample results are below quantifiable levels.

## Quality Assurance Report Surrogates

Lab Sample ID: 2043013  
Field Sample ID: G1NE0904

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | 2,4-D-d3          | 67.9   | P         | 30 - 160       |
| EPA 8321B        | Acetaminophen-d4  | 49.9   | P         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 43.5   | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 56.3   | P         | 30 - 160       |
| EPA 8321B        | Endothall-d6      | 86.8   | P         | 40 - 160       |
| EPA 8321B        | Endothall-d6      | 86.8   | P         | 40 - 160       |
| EPA 8321B        | Ibuprofen-d3      | 56.5   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 42.0   | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 97.3   | P         | 40 - 160       |
| EPA 8321B        | Sucralose-d6      | 97.3   | P         | 40 - 160       |

Lab Sample ID: 2043014  
Field Sample ID: G1NE0912

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | 2,4-D-d3          | 108    | P         | 30 - 160       |
| EPA 8321B        | Acetaminophen-d4  | 115    | P         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 101    | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 101    | P         | 30 - 160       |
| EPA 8321B        | Endothall-d6      | 92.6   | P         | 40 - 160       |
| EPA 8321B        | Endothall-d6      | 92.6   | P         | 40 - 160       |
| EPA 8321B        | Ibuprofen-d3      | 103    | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 84.1   | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 107    | P         | 40 - 160       |
| EPA 8321B        | Sucralose-d6      | 107    | P         | 40 - 160       |

Lab Sample ID: 2043015  
Field Sample ID: G1NE0900

| Reference Method | Surrogate         | % Rec. | Pass/Fail | Control Limits |
|------------------|-------------------|--------|-----------|----------------|
| EPA 8321B        | 2,4-D-d3          | 90.1   | P         | 30 - 160       |
| EPA 8321B        | Acetaminophen-d4  | 94.6   | P         | 30 - 160       |
| EPA 8321B        | Carbamazepine-d10 | 92.0   | P         | 30 - 160       |
| EPA 8321B        | Diuron-d6         | 83.5   | P         | 30 - 160       |
| EPA 8321B        | Endothall-d6      | 82.3   | P         | 40 - 160       |
| EPA 8321B        | Endothall-d6      | 82.3   | P         | 40 - 160       |
| EPA 8321B        | Ibuprofen-d3      | 82.6   | P         | 30 - 160       |
| EPA 8321B        | Primidone-d5      | 122    | P         | 30 - 160       |
| EPA 8321B        | Sucralose-d6      | 95.6   | P         | 40 - 160       |
| EPA 8321B        | Sucralose-d6      | 95.6   | P         | 40 - 160       |

## Quality Assurance Report Calibration Verification

Reference Method: EPA 8321B

Run ID: A87945

Included Lab Sample IDs: 2043013, 2043014, 2043015

| Component    | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|--------------|---------|---------|------------|----------------|
| Acesulfame K | 81.8    | 90.4    | P/P        | 60 - 160       |
| Acesulfame K | 90.4    | 84.2    | P/P        | 60 - 160       |

Reference Method: EPA 8321B

Run ID: A88012

Included Lab Sample IDs: 2043013, 2043014, 2043015

| Component      | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|----------------|---------|---------|------------|----------------|
| 2,4-D          | 107     | 98.4    | P/P        | 50 - 150       |
| Acetaminophen  | 114     | 118     | P/P        | 60 - 160       |
| Bentazon       | 119     | 118     | P/P        | 50 - 160       |
| Carbamazepine  | 118     | 110     | P/P        | 60 - 160       |
| Diuron         | 99.7    | 103     | P/P        | 60 - 150       |
| Fenuron        | 115     | 111     | P/P        | 60 - 150       |
| Fluridone      | 91.2    | 119     | P/P        | 60 - 160       |
| Hydrocodone    | 119     | 108     | P/P        | 60 - 150       |
| Ibuprofen      | 83.4    | 97.4    | P/P        | 50 - 160       |
| Imazapyr       | 90.0    | 94.4    | P/P        | 50 - 150       |
| Imidacloprid   | 109     | 102     | P/P        | 60 - 160       |
| Linuron        | 99.4    | 108     | P/P        | 60 - 150       |
| MCPP           | 114     | 99.3    | P/P        | 50 - 150       |
| Naproxen       | 73.2    | 87.8    | P/P        | 50 - 160       |
| Primidone      | 154     | 105     | P/P        | 60 - 160       |
| Pyraclostrobin | 65.1    | 150     | P/P        | 60 - 150       |
| Triclopyr      | 96.0    | 95.5    | P/P        | 50 - 160       |

Reference Method: EPA 8321B

Run ID: A88023

Included Lab Sample IDs: 2043013, 2043014, 2043015

| Component | % Rec.1 | % Rec.2 | Pass/Fail* | Control Limits |
|-----------|---------|---------|------------|----------------|
| Sucralose | 80.1    | 92.6    | P/P        | 60 - 160       |
| Sucralose | 85.6    | 80.1    | P/P        | 60 - 160       |

\* Pass/Fail determinations are made for each bracketing calibration verification check.

Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.

Where they are different, both control limits are provided.

## Quality Assurance Report Summary

| Ref. Method | Analyte        | LCS % Recovery | MS % Recovery |      | Precision<br>SMP | MS     |
|-------------|----------------|----------------|---------------|------|------------------|--------|
|             |                |                | LCS           |      |                  |        |
| EPA 8321B   | 2,4-D          | 79.9           | 103           | 99.6 |                  | 3.35   |
|             | Acesulfame K   | 94.5           | 137           | 131  |                  | 4.13   |
|             | Acetaminophen  | 96.2           | 114           | 117  |                  | 2.12   |
|             | Bentazon       | 83.4           | 45.6          | 50.4 |                  | 9.54   |
|             | Carbamazepine  | 74.3           | 75.5          | 79.1 |                  | 4.66   |
|             | Diuron         | 68.8           | 66.9          | 69.6 |                  | 3.84   |
|             | Fenuron        | 84.7           | 79.6          | 82.6 |                  | 3.73   |
|             | Fluridone      | 94.8           | 88.3          | 103  |                  | 15.6   |
|             | Hydrocodone    | 85.3           | 80.1          | 80.7 |                  | 0.769  |
|             | Ibuprofen      | 70.3           | 90.2          | 81.7 |                  | 9.96   |
|             | Imazapyr       | 74.2           | 92.9          | 82.5 |                  | 11.1   |
|             | Imidacloprid   | 97.6           | 131           | 131  |                  | 0.375  |
|             | Linuron        | 58.2           | 64.7          | 64.6 |                  | 0.0690 |
|             | MCPP           | 96.8           | 142           | 131  |                  | 7.96   |
|             | Naproxen       | 81.4           | 86.2          | 71.7 |                  | 18.4   |
|             | Primidone      | 64.0           | 70.7          | 72.9 |                  | 3.13   |
|             | Pyraclostrobin | 71.8           | 51.6          | 51.7 |                  | 0.156  |
|             | Sucralose      | 97.8           | 85.2          | 101  |                  | 16.6   |
|             | Triclopyr      | 60.6           | 97.7          | 89.9 |                  | 8.41   |

## Reference Method Descriptions

### Method / DoH Cert #

EPA 8321B / E31780  
EPA 8321B / E31780

### Description

Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS  
Water soluble organic compounds by HPLC/MS/MS

### Associated Samples

2043013, 2043014, 2043015  
2043013, 2043014, 2043015

## Preparation and Analysis Log

| Ref. Method | Received Date | Prep Date/Time   | Prepared By  | Analysis Date/Time | Analyzed By  | Associated Samples |
|-------------|---------------|------------------|--------------|--------------------|--------------|--------------------|
| EPA 8321B   | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/21/2018 14:53   | Rebecca Ware | 2043013            |
|             | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/21/2018 15:21   | Rebecca Ware | 2043014            |
|             | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/21/2018 15:34   | Rebecca Ware | 2043015            |
|             | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/28/2018 12:27   | Rebecca Ware | 2043013            |
|             | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/28/2018 12:55   | Rebecca Ware | 2043014            |
|             | 11/20/2018    | 11/21/2018 07:30 | Rebecca Ware | 11/28/2018 13:08   | Rebecca Ware | 2043015            |
|             | 11/20/2018    | 11/21/2018 10:00 | Hoor Shaik   | 11/28/2018 08:23   | Juyoung Kim  | 2043013            |
|             | 11/20/2018    | 11/21/2018 10:00 | Hoor Shaik   | 11/28/2018 08:40   | Juyoung Kim  | 2043014            |
|             | 11/20/2018    | 11/21/2018 10:00 | Hoor Shaik   | 11/28/2018 08:56   | Juyoung Kim  | 2043015            |