

Chemical Analysis Report

CEN-DIST-2018-07-19-02

Florida Department of Environmental Protection
Central Laboratory
2600 Blair Stone Road
Tallahassee, FL 32399-2400
DOH Accreditation E31780

Event Description: **Lotta / Kasey / Dot / Fairhope**

Request ID: **RQ-2018-07-16-45**

Customer: **CEN-DIST**

Project ID: **SMP**

Send Reports to:

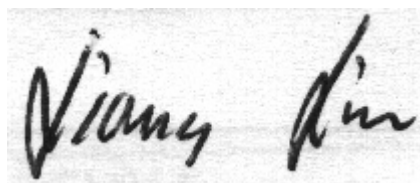
FL Dept. of Environmental Protection
FL Dept. of Environmental Protection
3319 Maguire Blvd., Suite 232
Orlando, FL 32803-3767
Attn: Mike Linger

For additional information please contact

Colin Wright, Ph.D.
Liang-Tsair Lin, Ph.D.
Kerry Tate, Ph.D.
Dr. rer. nat. Bettina Steinbock
Thekkekalathil Chandrasekhar, Ph.D, QA Officer
Phone (850) 245-8085

Certified by: Liang Lin, Environmental Administrator

Date Certified: 07-AUG-2018 14:55

A handwritten signature in black ink, appearing to read "Liang Lin", on a light-colored background.

Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical groups are included in this report: Nutrients and Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to 1.3×10^3 or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (**) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

**Sample Location: LAKE LOTTA AT CENTER OF SOUTHERN
 LOBE (3002G)**

Collection Date/Time: 07/18/2018 09:14

Field ID: G2CE0093

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2009257	EPA 180.1 Rev. 2.0	Turbidity	4.4		NTU	P348828	
	EPA 300.0 Rev. 2.1	Chloride	8.8		mg Cl/L	P349150	
		Sulfate	7.0		mg SO4/L	P349155	
	SM 2120 B	Color (true)	92		PCU	P348782	
	SM 2320 B-97	Total Alkalinity	52		mg CaCO3/L	P349027	
	SM 2540 C-97	TDS	103		mg/L	P349196	
	SM 2540 D-97	TSS	6	I	mg/L	P349173	
	SM 4500 F-C-97	Fluoride	0.11		mg F/L	P349031	
2009258	EPA 350.1 Rev. 2.0	Ammonia-N	0.007		mg N/L	P349158	
	EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	1.0		mg N/L	P349001	
	EPA 353.2 Rev. 2.0	NO2NO3-N	0.004	U	mg N/L	P348974	
	EPA 365.1 Rev. 2.0	Total-P	0.058		mg P/L	P349307	
	SM 5310 B-00	Organic Carbon	12		mg C/L	P349005	
2009259	EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	0.006	I	mg P/L	P348788	

Ref. Method and Comment:

SM 2540 D-97: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

Sample Location: LAKE DOT @ CENTER

Collection Date/Time: 07/18/2018 08:33

Field ID: G2CE0067

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2009272	EPA 8321B	2,4-D	0.021		ug/L	P348774	
		Bentazon	0.011		ug/L	P348774	
		MCP	0.0020	U	ug/L	P348774	
		Triclopyr**	0.0040	U	ug/L	P348774	
		Imidacloprid	0.011		ug/L	P348774	
		Diuron	0.013		ug/L	P348774	
		Pyraclostrobin**	0.0020	U	ug/L	P348774	
		Primidone**	0.0040	U	ug/L	P348774	
		Linuron	0.0040	U	ug/L	P348774	
		Acetaminophen**	0.010	I	ug/L	P348774	
		Fenuron	0.016	U	ug/L	P348774	
		Imazapyr**	0.0040	U	ug/L	P348774	
		Carbamazepine**	4.0E-04	U	ug/L	P348774	
		Fluridone**	0.0012	I	ug/L	P348774	
		Hydrocodone**	8.0E-04	U	ug/L	P348774	
		Naproxen**	0.0080	U	ug/L	P348774	
		Ibuprofen**	0.020	U	ug/L	P348774	
		Sucralose**	0.043		ug/L	P348754	

Ref. Method and Comment:

EPA 8321B: Insufficient sample to perform matrix spikes.

Quality Assurance Report

Method Blank Results

Reference Method: EPA 180.1 Rev. 2.0
Batch ID: P348828

Component	Result	Code	Units
Turbidity	0.10	U	NTU

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349150

Component	Result	Code	Units
Chloride	0.20	U	mg Cl/L

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349155

Component	Result	Code	Units
Sulfate	0.20	U	mg SO4/L

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P349158

Component	Result	Code	Units
Ammonia-N	0.002	U	mg N/L

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P349001

Component	Result	Code	Units
Kjeldahl Nitrogen	0.080	U	mg N/L

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P348974

Component	Result	Code	Units
NO2NO3-N	0.004	U	mg N/L

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P349307

Component	Result	Code	Units
Total-P	0.002	U	mg P/L

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P348788

Component	Result	Code	Units
O-Phosphate-P	0.004	U	mg P/L

Reference Method: EPA 8321B
Batch ID: P348754

Component	Result	Code	Units
Sucralose	0.010	U	ug/L

Quality Assurance Report Method Blank Results

Reference Method: EPA 8321B
Batch ID: P348774

Component	Result	Code	Units
2,4-D	0.0020	U	ug/L
Acetaminophen	0.0080	U	ug/L
Bentazon	8.0E-04	U	ug/L
Carbamazepine	4.0E-04	U	ug/L
Diuron	0.0020	U	ug/L
Fenuron	0.016	U	ug/L
Fluridone	4.0E-04	U	ug/L
Hydrocodone	8.0E-04	U	ug/L
Ibuprofen	0.020	U	ug/L
Imazapyr	0.0040	U	ug/L
Imidacloprid	0.0020	U	ug/L
Linuron	0.0040	U	ug/L
MCPP	0.0020	U	ug/L
Naproxen	0.0080	U	ug/L
Primidone	0.0040	U	ug/L
Pyraclostrobin	0.0020	U	ug/L
Triclopyr	0.0040	U	ug/L

Reference Method: SM 2120 B
Batch ID: P348782

Component	Result	Code	Units
Color (true)	2.5	U	PCU

Reference Method: SM 2320 B-97
Batch ID: P349027

Component	Result	Code	Units
Total Alkalinity	0.65	U	mg CaCO3/L

Reference Method: SM 2540 C-97
Batch ID: P349196

Component	Result	Code	Units
TDS	15	U	mg/L

Reference Method: SM 2540 D-97
Batch ID: P349173

Component	Result	Code	Units
TSS	2	U	mg/L

Reference Method: SM 4500 F-C-97
Batch ID: P349031

Component	Result	Code	Units
Fluoride	0.035	U	mg F/L

Reference Method: SM 5310 B-00
Batch ID: P349005

Component	Result	Code	Units
-----------	--------	------	-------

Quality Assurance Report Method Blank Results

Reference Method: SM 5310 B-00
Batch ID: P349005

Component	Result	Code	Units
Organic Carbon	0.50	U	mg C/L

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 300.0 Rev. 2.1
 Batch ID: P349150

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Chloride	108		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
 Batch ID: P349155

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sulfate	106		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
 Batch ID: P349158

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Ammonia-N	100		P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
 Batch ID: P349001

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Kjeldahl Nitrogen	104		P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
 Batch ID: P348974

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
NO2NO3-N	102		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
 Batch ID: P349307

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total-P	98.3		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved
 Batch ID: P348788

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
O-Phosphate-P	97.5		P	90 - 110

Reference Method: EPA 8321B
 Batch ID: P348754

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sucralose	77.3		P	40 - 150

Reference Method: EPA 8321B
 Batch ID: P348774

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2,4-D	115	112	P/P	40 - 150
Acetaminophen	77.5	98.7	P/P	30 - 150
Bentazon	93.1	89.1	P/P	30 - 150
Carbamazepine	67.4	73.7	P/P	40 - 150

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 8321B

Batch ID: P348774

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Diuron	53.7	65.1	P/P	40 - 150
Fenuron	97.5	108	P/P	40 - 150
Fluridone	79.2	87.9	P/P	40 - 150
Hydrocodone	86.0	93.5	P/P	40 - 150
Ibuprofen	112	98.5	P/P	40 - 150
Imazapyr	93.7	97.5	P/P	40 - 150
Imidacloprid	98.5	105	P/P	40 - 160
Linuron	75.9	77.2	P/P	40 - 150
MCPP	138	132	P/P	40 - 150
Naproxen	106	130	P/P	40 - 150
Primidone	86.2	99.4	P/P	40 - 150
Pyraclostrobin	78.2	88.4	P/P	40 - 150
Triclopyr	139	133	P/P	40 - 150

Reference Method: SM 2120 B

Batch ID: P348782

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Color (true)	102		P	85 - 115

Reference Method: SM 2320 B-97

Batch ID: P349027

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total Alkalinity	106		P	98 - 107

Reference Method: SM 4500 F-C-97

Batch ID: P349031

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Fluoride	96.1		P	91 - 105

Reference Method: SM 5310 B-00

Batch ID: P349005

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Organic Carbon	94.8		P	85 - 115

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349150

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2008993	Chloride	105		P	90 - 110
2009081	Chloride	104		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349155

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2008993	Sulfate	103		P	90 - 110
2009081	Sulfate	103		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P349158

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009258	Ammonia-N	98.1	98.8	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P349001

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009232	Kjeldahl Nitrogen	101	93.3	P/P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P348974

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009232	NO2NO3-N	102	103	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P349307

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009230	Total-P	98.6	101	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P348788

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009235	O-Phosphate-P	96.3	96.3	P/P	90 - 110

Reference Method: EPA 8321B
Batch ID: P348754

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2008562	Sucralose	75.6	96.9	P/P	40 - 150

Reference Method: SM 4500 F-C-97
Batch ID: P349031

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009225	Fluoride	98.4	96.3	P/P	91 - 105

Quality Assurance Report Matrix Spike Accuracy

Reference Method: SM 5310 B-00
Batch ID: P349005

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2009067	Organic Carbon	92.7	94.1	P/P	85 - 115

Quality Assurance Report Precision

Reference Method: EPA 180.1 Rev. 2.0
Batch ID: P348828

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009162	Turbidity	0.684	Sample	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349150

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2008993	Chloride	2.26	Sample	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P349155

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2008993	Sulfate	3.12	Sample	P	0 - 20

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P349158

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009258	Ammonia-N	0.636	Spike	P	0 - 20

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P349001

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009232	Kjeldahl Nitrogen	4.94	Spike	P	0 - 20

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P348974

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009232	NO2NO3-N	0.976	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P349307

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009230	Total-P	1.82	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P348788

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009235	O-Phosphate-P	0.0	Spike	P	0 - 20

Quality Assurance Report Precision

Reference Method: EPA 8321B
Batch ID: P348754

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2008562	Sucralose	13.5	Spike	P	0 - 30

Reference Method: EPA 8321B
Batch ID: P348774

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
LFB	2,4-D	2.45	LCS	P	0 - 30
LFB	Acetaminophen	24.0	LCS	P	0 - 30
LFB	Bentazon	4.36	LCS	P	0 - 30
LFB	Carbamazepine	8.84	LCS	P	0 - 30
LFB	Diuron	19.2	LCS	P	0 - 30
LFB	Fenuron	10.2	LCS	P	0 - 30
LFB	Fluridone	10.5	LCS	P	0 - 30
LFB	Hydrocodone	8.33	LCS	P	0 - 30
LFB	Ibuprofen	12.8	LCS	P	0 - 30
LFB	Imazapyr	3.94	LCS	P	0 - 30
LFB	Imidacloprid	6.71	LCS	P	0 - 30
LFB	Linuron	1.75	LCS	P	0 - 30
LFB	MCP	4.52	LCS	P	0 - 30
LFB	Naproxen	20.4	LCS	P	0 - 30
LFB	Primidone	14.2	LCS	P	0 - 30
LFB	Pyraclostrobin	12.2	LCS	P	0 - 30
LFB	Triclopyr	4.80	LCS	P	0 - 30

Reference Method: SM 2120 B
Batch ID: P348782

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009225	Color (true)	3.38	Sample	P	0 - 20

Reference Method: SM 2320 B-97
Batch ID: P349027

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009225	Total Alkalinity	0.239	Sample	P	0 - 1.6

Reference Method: SM 2540 C-97
Batch ID: P349196

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009227	TDS	0.873	Sample	P	0 - 10

Reference Method: SM 4500 F-C-97
Batch ID: P349031

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
--------------------------	-----------	-----------	-------------------	-----------	----------------

Quality Assurance Report Precision

Reference Method: SM 4500 F-C-97
Batch ID: P349031

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009225	Fluoride	1.92	Spike	P	0 - 3.5

Reference Method: SM 5310 B-00
Batch ID: P349005

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2009067	Organic Carbon	1.04	Spike	P	0 - 20

* Sample, spike and/or laboratory control sample precision (LCS) is reported.
Replicate spike precision may be reported when sample results are below quantifiable levels.

Quality Assurance Report Surrogates

Lab Sample ID: 2009272
Field Sample ID: G2CE0067

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	2,4-D-d3	103	P	30 - 160
EPA 8321B	Acetaminophen-d4	85.1	P	30 - 160
EPA 8321B	Carbamazepine-d10	83.8	P	30 - 160
EPA 8321B	Diuron-d6	51.7	P	30 - 160
EPA 8321B	Ibuprofen-d3	74.3	P	40 - 160
EPA 8321B	Primidone-d5	92.3	P	30 - 160
EPA 8321B	Sucralose-d6	118	P	40 - 160

Quality Assurance Report Calibration Verification

Reference Method: SM 2120 B
Run ID: A85347
Included Lab Sample IDs: 2009257

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Color (true)	104	105	P/P	90 - 115

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Run ID: A85348
Included Lab Sample IDs: 2009259

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
O-Phosphate-P	98.1	97.6	P/P	90 - 110

Reference Method: EPA 180.1 Rev. 2.0
Run ID: A85363
Included Lab Sample IDs: 2009257

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Turbidity	98.5	98.5	P/P	95 - 105

Reference Method: EPA 8321B
Run ID: A85393
Included Lab Sample IDs: 2009272

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Sucralose	91.4	90.1	P/P	60 - 150

Reference Method: EPA 353.2 Rev. 2.0
Run ID: A85414
Included Lab Sample IDs: 2009258

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
NO2NO3-N	102	104	P/P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Run ID: A85417
Included Lab Sample IDs: 2009257

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Chloride	102	103	P/P	90 - 110
Sulfate	103	103	P/P	90 - 110

Reference Method: SM 5310 B-00
Run ID: A85418
Included Lab Sample IDs: 2009258

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Organic Carbon	97.7	96.8	P/P	90 - 110

Reference Method: SM 2320 B-97
Run ID: A85430
Included Lab Sample IDs: 2009257

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total Alkalinity	103	100	P/P	90 - 110

Quality Assurance Report Calibration Verification

Reference Method: SM 4500 F-C-97

Run ID: A85430

Included Lab Sample IDs: 2009257

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Fluoride	98.6	98.5	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0

Run ID: A85448

Included Lab Sample IDs: 2009258

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Kjeldahl Nitrogen	96.8	95.2	P/P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0

Run ID: A85474

Included Lab Sample IDs: 2009258

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Ammonia-N	99.7	101	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0

Run ID: A85548

Included Lab Sample IDs: 2009258

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total-P	100	101	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A85613

Included Lab Sample IDs: 2009272

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
2,4-D	116	110	P/P	50 - 150
Bentazon	115	93.6	P/P	50 - 150
Ibuprofen	128	108	P/P	50 - 150
MCP	131	128	P/P	50 - 150
Naproxen	139	124	P/P	60 - 150
Triclopyr	131	125	P/P	50 - 160

Reference Method: EPA 8321B

Run ID: A85635

Included Lab Sample IDs: 2009272

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Acetaminophen	113	97.9	P/P	60 - 150
Carbamazepine	93.1	90.4	P/P	60 - 150
Diuron	87.9	83.2	P/P	60 - 150
Fenuron	98.3	85.3	P/P	60 - 150
Fluridone	107	96.7	P/P	60 - 160
Hydrocodone	107	92.4	P/P	60 - 150
Imazapyr	113	99.1	P/P	50 - 150
Imidacloprid	100	84.6	P/P	60 - 150
Linuron	110	86.7	P/P	60 - 150
Primidone	93.2	94.8	P/P	60 - 150
Pyraclostrobin	109	93.8	P/P	60 - 150

Quality Assurance Report

Calibration Verification

* Pass/Fail determinations are made for each bracketing calibration verification check.

Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.

Where they are different, both control limits are provided.

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery		MS % Recovery		LCS	Precision	MS
							SMP	
EPA 180.1 Rev. 2.0	Turbidity						0.684	
EPA 300.0 Rev. 2.1	Chloride	108		105	104		2.26	
	Sulfate	106		103	103		3.12	
EPA 350.1 Rev. 2.0	Ammonia-N	100		98.1	98.8			0.636
EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	104		101	93.3			4.94
EPA 353.2 Rev. 2.0	NO ₂ NO ₃ -N	102		102	103			0.976
EPA 365.1 Rev. 2.0	Total-P	98.3		98.6	101			1.82
EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	97.5		96.3	96.3			0.0
EPA 8321B	2,4-D	115	112			2.45		
	Acetaminophen	77.5	98.7			24.0		
	Bentazon	93.1	89.1			4.36		
	Carbamazepine	67.4	73.7			8.84		
	Diuron	53.7	65.1			19.2		
	Fenuron	97.5	108			10.2		
	Fluridone	79.2	87.9			10.5		
	Hydrocodone	86.0	93.5			8.33		
	Ibuprofen	112	98.5			12.8		
	Imazapyr	93.7	97.5			3.94		
	Imidacloprid	98.5	105			6.71		
	Linuron	75.9	77.2			1.75		
	MCP	138	132			4.52		
	Naproxen	106	130			20.4		
	Primidone	86.2	99.4			14.2		
	Pyraclostrobin	78.2	88.4			12.2		
	Sucralose	77.3		75.6	96.9			13.5
	Triclopyr	139	133			4.80		
SM 2120 B	Color (true)	102					3.38	
SM 2320 B-97	Total Alkalinity	106					0.239	
SM 2540 C-97	TDS						0.873	
SM 4500 F-C-97	Fluoride	96.1		98.4	96.3			1.92
SM 5310 B-00	Organic Carbon	94.8		92.7	94.1			1.04

Reference Method Descriptions

Method / DoH Cert #	Description	Associated Samples
EPA 180.1 Rev. 2.0 / E31780	Turbidity in aqueous matrices	2009257
EPA 300.0 Rev. 2.1 / E31780	Chloride in aqueous matrices	2009257
EPA 300.0 Rev. 2.1 / E31780	Sulfate in aqueous matrices	2009257
EPA 350.1 Rev. 2.0 / E31780	Ammonia in aqueous matrices as mg N/L	2009258
EPA 351.2 Rev. 2.0 / E31780	Total Kjeldahl Nitrogen in aqueous matrices	2009258
EPA 353.2 Rev. 2.0 / E31780	Nitrite/Nitrate in aqueous matrices as mg N/L	2009258
EPA 365.1 Rev. 2.0 / E31780	Total Phosphorus in aqueous matrices as mg P/L	2009258
EPA 365.1 Rev. 2.0 dissolved / E31780	Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L	2009259
EPA 8321B / E31780	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS	2009272
SM 2120 B / E31780	True Color measured at 450 nm	2009257
SM 2320 B-97 / E31780	Alkalinity in aqueous matrices as mg CaCO ₃ /L	2009257
SM 2540 C-97 / E31780	Total Dissolved Solids in aqueous matrices	2009257

Reference Method Descriptions

Method / DoH Cert #	Description	<u>Associated Samples</u>
SM 2540 D-97 / E31780	Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample	2009257
SM 4500 F-C-97 / E31780	Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)	2009257
SM 5310 B-00 / E31780	Nonpurgeable Organic Carbon in aqueous matrices	2009258

Preparation and Analysis Log

Ref. Method	Received Date	Prep Date/Time	Prepared By	Analysis Date/Time	Analyzed By	Associated Samples
EPA 180.1 Rev. 2.0	07/19/2018			07/19/2018 15:51	Blanca Fach	2009257
EPA 300.0 Rev. 2.1	07/19/2018			07/25/2018 15:32	Lipi Saha	2009257
EPA 350.1 Rev. 2.0	07/19/2018			07/25/2018 13:19	Ping Hua	2009258
EPA 351.2 Rev. 2.0	07/19/2018	07/24/2018 08:13	Adrian Shelby	07/25/2018 09:31	Joseph Suarez	2009258
EPA 353.2 Rev. 2.0	07/19/2018			07/23/2018 13:26	Lauren Bottorf	2009258
EPA 365.1 Rev. 2.0	07/19/2018	07/27/2018 12:35	Sima Feizi	07/30/2018 09:09	Beverly Y. Sanders	2009258
EPA 365.1 Rev. 2.0 dissolved	07/19/2018			07/19/2018 15:50	Julia Storbeck	2009259
EPA 8321B	07/19/2018	07/20/2018 16:30	Mohammad Ghaffari	07/21/2018 15:42	Mohammad Ghaffari	2009272
	07/19/2018	07/25/2018 08:30	Hoor Shaik	07/27/2018 16:27	Juyoung Kim	2009272
	07/19/2018	07/25/2018 08:30	Hoor Shaik	07/28/2018 23:47	Juyoung Kim	2009272
SM 2120 B	07/19/2018			07/19/2018 15:32	Tanya Welborn	2009257
SM 2320 B-97	07/19/2018			07/24/2018 02:14	Dale L. Simmons	2009257
SM 2540 C-97	07/19/2018			07/20/2018 16:46	William L. Brown IV	2009257
SM 2540 D-97	07/19/2018			07/20/2018 17:00	William L. Brown IV	2009257
SM 4500 F-C-97	07/19/2018			07/24/2018 02:14	Dale L. Simmons	2009257
SM 5310 B-00	07/19/2018			07/24/2018 00:58	Megan Treadwell	2009258