

Chemical Analysis Report

CEN-DIST-2018-05-31-01

Florida Department of Environmental Protection
Central Laboratory
2600 Blair Stone Road
Tallahassee, FL 32399-2400
DOH Accreditation E31780

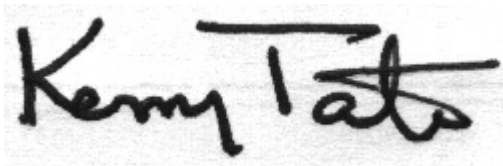
Event Description: **Howell Crk X2 + HA**
Request ID: **RQ-2018-05-28-34**
Customer: **CEN-DIST**
Project ID: **SMP**

Send Reports to:
FL Dept. of Environmental Protection
FL Dept. of Environmental Protection
3319 Maguire Blvd., Suite 232
Orlando, FL 32803-3767
Attn: Mike Linger

For additional information please contact
Colin Wright, Ph.D.
Liang-Tsair Lin, Ph.D.
Kerry Tate, Ph.D.
Dr. rer. nat. Bettina Steinbock
Thekkekalathil Chandrasekhar, Ph.D, QA Officer
Phone (850) 245-8085

Certified by: Kerry Tate, Ph.D., Environmental Administrator

Date Certified: 18-JUN-2018 14:41

A handwritten signature in black ink that reads "Kerry Tate". The signature is written in a cursive, flowing style with a horizontal line above the first name.

Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical groups are included in this report: Nutrients and Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to 1.3×10^3 or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (**) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

Sample Location: Howell Creek @ US of Lake Howell Ln

Collection Date/Time: 05/30/2018 09:25

Field ID: G2CE0138

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
1996248	EPA 180.1 Rev. 2.0	Turbidity	1.8		NTU	P346210	
	EPA 300.0 Rev. 2.1	Chloride	23		mg Cl/L	P346344	
		Sulfate	16		mg SO4/L	P346345	
	SM 2120 B	Color (true)	33	A	PCU	P346197	
	SM 2320 B-97	Total Alkalinity	50	A	mg CaCO3/L	P346303	
	SM 2540 C-97	TDS	125		mg/L	P346475	
	SM 2540 D-97	TSS	3	I	mg/L	P346447	
	SM 4500 F-C-97	Fluoride	0.071	I	mg F/L	P346304	
1996249	EPA 350.1 Rev. 2.0	Ammonia-N	0.047		mg N/L	P346624	
	EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	0.65		mg N/L	P346460	
	EPA 353.2 Rev. 2.0	NO2NO3-N	0.029		mg N/L	P346266	
	EPA 365.1 Rev. 2.0	Total-P	0.034		mg P/L	P346385	
	SM 5310 B-00	Organic Carbon	7.3		mg C/L	P346584	
1996250	EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	0.004	U	mg P/L	P346190	
1996282	EPA 8321B	2,4-D	0.044		ug/L	P346184	
		Bentazon	0.063		ug/L	P346184	MS
		MCP	0.0020	I	ug/L	P346184	
		Triclopyr**	0.0040	U	ug/L	P346184	
		Imidacloprid	0.0051	I	ug/L	P346184	
		Diuron	0.0054	I	ug/L	P346184	
		Pyraclostrobin**	0.0021	I	ug/L	P346184	
		Primidone**	0.0040	U	ug/L	P346184	
		Linuron	0.0040	U	ug/L	P346184	
		Acetaminophen**	0.0080	U	ug/L	P346184	
		Fenuron	0.016	U	ug/L	P346184	
		Imazapyr**	0.014	I	ug/L	P346184	
		Carbamazepine**	4.0E-04	U	ug/L	P346184	
		Fluridone**	0.085		ug/L	P346184	
		Hydrocodone**	8.0E-04	U	ug/L	P346184	
		Sucralose**	0.23		ug/L	P346135	

Ref. Method and Comment:

EPA 300.0 Rev. 2.1: Chloride: Batch matrix spike recoveries for one of two spiked samples are unavailable because of high analyte concentration in the QC sample.

EPA 300.0 Rev. 2.1: Sulfate: Batch matrix spike recoveries for one of two spiked samples are unavailable because of high analyte concentration in the QC sample.

SM 2540 D-97: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

Sample Location: Howell Creek @ 150m US of Lake Howell

Collection Date/Time: 05/30/2018 10:36

Field ID: G2CE0072

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
1996283	EPA 8321B	2,4-D	0.050		ug/L	P346184	
		Bentazon	0.066		ug/L	P346184	MS
		MCP	0.0020	U	ug/L	P346184	
		Triclopyr**	0.0040	U	ug/L	P346184	

Field ID: G2CE0072

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
1996283	EPA 8321B	Imidacloprid	0.0052	I	ug/L	P346184	
		Diuron	0.0053	I	ug/L	P346184	
		Pyraclostrobin**	0.0020	U	ug/L	P346184	
		Primidone**	0.0040	U	ug/L	P346184	
		Linuron	0.0040	U	ug/L	P346184	
		Acetaminophen**	0.0080	U	ug/L	P346184	
		Fenuron	0.016	U	ug/L	P346184	
		Imazapyr**	0.017		ug/L	P346184	
		Carbamazepine**	4.0E-04	U	ug/L	P346184	
		Fluridone**	0.086		ug/L	P346184	
		Hydrocodone**	8.0E-04	U	ug/L	P346184	
		Sucralose**	0.28		ug/L	P346135	

Quality Assurance Report Method Blank Results

Reference Method: EPA 180.1 Rev. 2.0
Batch ID: P346210

Component	Result	Code	Units
Turbidity	0.10	U	NTU

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346344

Component	Result	Code	Units
Chloride	0.20	U	mg Cl/L

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346345

Component	Result	Code	Units
Sulfate	0.20	U	mg SO4/L

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P346624

Component	Result	Code	Units
Ammonia-N	0.002	U	mg N/L

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P346460

Component	Result	Code	Units
Kjeldahl Nitrogen	0.080	U	mg N/L

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P346266

Component	Result	Code	Units
NO2NO3-N	0.004	U	mg N/L

Quality Assurance Report Method Blank Results

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P346385

Component	Result	Code	Units
Total-P	0.002	U	mg P/L

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P346190

Component	Result	Code	Units
O-Phosphate-P	0.004	U	mg P/L

Reference Method: EPA 8321B
Batch ID: P346135

Component	Result	Code	Units
Sucralose	0.010	U	ug/L

Reference Method: EPA 8321B
Batch ID: P346184

Component	Result	Code	Units
2,4-D	0.0020	U	ug/L
Acetaminophen	0.0080	U	ug/L
Bentazon	8.0E-04	U	ug/L
Carbamazepine	4.0E-04	U	ug/L
Diuron	0.0020	U	ug/L
Fenuron	0.016	U	ug/L
Fluridone	4.0E-04	U	ug/L
Hydrocodone	8.0E-04	U	ug/L
Imazapyr	0.0040	U	ug/L
Imidacloprid	0.0020	U	ug/L
Linuron	0.0040	U	ug/L
MCP	0.0020	U	ug/L
Primidone	0.0040	U	ug/L
Pyraclostrobin	0.0020	U	ug/L
Triclopyr	0.0040	U	ug/L

Reference Method: SM 2120 B
Batch ID: P346197

Component	Result	Code	Units
Color (true)	2.5	U	PCU

Reference Method: SM 2320 B-97
Batch ID: P346303

Component	Result	Code	Units
Total Alkalinity	0.65	U	mg CaCO3/L

Reference Method: SM 2540 C-97
Batch ID: P346475

Component	Result	Code	Units
TDS	15	U	mg/L

Quality Assurance Report Method Blank Results

Reference Method: SM 2540 D-97
Batch ID: P346447

Component	Result	Code	Units
TSS	2	U	mg/L

Reference Method: SM 4500 F-C-97
Batch ID: P346304

Component	Result	Code	Units
Fluoride	0.035	U	mg F/L

Reference Method: SM 5310 B-00
Batch ID: P346584

Component	Result	Code	Units
Organic Carbon	0.50	U	mg C/L

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346344

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Chloride	101		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346345

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sulfate	101		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P346624

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Ammonia-N	104		P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P346460

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Kjeldahl Nitrogen	94.2		P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P346266

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
NO2NO3-N	102		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P346385

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
-----------	---------	---------	-----------	----------------

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 365.1 Rev. 2.0

Batch ID: P346385

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total-P	101		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved

Batch ID: P346190

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
O-Phosphate-P	98.6		P	90 - 110

Reference Method: EPA 8321B

Batch ID: P346135

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sucralose	101		P	40 - 150

Reference Method: EPA 8321B

Batch ID: P346184

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2,4-D	81.0		P	40 - 150
Acetaminophen	104		P	30 - 150
Bentazon	74.7		P	30 - 150
Carbamazepine	72.5		P	40 - 150
Diuron	62.7		P	40 - 150
Fenuron	105		P	40 - 150
Fluridone	75.6		P	40 - 150
Hydrocodone	96.3		P	40 - 150
Imazapyr	89.2		P	40 - 150
Imidacloprid	109		P	40 - 160
Linuron	72.7		P	40 - 150
MCPP	86.8		P	40 - 150
Primidone	96.7		P	40 - 150
Pyraclostrobin	69.3		P	40 - 150
Triclopyr	78.4		P	40 - 150

Reference Method: SM 2320 B-97

Batch ID: P346303

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total Alkalinity	104		P	98 - 107

Reference Method: SM 4500 F-C-97

Batch ID: P346304

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Fluoride	95.7		P	91 - 105

Reference Method: SM 5310 B-00

Batch ID: P346584

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Organic Carbon	97.1		P	85 - 115

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346344

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996333	Chloride	105		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346345

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996189	Sulfate	101		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P346624

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1995695	Ammonia-N	99.6	102	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P346460

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996249	Kjeldahl Nitrogen	92.9	95.1	P/P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P346266

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996191	NO2NO3-N	101	102	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P346385

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996295	Total-P	99.8	98.0	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P346190

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996250	O-Phosphate-P	98.1	98.1	P/P	90 - 110

Reference Method: EPA 8321B
Batch ID: P346135

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1995814	Sucralose	104	111	P/P	40 - 150

Reference Method: EPA 8321B
Batch ID: P346184

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996357	2,4-D	66.2	43.6	P/P	40 - 150
1996357	Acetaminophen	128	98.4	P/P	30 - 150
1996357	Bentazon	11.1	3.35	F/F	30 - 150
1996357	Carbamazepine	59.6	57.9	P/P	40 - 150

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 8321B
Batch ID: P346184

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996357	Diuron	45.7	41.0	P/P	40 - 150
1996357	Fenuron	70.7	55.9	P/P	40 - 150
1996357	Fluridone	61.9	56.1	P/P	40 - 150
1996357	Hydrocodone	79.6	76.6	P/P	40 - 150
1996357	Imazapyr	104	99.3	P/P	40 - 150
1996357	Imidacloprid	119	134	P/P	40 - 160
1996357	Linuron	60.5	51.1	P/P	40 - 150
1996357	MCPP	89.8	85.3	P/P	40 - 150
1996357	Primidone	93.0	78.9	P/P	40 - 150
1996357	Pyraclostrobin	81.3	70.8	P/P	40 - 150
1996357	Triclopyr	104	103	P/P	40 - 150

Reference Method: SM 4500 F-C-97
Batch ID: P346304

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996248	Fluoride	95.6	96.1	P/P	91 - 105

Reference Method: SM 5310 B-00
Batch ID: P346584

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
1996054	Organic Carbon	97.9	97.7	P/P	85 - 115

Quality Assurance Report Precision

Reference Method: EPA 180.1 Rev. 2.0
Batch ID: P346210

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996242	Turbidity	5.94	Sample	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346344

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996189	Chloride	0.228	Sample	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P346345

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996189	Sulfate	0.222	Sample	P	0 - 20

Quality Assurance Report Precision

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P346624

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1995695	Ammonia-N	1.82	Spike	P	0 - 20

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P346460

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996249	Kjeldahl Nitrogen	1.46	Spike	P	0 - 20

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P346266

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996191	NO2NO3-N	0.943	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P346385

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996295	Total-P	1.71	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P346190

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996250	O-Phosphate-P	0.0	Spike	P	0 - 20

Reference Method: EPA 8321B
Batch ID: P346135

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1995814	Sucralose	5.36	Spike	P	0 - 30

Reference Method: EPA 8321B
Batch ID: P346184

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996357	2,4-D	10.9	Spike	P	0 - 30
1996357	Acetaminophen	26.2	Spike	P	0 - 30
1996357	Bentazon	20.9	Spike	P	0 - 30
1996357	Carbamazepine	2.85	Spike	P	0 - 30
1996357	Diuron	7.58	Spike	P	0 - 30
1996357	Fenuron	23.5	Spike	P	0 - 30
1996357	Fluridone	8.68	Spike	P	0 - 30
1996357	Hydrocodone	3.88	Spike	P	0 - 30
1996357	Imazapyr	2.21	Spike	P	0 - 30

Quality Assurance Report Precision

Reference Method: EPA 8321B
Batch ID: P346184

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996357	Imidacloprid	7.73	Spike	P	0 - 30
1996357	Linuron	16.8	Spike	P	0 - 30
1996357	MCP	5.07	Spike	P	0 - 30
1996357	Primidone	15.4	Spike	P	0 - 30
1996357	Pyraclostrobin	13.7	Spike	P	0 - 30
1996357	Triclopyr	0.503	Spike	P	0 - 30

Reference Method: SM 2120 B
Batch ID: P346197

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996248	Color (true)	0.474	Sample	P	0 - 20

Reference Method: SM 2320 B-97
Batch ID: P346303

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996248	Total Alkalinity	0.972	Sample	P	0 - 1.6

Reference Method: SM 2540 C-97
Batch ID: P346475

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996252	TDS	2.46	Sample	P	0 - 10

Reference Method: SM 4500 F-C-97
Batch ID: P346304

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996248	Fluoride	0.516	Spike	P	0 - 3.5

Reference Method: SM 5310 B-00
Batch ID: P346584

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
1996054	Organic Carbon	0.171	Spike	P	0 - 20

* Sample, spike and/or laboratory control sample precision (LCS) is reported.
Replicate spike precision may be reported when sample results are below quantifiable levels.

Quality Assurance Report Surrogates

Quality Assurance Report Surrogates

Lab Sample ID: 1996282
Field Sample ID: G2CE0138

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	2,4-D-d3	89.3	P	30 - 160
EPA 8321B	Acetaminophen-d4	130	P	30 - 160
EPA 8321B	Carbamazepine-d10	70.2	P	30 - 160
EPA 8321B	Diuron-d6	70.2	P	30 - 160
EPA 8321B	Primidone-d5	103	P	30 - 160
EPA 8321B	Sucralose-d6	115	P	40 - 160

Lab Sample ID: 1996283
Field Sample ID: G2CE0072

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	2,4-D-d3	96.3	P	30 - 160
EPA 8321B	Acetaminophen-d4	143	P	30 - 160
EPA 8321B	Carbamazepine-d10	77.9	P	30 - 160
EPA 8321B	Diuron-d6	69.3	P	30 - 160
EPA 8321B	Primidone-d5	108	P	30 - 160
EPA 8321B	Sucralose-d6	124	P	40 - 160

Quality Assurance Report Calibration Verification

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Run ID: A84266
Included Lab Sample IDs: 1996250

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
O-Phosphate-P	98.8	98.8	P/P	90 - 110

Reference Method: SM 2120 B
Run ID: A84269
Included Lab Sample IDs: 1996248

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Color (true)	98.7	100	P/P	90 - 115

Reference Method: EPA 180.1 Rev. 2.0
Run ID: A84275
Included Lab Sample IDs: 1996248

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Turbidity	99.5	100	P/P	95 - 105

Reference Method: EPA 8321B
Run ID: A84278
Included Lab Sample IDs: 1996282, 1996283

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
2,4-D	97.0	91.0	P/P	50 - 150
Bentazon	117	104	P/P	50 - 150
MCP	92.7	95.7	P/P	50 - 150
Triclopyr	95.1	87.6	P/P	50 - 160

Quality Assurance Report Calibration Verification

Reference Method: EPA 353.2 Rev. 2.0

Run ID: A84302

Included Lab Sample IDs: 1996249

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
NO2NO3-N	102	102	P/P	90 - 110

Reference Method: SM 2320 B-97

Run ID: A84316

Included Lab Sample IDs: 1996248

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total Alkalinity	102	99.3	P/P	90 - 110

Reference Method: SM 4500 F-C-97

Run ID: A84316

Included Lab Sample IDs: 1996248

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Fluoride	97.6	98.6	P/P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1

Run ID: A84339

Included Lab Sample IDs: 1996248

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Chloride	102	102	P/P	90 - 110
Sulfate	102	101	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A84402

Included Lab Sample IDs: 1996282, 1996283

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Sucralose	98.9	112	P/P	60 - 150

Reference Method: EPA 365.1 Rev. 2.0

Run ID: A84427

Included Lab Sample IDs: 1996249

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total-P	99.0	99.0	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A84432

Included Lab Sample IDs: 1996282, 1996283

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Acetaminophen	134	139	P/P	60 - 150
Carbamazepine	111	105	P/P	60 - 150
Diuron	93.5	91.8	P/P	60 - 150
Fenuron	104	106	P/P	60 - 150
Fluridone	112	116	P/P	60 - 160
Hydrocodone	109	109	P/P	60 - 150
Imazapyr	110	98.6	P/P	50 - 150
Imidacloprid	98.6	107	P/P	60 - 150

Quality Assurance Report Calibration Verification

Reference Method: EPA 8321B

Run ID: A84432

Included Lab Sample IDs: 1996282, 1996283

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Linuron	113	115	P/P	60 - 150
Primidone	106	102	P/P	60 - 150
Pyraclostrobin	98.8	97.7	P/P	60 - 150

Reference Method: SM 5310 B-00

Run ID: A84443

Included Lab Sample IDs: 1996249

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Organic Carbon	97.8	98.0	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0

Run ID: A84463

Included Lab Sample IDs: 1996249

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Kjeldahl Nitrogen	93.2	108	P/P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0

Run ID: A84469

Included Lab Sample IDs: 1996249

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Ammonia-N	107	107	P/P	90 - 110

* Pass/Fail determinations are made for each bracketing calibration verification check.
 Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.
 Where they are different, both control limits are provided.

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery	MS % Recovery	LCS	Precision SMP	MS
EPA 180.1 Rev. 2.0	Turbidity				5.94	
EPA 300.0 Rev. 2.1	Chloride	101	105		0.228	
	Sulfate	101	101		0.222	
EPA 350.1 Rev. 2.0	Ammonia-N	104	99.6	102		1.82
EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	94.2	92.9	95.1		1.46
EPA 353.2 Rev. 2.0	NO ₂ NO ₃ -N	102	101	102		0.943
EPA 365.1 Rev. 2.0	Total-P	101	99.8	98.0		1.71
EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	98.6	98.1	98.1		0.0
EPA 8321B	2,4-D	81.0	66.2	43.6		10.9
	Acetaminophen	104	128	98.4		26.2
	Bentazon	74.7	11.1	3.35		20.9
	Carbamazepine	72.5	59.6	57.9		2.85
	Diuron	62.7	45.7	41.0		7.58
	Fenuron	105	70.7	55.9		23.5
	Fluridone	75.6	61.9	56.1		8.68
	Hydrocodone	96.3	79.6	76.6		3.88

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery	MS % Recovery		LCS	Precision	MS
						SMP	
EPA 8321B	Imazapyr	89.2	104	99.3			2.21
	Imidacloprid	109	119	134			7.73
	Linuron	72.7	60.5	51.1			16.8
	MCPP	86.8	89.8	85.3			5.07
	Primidone	96.7	93.0	78.9			15.4
	Pyraclostrobin	69.3	81.3	70.8			13.7
	Sucralose	101	104	111			5.36
	Triclopyr	78.4	104	103			0.503
SM 2120 B	Color (true)					0.474	
SM 2320 B-97	Total Alkalinity	104				0.972	
SM 2540 C-97	TDS					2.46	
SM 4500 F-C-97	Fluoride	95.7	95.6	96.1			0.516
SM 5310 B-00	Organic Carbon	97.1	97.9	97.7			0.171

Reference Method Descriptions

Method / DoH Cert #	Description	Associated Samples
EPA 180.1 Rev. 2.0 / E31780	Turbidity in aqueous matrices	1996248
EPA 300.0 Rev. 2.1 / E31780	Chloride in aqueous matrices	1996248
EPA 300.0 Rev. 2.1 / E31780	Sulfate in aqueous matrices	1996248
EPA 350.1 Rev. 2.0 / E31780	Ammonia in aqueous matrices as mg N/L	1996249
EPA 351.2 Rev. 2.0 / E31780	Total Kjeldahl Nitrogen in aqueous matrices	1996249
EPA 353.2 Rev. 2.0 / E31780	Nitrite/Nitrate in aqueous matrices as mg N/L	1996249
EPA 365.1 Rev. 2.0 / E31780	Total Phosphorus in aqueous matrices as mg P/L	1996249
EPA 365.1 Rev. 2.0 dissolved / E31780	Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L	1996250
EPA 8321B / E31780	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS	1996282, 1996283
SM 2120 B / E31780	True Color measured at 450 nm	1996248
SM 2320 B-97 / E31780	Alkalinity in aqueous matrices as mg CaCO ₃ /L	1996248
SM 2540 C-97 / E31780	Total Dissolved Solids in aqueous matrices	1996248
SM 2540 D-97 / E31780	Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample	1996248
SM 4500 F-C-97 / E31780	Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)	1996248
SM 5310 B-00 / E31780	Nonpurgeable Organic Carbon in aqueous matrices	1996249

Preparation and Analysis Log

Ref. Method	Received Date	Prep Date/Time	Prepared By	Analysis Date/Time	Analyzed By	Associated Samples
EPA 180.1 Rev. 2.0	05/31/2018			05/31/2018 15:23	William L. Brown IV	1996248
EPA 300.0 Rev. 2.1	05/31/2018			06/04/2018 18:54	Lipi Saha	1996248
EPA 350.1 Rev. 2.0	05/31/2018			06/08/2018 12:12	Adrian Shelby	1996249
EPA 351.2 Rev. 2.0	05/31/2018	06/06/2018 10:40	Adrian Shelby	06/08/2018 13:41	Joseph Suarez	1996249
EPA 353.2 Rev. 2.0	05/31/2018			06/01/2018 12:59	Lauren Bottorf	1996249
EPA 365.1 Rev. 2.0	05/31/2018	06/05/2018 11:00	Sima Feizi	06/07/2018 11:39	Beverly Y. Sanders	1996249
EPA 365.1 Rev. 2.0 dissolved	05/31/2018			05/31/2018 13:24	Megan Treadwell	1996250
EPA 8321B	05/31/2018	06/01/2018 10:00	Hoor Shaik	06/01/2018 22:08	Juyoung Kim	1996282
	05/31/2018	06/01/2018 10:00	Hoor Shaik	06/01/2018 22:42	Juyoung Kim	1996283
	05/31/2018	06/01/2018 10:00	Hoor Shaik	06/03/2018 13:54	Juyoung Kim	1996282
	05/31/2018	06/01/2018 10:00	Hoor Shaik	06/03/2018 14:29	Juyoung Kim	1996283
	05/31/2018	06/01/2018 16:00	Hoor Shaik	06/05/2018 05:42	Mohammad Ghaffari	1996282
	05/31/2018	06/01/2018 16:00	Hoor Shaik	06/05/2018 06:01	Mohammad Ghaffari	1996283
SM 2120 B	05/31/2018			05/31/2018 14:53	Tanya Welborn	1996248
SM 2320 B-97	05/31/2018			06/01/2018 15:26	Dale L. Simmons	1996248
SM 2540 C-97	05/31/2018			06/01/2018 15:40	William L. Brown IV	1996248
SM 2540 D-97	05/31/2018			06/01/2018 14:30	William L. Brown IV	1996248
SM 4500 F-C-97	05/31/2018			06/01/2018 15:19	Dale L. Simmons	1996248
SM 5310 B-00	05/31/2018			06/07/2018 01:04	Megan Treadwell	1996249