

Log-in Checklist

RQ- 2019-07-15-11

Login Station ID: #5

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 7/ 17 /19 @ 10:25

Cooler Temperature*	Samples Frozen	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # Damaged waybills only
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
1.3				18		✓			7751 8779 7554
1.3				17		✓			7751 8780 5707

* HNO₃ and Formalin persevered samples do **NOT** have a temperature requirement. For all others, if the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX and microbiology), or if Evidence Seal is damaged. Identify the containers in the affected cooler(s) on back of this form. **DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C) without login confirmation from customer for samples requiring ice preservation. An NCR still is required.**

**Chain of Custody/ Field Sheet(s) Included? Yes ✓ No

Micro-Biology Overflow Chain of Custody/ FieldSheet(s) Included? Yes ✓ No

****Note:** If "No" is checked below, fill out the back of this form (Field ID, Test IDs, etc.) and generate an NCR.

CONTAINER CHECK

**Evidence Tape on Bottles? Yes No ✓ If yes, is it intact? Yes No

**Caps on tight? Yes ✓ No **Containers intact? Yes ✓ No

**Sufficient Sample Volume: Yes ✓ No

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes ✓ No Init: KH

Chlorine detected? (One container checked per Field ID)

Yes No Init:

If "YES", list affected Field IDs and Test IDs below.

Field ID	List TestID(s) where Chlorine was Detected, an NCR is required.

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ✓ No NA Init: KK

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes No NA ✓ Init: KH

Coolers Unpacked/Checked by: KK Date: 7/ 17 /19

NCRs (Y/N)? N

Event ID: Bmap 1
NE-DIST-2019-07-17-01 (SMP)
 Date Received: 17-JUL-2019 10:25

NCR #

Figure 1. The effect of the concentration of the solution on the adsorption of the dye.

• Samples with Incorrect pH Preservation

Field ID	Bottle Test ID(s)	pH	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle TestID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_07_2018 EXP:12/28/19
pH Test Strips 0 – 6 Lot #	
pH Paper 0 – 3 Lot #	220416A EXP:7/30/20
pH Paper 0 – 13 Lot #	222516 EXP:9/15/19
Chlorine Test Strips Lot #	091417V EXP:9/2021

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes X No X

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes_____If No

no, were samples shipped on dry ice? Yes No

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Bmap 1

Central Laboratory Submittal Form

last revised Jan 25, 2018

Customer: NE-DIST

Requester: Jeremy M. Parrish

Field Report Prepared By: A. Kalmbacher

Project ID: SMP

Collected By: B. Davis, K. ApplebySampling Agency: FDEP/NE ROC

Location		☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>7-16-2019</u> Time <u>1025</u>	<u>Eastern</u> Central	Composite end Date _____ Time _____	Bottle Group(s) (See pg 2)
Field	WIN ID/Field ID:  20030082	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <u>7.18</u>	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN/S	BUTCHER PEN CR AT CONFEDERATE	Temp (C) <u>30.2</u>	pH <u>7.47</u>	Sample Depth <u>0.3</u>	☐ ft ☒ m	Sp. Conductance (umho/cm) <u>3169</u>
Latitude	☐ dd ☐ dms	Salinity (ppt) <u>1.65</u>	Comments			
Location		☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>7-16-2019</u> Time <u>1155</u>	<u>Eastern</u> Central	Composite end Date _____ Time _____	Bottle Group(s)
Field ID	WIN ID/Field ID:  20030958	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <u>2.40</u>	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
WIN/STORET	CRAIG CR. 100m DOWN FROM FOOTBRIDGE IN PARK	Temp (C) <u>30.1</u>	pH <u>7.08</u>	Sample Depth <u>0.2</u>	☐ ft ☒ m	Sp. Conductance (umho/cm) <u>3595</u>
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) <u>1.87</u>	Comments	
Lc	Field ID:  20030958 DUP	☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>7-16-2019</u> Time <u>1200</u>	<u>Eastern</u> Central	Composite end Date _____ Time _____	Bottle Group(s)
Fi	Location: CRAIG CR. 100m DOWN FROM FOOTBRIDGE IN PARK	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <u>2.40</u>	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
W	WIN ID:  20030958	Temp (C) <u>30.1</u>	pH <u>7.08</u>	Sample Depth <u>0.2</u>	☐ ft ☒ m	Sp. Conductance (umho/cm) <u>3595</u>
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) <u>1.87</u>	Comments	
CRAIG CR. 100m DOWN FROM FOOTBRIDGE IN PARK		☐ Comp ☒ Grab	Collection (comp begin or grab) Date <u>7-16-2019</u> Time <u>1205</u>	<u>Eastern</u> Central	Composite end Date _____ Time _____	Bottle Group(s)
Field ID:	 FB 07162019	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <u>7.18</u>	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
Latitude		☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments

Relinquished By: <u>A. Kalmbacher</u>	Date/Time: <u>7-16-2019</u> <u>1445</u>	Shipping Method: <u>Fed Ex</u>	Number of Coolers Shipped: <u>2</u>	Received By: <u>KH</u>	Date/Time: <u>7-16-2019</u> <u>10:25</u>
---------------------------------------	--	--------------------------------	-------------------------------------	------------------------	---

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	ALKALINITY TURBIDITY W-BR-IC W-F W-TSS						
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	
	CHLSUITE-W						
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2 Sent to Contract Lab
	NE-ALS-ENQ						
Group: A	Bottle Type:	QPCR-P-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	PCR-HF183						
Group: A	Bottle Type:	BG-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	W-E8321-DI W-E8321-MS						
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	2
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC						
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	2
	W-PO4-F						
Group: B	Bottle Type:	P-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2
	ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS						
Group: B	Bottle Type:	BP-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab	2

Florida Department of Environmental Protection

Central Laboratory Submittal Form

Bmap 1

last revised Jan 25, 2018

Customer: NE-DIST

Requester: Jeremy M. Parrish

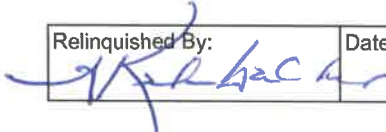
Field Report Prepared By:

Project ID: SMP

Collected By:

Sampling Agency:

Location	WIN ID/Field ID:		20030760	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 7-16-2019 Time 1050	Eastern Central	Composite end Date Time	Bottle Group(s) (See pg 2)	
Field ID	BUTCHER PEN CR AT WESCONNETT			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 2.96	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET				Temp (C) 26.8	pH 7.11	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 353	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.17	Comments				C
Location	WIN ID/Field ID:		20030653	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 7-16-2019 Time 0950	Eastern Central	Composite end Date Time	Bottle Group(s)	
Field ID	TERRAPIN CR @ Faye Rd.			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET				Temp (C)	pH	Sample Depth	☐ ft ☒ m	Sp. Conductance (umho/cm)	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments DID NOT SAMPLE - NO FLOW				B
Location	WIN ID/Field ID:		20030891	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 7-16-2019 Time 1305	Eastern Central	Composite end Date Time	Bottle Group(s)	
Field ID	GOODBYS CR ABOVE WEST BRANCH AT SAN CLERC			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 4.07	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #				Temp (C) 27.0	pH 7.17	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 357	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.17	Comments				B
Location	WIN ID/Field ID:		20030793	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 7-16-2019 Time 1235	Eastern Central	Composite end Date Time	Bottle Group(s)	
Field ID	CRAIG CR @ HENDRICKS AVE			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 2.36	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #				Temp (C) 27.5	pH 7.16	Sample Depth 0.15	☐ ft ☒ m	Sp. Conductance (umho/cm) 456	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.22	Comments				D

Relinquished By:	Date/Time	Shipping Method	Number of Coolers Shipped:	Received By:	Date/Time
	7-16-2019 1445	FedEx	2	AK	7-17-19/10:25

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-BR-IC W-F W-TSS					
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CHLSUITE-W					
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	NE-ALS-ENQ					
Group: A	Bottle Type:	QPCR-P-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	PCR-HF183					
Group: A	Bottle Type:	BG-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	W-E8321-DI W-E8321-MS					
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC					
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab _____
	W-PO4-F					
Group: B	Bottle Type:	P-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS					
Group: B	Bottle Type:	BP-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____

Bmap 1

Central Laboratory Submittal Form

last revised Jan 25, 2018

Customer: NE-DIST

Requester: Jeremy M. Parrish

Field Report Prepared By:

Project ID: SMP

Collected By:

Sampling Agency:

WIN ID/Field ID:		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 7-16-2019 Time 0855	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s) (See pg 2)
20030848		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 5.03	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)
NW TRIBUTARY TO OPEN CR AT HODGES		Temp (C) 26.5	pH 6.96	Sample Depth 0.2	☐ ft ☒ m	Sp. Conductance (umho/cm) 470
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) 0.24	Comments			
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time	☐ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt)	Comments			
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time	☐ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt)	Comments			
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time	☐ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt)	Comments			
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time	☐ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #		Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt)	Comments			

Relinquished By:	Date/Time	Shipping Method	Number of Coolers Shipped:	Received By:	Date/Time
	7-16-2019 1445	FedEx	2	KV	7.17.19 / 10:25

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-BR-IC W-F W-TSS					
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CHLSUITE-W					
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	NE-ALS-ENQ					
Group: A	Bottle Type:	QPCR-P-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	PCR-HF183					
Group: A	Bottle Type:	BG-500ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	W-E8321-DI W-E8321-MS					
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC					
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab _____
	W-PO4-F					
Group: B	Bottle Type:	P-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS					
Group: B	Bottle Type:	BP-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____

Group: B	Bottle Type: CHLSUITE-W	BP-1L	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>2</u>
Group: B	Bottle Type: NE-ALS-ECQ	P-250ML-WI-THI	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>2</u> ↳ Sent to Contract Lab
Group: B	Bottle Type: PCR-HF183	QPCR-P-500ML	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>2</u>
Group: B	Bottle Type: W-E8321-DI W-E8321-MS	BG-500ML	# of Bottles: 3	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>2</u>
Group: B	Bottle Type: W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC	P-500ML	# of Bottles: 3	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab <u>2</u>
Group: B	Bottle Type: W-PO4-F	P-125ML	# of Bottles: 3	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab <u>2</u>
Group: C	Bottle Type: ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>1</u>
Group: C	Bottle Type: CHLSUITE-W	BP-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>1</u>
Group: C	Bottle Type: NE-ALS-ECQ	P-250ML-WI-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab <u>1</u> ↳ Sent to contract lab
Group: C	Bottle Type: W-ICP	P-500ML	# of Bottles: 1	Preservative:	HNO3	Enter Number of Bottles Sent to Lab <u>1</u>

Group: C	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	HNO3	Enter Number of Bottles Sent to Lab	1
W-ICPMS							
Group: C	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	1
W-NH3							
W-NO2NO3							
W-S-A-TP							
W-TKN							
W-TOC							
Group: C	Bottle Type:	P-125ML	# of Bottles: 1	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	1
W-PO4-F							
Group: D	Bottle Type:	P-250ML-WI-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
NE-ALS-ENQ							
Group: D	Bottle Type:	QPCR-P-500ML	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
PCR-HF183							
Group: D	Bottle Type:	BG-500ML	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
W-E8321-DI							
W-E8321-MS							
Group: E	Bottle Type:	P-250ML-WI-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
NE-ALS-ECQ							
Group: F	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	
ALKALINITY							
TURBIDITY							
W-BR-IC							
W-CL-IC							
W-F							
W-TSS							
Group: F	Bottle Type:	BG-500ML	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
W-E8321-DI							
W-E8321-MS							
Group: F	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	1
W-NH3							
W-NO2NO3							

Group: F	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-S-A-TP					
	W-TKN					
	W-TOC					

Group: F	Bottle Type:	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-PO4-F					

CHAIN OF CUSTODY / LABORATORY ANALYSIS REQUEST FORM

9143 Philips Highway, Suite 200 Jacksonville, FL 32256 / Ph(904) 739-2277 / FAX (904) 739-2011

Page 1 of 1

SR #

ALS Contact: Jerry Allen

Client Name		Project Number	
FDEP-NE ROC	RQ-2018-		
Report To	Report CC		
Dep-Overflowmicro@dep.state.fl.us			
Company/Address			
8800 Baymeadows Way W			
Jacksonville, Fl 32256			
Phone #	FAX #		
904-256-1541			
Sampler's Signature	Sampler's Printed Name		
[Signature]	Kimberly Appleby		
ANALYSIS REQUESTED (Include Method Number and Container Preservative)			
Preservative Key			
0. None			
1. HCL			
2. HNO3			
3. H2SO4			
4. NaOH			
5. Zn. Acetate			
6. MeOH			
7. NaHSO4			
8. Other			
REMARKS			
CLIENT SAMPLE ID		LAB ID	
DATE TIME		Matrix	
20030848		SW	
20030082		SW	
20030760		SW	
20030958		SW	
20030958-DUP		SW	
20030793		SW	
20030891		SW	
Special Instructions/Comments: Email Report to: Dep-Overflowmicro@dep.state.fl.us		TURNAROUND REQUIREMENTS	
[Signature]		RUSH (SURCHARGES APPLY)	
		X STANDARD	
		REQUESTED FAX DATE	
		N/A	
		REQUESTED REPORT DATE	
		N/A	
REPORT REQUIREMENTS		INVOICE INFORMATION	
I. Results Only		P.O. # B10739	
II. Results + QC Summaries		Bill to:	
(LCS, DUP, MS/MSD as required)			
III. Results + QC and Calibration Summaries			
IV. Data Validation Report with Raw Data			
Edata Yes No			
Relinquished By		Received By	
Signature [Signature]		Signature [Signature]	
Printed Name Kimberly Appleby		Printed Name Benoit Bruneau	
Firm FDEP		Firm ALS	
Date/Time 7/16/19 1340		Date/Time 7/16/19 1340	

Date of Request: 03-JUN-2019
 Created By: PARRISH_J On: 03-JUN-2019
 Modified By: JASROTIA_P On: 26-JUN-2019
 Customer: NE-DIST
 Project: SMP
 Division: Division of Environmental Assessment and Restoration
 District: Northeast District
 Sampling Event: Bmap 1

Send Coolers To:

Phone: 904-256-1700
 8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256
 Attn: Jeremy Parrish

Program Module Number:

Priority: 3
 Event Status: S
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 25-JUN-2019
 Biology Request Reviewed By: JASROTIA_P On: 26-JUN-2019
 Sampling Kit Required: YES Ship on: 05-JUL-2019
 Sampling Kit Shipped: YES On: 03-JUL-2019
 Sampling Kit Packed By: SHAIK_A
 Preservatives Needed: NO
 Date to Receive Samples: 15-JUL-2019
 Received By:

Send Final Report To:

8800 Baymeadows Way West
 Suite 100
 Jacksonville, FL 32256
 Attn: Jeremy Parrish

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments: Group A: (Surf-Salt) Nutrients, Bacteria, Tracer, Marker
 Group B: (Surf-Fresh) Nutrients, Bacteria, Tracer, Marker
 Group C: (Surf-Fresh) Nutrients, Metals, Bacteria
 Group D: (Surf-Salt) Bacteria, Tracer, Marker
 Group E: (Surf-Fresh) Bacteria,
 Group F: (Blank) Nutrients, Tracer

NE-ALS-ENQ
 NE-ALS-ECQ
 Packing Notes:
 None

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-1L	Number of Bottles: 2	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO ₃ /L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-BR-IC	Template: DEFAULT	(EPA 300.0) Bromide in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WI-THI	Number of Bottles: 2	Preserved With: ICE
NE-ALS-ENQ	Template: DEFAULT	(ASTM D650399) Enterococci by Enterolert/QT by ALS in Jacksonville
Bottle Type: QPCR-P-500ML	Number of Bottles: 2	Preserved With: ICE
PCR-HF183	Template: DEFAULT	(SOP-PCR-1.0) Detection and quantification of human-specific HF183 Bacteroides genetic marker with quantitative polymerase chain reaction
Bottle Type: BG-500ML	Number of Bottles: 2	Preserved With: ICE
W-E8321-DI	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H ₂ SO ₄

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group B (Water) With 3 Samples:

Bottle Type: P-250ML-WI-THI	Number of Bottles: 3	Preserved With: ICE
NE-ALS-ECQ	Template: DEFAULT	(SM 9223 B Quanti-Tray) E. coli by Colilert/QT by ALS in Jacksonville
Bottle Type: QPCR-P-500ML	Number of Bottles: 3	Preserved With: ICE
PCR-HF183	Template: DEFAULT	(SOP-PCR-1.0) Detection and quantification of human-specific HF183 Bacteroides genetic marker with quantitative polymerase chain reaction
Bottle Type: BG-500ML	Number of Bottles: 3	Preserved With: ICE
W-E8321-DI	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 3	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 3	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: P-1L	Number of Bottles: 3	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 3	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry

Bottle Group C (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WI-THI	Number of Bottles: 1	Preserved With: ICE
NE-ALS-ECQ	Template: DEFAULT	(SM 9223 B Quanti-Tray) E. coli by Colilert/QT by ALS in Jacksonville
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3

Bottle Group C (Water) With 1 Samples:

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Barium		
Calcium		
Iron		
Magnesium		
Potassium		
Sodium		
Zinc		
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects
*Boron		
Aluminum		
Antimony		
Arsenic		
Cadmium		
Chromium		
Copper		
Lead		
Nickel		
Selenium		
Silver		
Thallium		

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group D (Water) With 1 Samples:

Bottle Type: P-250ML-WI-THI	Number of Bottles: 1	Preserved With: ICE
NE-ALS-ENQ	Template: DEFAULT	(ASTM D650399) Enterococci by Enterolert/QT by ALS in Jacksonville
Bottle Type: QPCR-P-500ML	Number of Bottles: 1	Preserved With: ICE
PCR-HF183	Template: DEFAULT	(SOP-PCR-1.0) Detection and quantification of human-specific HF183 Bacteroides genetic marker with quantitative polymerase chain reaction
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: ICE
W-E8321-DI	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS

Bottle Group E (Water) With 1 Samples:

Bottle Type: P-250ML-WI-THI	Number of Bottles: 1	Preserved With: ICE
NE-ALS-ECQ	Template: DEFAULT	(SM 9223 B Quanti-Tray) E. coli by Colilert/QT by ALS in Jacksonville

Bottle Group F (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-BR-IC	Template: DEFAULT	(EPA 300.0) Bromide in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BG-500ML	Number of Bottles: 1	Preserved With: ICE
W-E8321-DI	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
W-E8321-MS	Template: DEFAULT	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L

Bottle Group F (Water) With 1 Samples:

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.