

RQ- 2019-03-11-45

Log-in Checklist

Login Station ID: #4

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 03/14/2019 @ 10:35

Cooler Temperature*	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # (fill out only if waybill copy is damaged)
	HNO ₃	Formalin		Present?		*Intact?		
				Yes	No	Yes	No	
2.7°C			8		X			4781 8777 3579

* HNO₃ and Formalin persevered samples do **NOT** have a temperature requirement. For all others, if the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX), or if Evidence Seal is damaged. Identify the containers in the affected cooler(s) on back of this form.

****Note:** If "No" is checked below, fill out the back of this form (Field ID, Test IDs, etc.) and generate an NCR.

**Chain of Custody/ Field Sheet(s) Included? Yes ☒ No ☐

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes ☒ No ☐ Date 03/14/19

CONTAINER CHECK

**Evidence Tape on Bottles? Yes ☐ No ☒ If yes, is it intact? Yes ☐ No ☐

**Caps on tight? Yes ☒ No ☐ **Containers intact? Yes ☒ No ☐

**Sufficient Sample Volume: Yes ☒ No ☐

CHLORINE CHECK REQUIRED? (Blue dot on container) Yes ☐ No ☒ Init: 7R

Check the Box marked "Yes" or "No" for the Presence of Chlorine. If Cl detected, an NCR is required.					
Analysis	Yes	No	Analysis	Yes	No
W-1,4 DIOX			W-PC-AA-SF		
W-E8321-DI, -MS, -21			W-NP-AA-SF		
W-BNA (-625, -R)			W-PDQUAT		
W-CARB-AA (-CAB-AA-R)			W-PCL-SQ-R		
W-U2060-MS			W-TR-TQ		
W-PCB-R			W-CT-CI-R		
W-PAH (-R)			W-PSNP-TQ		
W-PFAS-MS					

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ☒ No ☐ NA ☐ Init: 7R

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes ☐ No ☐ NA ☒ Init: 7R

Coolers Unpacked/Checked by: Tyler Reynolds

Date: 03/14/2019

NCRs (Y/N)? N

Sawgrass / 3 Forks
Event ID CEN-DIST-2019-03-14-01 (SMP)

NCR # _____

Date Received: 14-MAR-2019 10:35

Federal Express REF-4-6-1

Log-in Checklist

Samples with Incorrect pH Preservation or presence of Chlorine

Field ID	Bottle Test ID(s)	pH / Cl	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_04_2018
pH Paper 0.0 – 3.0 Lot #	
pH Paper 0 – 13 Lot #	222516EXP:09/15/2019
Chlorine Test Strips Lot #	091417V EXP:09/2021

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No X

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Florida Department of Environmental Protection

Central Laboratory Submittal Form

Customer: CEN-DIST

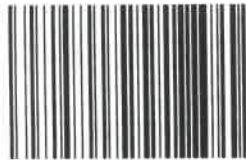
Project ID: SMP

Requester: Michael Linger

Field Report Prepared By: Katie March

Collected By: Luf Roman

Sampling Agency: 21FCEN

Location	WIN ID / Field ID →		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 3/13/19 Time 1243	Eastern Central	Composite end Date	Time	Bottle Group(s) (See pg 2)
Field ID	SJR at inlet to Little Lake Sawgrass		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 5.89	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	A
WIN/STORET			Temp (C) 22.89	pH 7.19	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 595	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.28	Comments			
Location	WIN ID / Field ID →		☐ Comp ☒ Grab	Collection (comp begin or grab) Date 3/13/19 Time 1220	Eastern Central	Composite end Date	Time	Bottle Group(s)
Field ID	SJR upstream of Lake Hellen Blazes		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 5.53	☒ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	A
WIN/STORET			Temp (C) 22.84	pH 7.13	Sample Depth 0.3	☐ ft ☒ m	Sp. Conductance (umho/cm) 524	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 0.25	Comments			
Location			☐ Comp ☐ Grab	Collection (comp begin or grab) Date	Eastern Central	Composite end Date	Time	Bottle Group(s)
Field ID			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #			Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments			
Location			☐ Comp ☐ Grab	Collection (comp begin or grab) Date	Eastern Central	Composite end Date	Time	Bottle Group(s)
Field ID			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen	☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
WIN/STORET #			Temp (C)	pH	Sample Depth	☐ ft ☐ m	Sp. Conductance (umho/cm)	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt)	Comments			

Relinquished By: K March	Date/Time: 3/13/19 1600	Shipping Method: FedEx	Number of Coolers Shipped: 1	Received By: Tyler R.	Date/Time: 03/14/19 @ 10:35
--------------------------	-------------------------	------------------------	------------------------------	-----------------------	-----------------------------

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>2</u>
	ALKALINITY						
	TURBIDITY						
	W-CL-IC						
	W-COLOR						
	W-F						
	W-SO4-IC						
	W-TDS						
	W-TSS						
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>2 to contract lab</u>
	CD-ERD-EC						
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>2</u>
	CHLSUITE-W						
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	<u>2</u>
	W-NH3						
	W-NO2NO3						
	W-S-A-TP						
	W-TKN						
	W-TOC						
				H2SO4 LOT# SA8197000 EXP: 07/16/2019			
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	<u>2</u>
	W-PO4-F						

Date of Request: 21-FEB-2019
 Created By: LINGER_M On: 21-FEB-2019
 Modified By: JASROTIA_P On: 26-FEB-2019
 Customer: CEN-DIST
 Project: SMP
 Division:
 District: Central District
 Sampling Event: Sawgrass / 3 Forks

Send Coolers To:

Phone: 407-894-4180
 FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Mike Linger

Send Final Report To:

FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Mike Linger

Program Module Number: 1306
 Priority: 3
 Event Status: S
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 25-FEB-2019
 Biology Request Reviewed By: JASROTIA_P On: 26-FEB-2019
 Sampling Kit Required: YES Ship on: 01-MAR-2019
 Sampling Kit Shipped: YES On: 28-FEB-2019
 Sampling Kit Packed By: REAVES_S
 Preservatives Needed: NO
 Date to Receive Samples: 11-MAR-2019
 Received By:

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments:

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-1L	Number of Bottles: 2	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: P-250ML-WI-THI	Number of Bottles: 2	Preserved With: ICE
CD-ERD-EC	Template: DEFAULT	(EPA 1603) Escherichia coli by membrane filter method by ERD Laboratory
Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L