

Login Checklist

RQ-2019.07.15.28

Login Station ID: #1

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 9/10/19 10:15

Cooler Temperature*	Samples Frozen	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # Damaged waybills only
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
1.3				5		✓		4751 8781 3290	

*All samples received on ice unless otherwise noted. If the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX and microbiology), received without ice, or if Evidence Seal is damaged; identify the containers in the affected cooler(s) on back of this form. HNO₃ and Formalin preserved samples do **NOT** have a temperature requirement. **DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C) without login confirmation from customer for samples requiring ice preservation; An NCR still is required.**

**Chain of Custody/ Field Sheet(s) Included? Yes ✓ No

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes No ✓

****Note:** If "No" is checked below, fill out the back of this form (Field ID, Test IDs, etc.) and generate an NCR.

CONTAINER CHECK

**Evidence Tape on Bottles? Yes No ✓ If yes, is it intact? Yes No
 **Caps on tight? Yes ✓ No **Containers intact? Yes ✓ No
 **Sufficient Sample Volume: Yes ✓ No

CHLORINE CHECK REQUIRED? (Blue dot on container) Yes No ✓ Init:

Chlorine detected? (One container checked per Field ID) Yes No Init:

If "YES", list affected Field IDs and Test IDs below.

Field ID	List TestID(s) where Chlorine was Detected, an NCR is required.

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ✓ No NA Init:
 **W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes No NA ✓ Init:
 Coolers Unpacked/Checked by: Date: 9/10/19 NCRs (Y/N)? N

Event ID: SMP LVI Blue Pond Spring Lake
 NW-DIST-2019-09-10-01 (SMP)

NCR #

Page 1 of 2, 09/12/2019, 10:15 AM Date Received: 10-SEP-2019 10:15

Login Checklist

Samples with Incorrect pH Preservation

Field ID	Bottle TestID(s)	pH	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle TestID(s)

Bottles Not Intact

Field ID	Bottle TestID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle TestID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_01_2018 EXP:04/29/2020
pH Test Strips 0 – 6 Lot #	213316AV EXP:05/15/2020
pH Paper 0 – 3 Lot #	N/A
pH Paper 0 – 13 Lot #	215517 EXP: 06/01/2020
Chlorine Test Strips Lot #	8261 EXP: 07/30/2021

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No ✓

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check(W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Florida Department of Environmental Protection

Central Laboratory Submittal Form

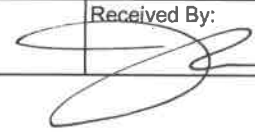
Customer: NW-DIST

Project ID: SMP

Requester: Michael King

Collected By: U. ClarkField Report Prepared By: M. ClarkSampling Agency: FLPNS-NW RPL

Location		☐ Comp ☒ Grab		Collection (comp begin or grab) Date <u>9/7/19</u> Time <u>11:18</u>		Eastern Central		Composite end Date Time		Bottle Group(s) (See pg 2)	
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☒ mg/L ☐ % sat		Total Res. Chlorine (mg/L)		A	
WIN/STI		Temp (C) <u>31.0</u>		pH <u>4.92</u>		Sample Depth <u>0.3</u>		Sp. Conductance (umho/cm) <u>14</u>			
Latitude		☐ dd ☐ dms		Salinity (ppt) <u>0.00</u>		Comments					
Longitude		☐ dd ☐ dms									
Location		☐ Comp ☐ Grab		Collection (comp begin or grab) Date Time		Eastern Central		Composite end Date Time		Bottle Group(s)	
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C)		pH		Sample Depth		Sp. Conductance (umho/cm)			
Latitude		☐ dd ☐ dms		Salinity (ppt)		Comments					
Longitude		☐ dd ☐ dms									
Location		☐ Comp ☐ Grab		Collection (comp begin or grab) Date Time		Eastern Central		Composite end Date Time		Bottle Group(s)	
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C)		pH		Sample Depth		Sp. Conductance (umho/cm)			
Latitude		☐ dd ☐ dms		Salinity (ppt)		Comments					
Longitude		☐ dd ☐ dms									
Location		☐ Comp ☐ Grab		Collection (comp begin or grab) Date Time		Eastern Central		Composite end Date Time		Bottle Group(s)	
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
WIN/STORET #		Temp (C)		pH		Sample Depth		Sp. Conductance (umho/cm)			
Latitude		☐ dd ☐ dms		Salinity (ppt)		Comments					
Longitude		☐ dd ☐ dms									

Relinquished By: <u>F. Buera</u>	Date/Time <u>9/9/19 14:00</u>	Shipping Method <u>FEDEX</u>	Number of Coolers Shipped: <u>1</u>	Received By: 	Date/Time <u>9/10/19 10:15</u>
-------------------------------------	----------------------------------	---------------------------------	--	---	-----------------------------------

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	ALKALINITY						
	TURBIDITY						
	W-CL-IC						
	W-COLOR						
	W-F						
	W-SO4-IC						
	W-TDS						
	W-TSS						
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	CHLSUITE-W						
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	HNO3	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-ICP			HNO3			
	W-ICPMS			LOT# NA9099030			
				EXP: 04/09/20			
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-NH3						
	W-NO2NO3						
	W-S-A-TP			H2SO4			
	W-TKN			LOT# SA9010030			
	W-TOC			EXP: 04/10/2020			
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	<u>1</u>
	W-PO4-F						

Date of Request: 18-JUN-2019
 Created By: KING_M On: 18-JUN-2019
 Modified By: SWANSON_C On: 25-JUN-2019
 Customer: NW-DIST
 Project: SMP
 Division:
 District: Northwest District
 Sampling Event: SMP LVI Blue Pond Spring Lake

Send Coolers To:

Phone: 850-595-0605
 160 Government Center
 Suite 208
 Pensacola, FL 32502-5794
 Attn: Michael King

Send Final Report To:

160 Government Center
 Suite 208
 Pensacola, FL 32502-5794
 Attn: Cheryl Bunch

Program Module Number:

Priority: 3

Event Status: S

Criminal Investigation: NO

Chemistry Request Reviewed By: WATTS_J On: 25-JUN-2019

Biology Request Reviewed By: SWANSON_C On: 25-JUN-2019

Sampling Kit Required: YES Ship on: 05-JUL-2019

Sampling Kit Shipped: YES On: 02-JUL-2019

Sampling Kit Packed By: KLUG_K

Preservatives Needed: NO

Date to Receive Samples: 15-JUL-2019

Received By:

Report Type: Final Only

FTP Data: NO

QC Report: YES

Date Log: NO

Authorization Log: NO

Comments: Group A: Freshwater
 (WBID 204A, 302) Nutrients, Metals

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-1L	Number of Bottles: 2	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO ₃ /L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO ₄ -IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: HNO ₃
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Barium		
Calcium		
Iron		
Magnesium		
Potassium		
Sodium		
Zinc		
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects

*Boron

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: HNO3
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects

Aluminum
Antimony
Arsenic
Cadmium
Chromium
Copper
Lead
Nickel
Selenium
Silver
Thallium

Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices

Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.