

RQ-2019.08.19.23

Login Checklist

Login Station ID: #1

Shipping Method: FedEx | UPS ☒ Greyhound

Date/Time of Receipt: 9/25/19 1521

Cooler Temperature*	Samples Frozen	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # Damaged waybills only
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
1.9				13		✓			

*All samples received on ice unless otherwise noted. If the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX and microbiology), received without ice, or if Evidence Seal is damaged; identify the containers in the affected cooler(s) on back of this form. HNO₃ and Formalin preserved samples do **NOT** have a temperature requirement. **DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C) without login confirmation from customer for samples requiring ice preservation; An NCR still is required.**

**Chain of Custody/ Field Sheet(s) Included? Yes ☒ No ☐

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes ☐ No ☒

****Note:** If "No" is checked below, fill out the back of this form (Field ID, Test IDs, etc.) and generate an NCR.

CONTAINER CHECK

**Evidence Tape on Bottles? Yes ☐ No ☒ If yes, is it intact? Yes ☐ No ☐

**Caps on tight? Yes ☒ No ☐ **Containers intact? Yes ☒ No ☐

**Sufficient Sample Volume: Yes ☒ No ☐

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes ☐ No ☒ Init: 

Chlorine detected? (One container checked per Field ID)

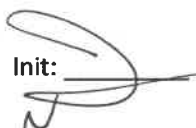
Yes ☐ No ☐ Init: 

If "YES", list affected Field IDs and Test IDs below.

Field ID	List TestID(s) where Chlorine was Detected, an NCR is required.

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ☒ No ☐ NA ☐ Init: 

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes ☐ No ☐ NA ☒ Init: 

Coolers Unpacked/Checked by: 

Date: 9/25/19

NCRs (Y/N)? ☐

Event ID: Run 10

TLH-ROC-2019-09-25-01 (SMP)

NCR #

Date Received: 25-SEP-2019 15:21

Login Checklist

Samples with Incorrect pH Preservation

Field ID	Bottle TestID(s)	pH	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle TestID(s)

Bottles Not Intact

Field ID	Bottle TestID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle TestID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	REC_01_2018 EXP:04/29/2020
pH Test Strips 0 – 6 Lot #	213316AV EXP:05/15/2020
pH Paper 0 – 3 Lot #	N/A
pH Paper 0 – 13 Lot #	215517 EXP: 06/01/2020
Chlorine Test Strips Lot #	8261 EXP: 07/30/2021

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No ☒ _____

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF; W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Florida Department of Environmental Protection Central Laboratory Submittal Form

Customer: TLH-ROC

Requester: Michael Eckles

Field Report Prepared By:

C. Green

Project ID: SMP

Collected By:

Chris Green/Ben Harden

Sampling Agency:

8034

Location		☐ Comp ☒ Grab		Collection (comp begin or grab) Date <i>9-25-19</i> Time <i>12:25</i>		☒ Eastern ☐ Central		Composite end Date _____ Time _____		Bottle Group(s) (See pg 2)	
Field ID	Field/WIN ID →	 G3TLHR0037		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <i>4.75</i>		☒ mg/L ☐ % sat		Total Res. Chlorine (mg/L) _____	
WIN/STORET #	Location ↓ Sandy Creek upstream Boat Ramp			Temp (C) <i>26.8</i>		pH <i>6.07</i>		Sample Depth <i>0.3</i>		☐ ft ☒ m	
Latitude		☐ dd ☐ dms		Salinity (ppt) <i>2.39</i>		Comments		Sp. Conductance (umho/cm) <i>4,539</i>		<i>B</i>	
Location		☐ Comp ☒ Grab		Collection (comp begin or grab) Date <i>9-25-19</i> Time <i>13:05</i>		☒ Eastern ☐ Central		Composite end Date _____ Time _____		Bottle Group(s)	
Field ID	<i>Sandy Creek @ SR22</i>			Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen <i>7.22</i>		☒ mg/L ☐ % sat		Total Res. Chlorine (mg/L) _____	
WIN/STORET #	<i>61TLHR0001</i>			Temp (C) <i>24.2</i>		pH <i>5.98</i>		Sample Depth <i>0.25</i>		☐ ft ☒ m	
Latitude		☐ dd ☐ dms		Longitude		☐ dd ☐ dms		Salinity (ppt) <i>0.01</i>		Comments	
Location		☐ Comp ☐ Grab		Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central		Composite end Date _____ Time _____		Bottle Group(s)	
Field ID				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)	
WIN/STORET #				Temp (C)		pH		Sample Depth		☐ ft ☐ m	
Latitude		☐ dd ☐ dms		Longitude		☐ dd ☐ dms		Salinity (ppt)		Comments	
Location		☐ Comp ☐ Grab		Collection (comp begin or grab) Date _____ Time _____		☐ Eastern ☐ Central		Composite end Date _____ Time _____		Bottle Group(s)	
Field ID				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)	
WIN/STORET #				Temp (C)		pH		Sample Depth		☐ ft ☐ m	
Latitude		☐ dd ☐ dms		Longitude		☐ dd ☐ dms		Salinity (ppt)		Comments	

Relinquished By: <i>C. Green</i>	Date/Time <i>9-25-19</i>	Shipping Method <i>Hand</i>	Number of Coolers Shipped: <i>1</i>	Received By: <i>[Signature]</i>	Date/Time <i>9/25/19 1521</i>
-------------------------------------	-----------------------------	--------------------------------	--	------------------------------------	----------------------------------

Group: A	Bottle Type:	P-1L	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	ALKALINITY TURBIDITY W-CL-IC W-COLOR W-F W-SO4-IC W-TDS W-TSS						
Group: A	Bottle Type:	BP-1L	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	CHLSUITE-W						
Group: A	Bottle Type:	P-250ML-WO-THI	# of Bottles: 4	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	ECOLI-18QT						
Group: A	Bottle Type:	P-500ML	# of Bottles: 4	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab	1
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC						
	<i>SA 9129100</i> <i>5/9/20</i>						
Group: A	Bottle Type:	P-125ML	# of Bottles: 4	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab	1
	W-PO4-F						
Group: B	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	ALKALINITY TURBIDITY W-BR-IC W-F W-TSS						
Group: B	Bottle Type:	BP-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	CHLSUITE-W						
Group: B	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	ENT-24-QT						
Group: B	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab	1
	FCOLI-MF						

Group: D	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-TOC				
Group: D	Bottle Type:	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab _____
	W-PO4-F				
Group: E	Bottle Type:	P-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY				
	TURBIDITY				
	W-CL-IC				
	W-COLOR				
	W-F				
	W-SO4-IC				
	W-TDS				
	W-TSS				
Group: E	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab _____
	ECOLI-18QT				
Group: E	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-NH3				
	W-NO2NO3				
	W-S-A-TP				
	W-TKN				
	W-TOC				
Group: E	Bottle Type:	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab _____
	W-PO4-F				

Group: B	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab	1
	W-NH3			SA 9129100		
	W-NO2NO3			5/9/20		
	W-S-A-TP					
	W-TKN					
	W-TOC					
Group: B	Bottle Type:	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab	1
	W-PO4-F					
Group: C	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	
	ENT-24-QT					
Group: C	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	
	FCOLI-MF					
Group: D	Bottle Type:	P-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	
	ALKALINITY					
	TURBIDITY					
	W-CL-IC					
	W-COLOR					
	W-F					
	W-SO4-IC					
	W-TDS					
	W-TSS					
Group: D	Bottle Type:	BP-1L	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	
	CHLSUITE-W					
Group: D	Bottle Type:	P-250ML-WO-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab	
	ECOLI-18QT					
Group: D	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: HNO3	Enter Number of Bottles Sent to Lab	
	W-ICP					
	W-ICPMS					
Group: D	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab	
	W-NH3					
	W-NO2NO3					
	W-S-A-TP					
	W-TKN					

Date of Request: 25-JUL-2019
 Created By: ECKLES_M On: 25-JUL-2019
 Modified By: JASROTIA_P On: 31-JUL-2019
 Customer: TLH-ROC
 Project: SMP
 Division: Division of Environmental Assessment and Restoration
 District: Not Applicable
 Sampling Event: Run 10

Send Coolers To:

Phone: 850-245-7586
 2600 Blair Stone Rd

 Tallahassee, FL 32399
 Attn: Michael Eckles

Program Module Number: 0100
 Priority: 3
 Event Status: S
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 30-JUL-2019
 Biology Request Reviewed By: JASROTIA_P On: 31-JUL-2019
 Sampling Kit Required: YES Ship on: 15-AUG-2019
 Sampling Kit Shipped: YES On: 12-AUG-2019
 Sampling Kit Packed By: KLUG_K
 Preservatives Needed: NO
 Date to Receive Samples: 19-AUG-2019
 Received By:

Send Final Report To:

2600 Blair Stone Rd

 Tallahassee, FL 32399
 Attn: Michael Eckles

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments: Group A WBIDs 1111 with dup, 1155, & 1162

 Group B WBID 1209

 Group C WBID 1141 B Bacteria Only

 Group D WBID 375F

 Group E Blank

 No fedex labels

Bottle Group A (Water) With 4 Samples:

Bottle Type: P-1L	Number of Bottles: 4	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 4	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WO-THI	Number of Bottles: 4	Preserved With: ICE
ECOLI-18QT	Template: DEFAULT	(SM 9223 Quanti-Tray) Escherichia coli by Colilert 18 Quanti-Tray method - non-chlorinated water systems
Bottle Type: P-500ML	Number of Bottles: 4	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L

Bottle Group A (Water) With 4 Samples:

Bottle Type: P-500ML	Number of Bottles: 4	Preserved With: ICE And H2SO4
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 4	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-BR-IC	Template: DEFAULT	(EPA 300.0) Bromide in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
ENT-24-QT	Template: DEFAULT	(Enterolert/QT) Enterococci by Enterolert Quanti-Tray method - non-chlorinated water systems
Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
FCOLI-MF	Template: DEFAULT	(SM 9222 D) Fecal coliforms by membrane filter method - non-chlorinated water systems

Bottle Group C (Water) With 1 Samples:

Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
ENT-24-QT	Template: DEFAULT	(Enterolert/QT) Enterococci by Enterolert Quanti-Tray method - non-chlorinated water systems
Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
FCOLI-MF	Template: DEFAULT	(SM 9222 D) Fecal coliforms by membrane filter method - non-chlorinated water systems

Bottle Group D (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
ECOLI-18QT	Template: DEFAULT	(SM 9223 Quanti-Tray) Escherichia coli by Colilert 18 Quanti-Tray method - non-chlorinated water systems
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Barium		
Calcium		
Iron		

Bottle Group D (Water) With 1 Samples:

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Magnesium		
Potassium		
Sodium		
Zinc		
W-ICPMS	Template:	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects
*Boron		
Aluminum		
Antimony		
Arsenic		
Cadmium		
Chromium		
Copper		
Lead		
Nickel		
Selenium		
Silver		
Thallium		

Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group E (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B) True Color measured at 450 nm
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-97) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: P-250ML-WO-THI	Number of Bottles: 1	Preserved With: ICE
ECOLI-18QT	Template: DEFAULT	(SM 9223 Quanti-Tray) Escherichia coli by Colilert 18 Quanti-Tray method - non-chlorinated water systems
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.