

Login Checklist

RQ- 2020-03-09-37

Login Station ID: #4

Shipping Method: FedEx UPS | HD | Greyhound

Date/Time of Receipt: 06/04/2020 @ 10:20

Cooler Temperature*	Samples Frozen	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Tracking # Damaged waybills only
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
1.7				4		X			1190 3162 5033

*All samples received on ice unless otherwise noted. If the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX and microbiology), received without ice, or if Evidence Seal is damaged; identify the containers in the affected cooler(s) on back of this form. HNO₃ and Formalin preserved samples do **NOT** have a temperature requirement. **DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C) without login confirmation from customer for samples requiring ice preservation; An NCR still is required.**

**Chain of Custody/ Field Sheet(s) Included? Yes ✓ No

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included? Yes No X

****Note:** If "No" is checked below, fill out the back of this form (Field ID, Test IDs, etc.) and generate an NCR.

CONTAINER CHECK

**Evidence Tape on Bottles? Yes No X If yes, is it intact? Yes No
 **Caps on tight? Yes ✓ No **Containers intact? Yes ✓ No
 **Sufficient Sample Volume: Yes ✓ No

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes No X Init: Jylup

Chlorine detected? (One container checked per Field ID)

Yes No Init:

If "YES", list affected Field IDs and Test IDs below.

Field ID	List TestID(s) where Chlorine was Detected, an NCR is required.

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ✓ No NA Init: Jylup

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes No NA X Init: Jylup

Coolers Unpacked/Checked by: Jylup Reynolds Date: 06/04/2020

NCRs (Y/N)? None

Event ID: Econ Trib / Fox / Kasey
CEN-DIST-2020-06-04-01 (SMP)

NCR #

Date Received: 04-JUN-2020 10:20

Login Checklist

Samples with Incorrect pH Preservation

Field ID	Bottle Test ID(s)	pH	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not Intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

Additional Comments:

Infrared Thermometer ID:	IR TEMP GUN #4 EXP: 11/05/2020
pH Test Strips 0 – 6 Lot #	213316AV EXP: 05/15/2020
pH Paper 0 – 3 Lot #	N/A
pH Paper 0 – 13 Lot #	215517 EXP: 08/01/2020
Chlorine Test Strips Lot #	8261 EXP: 07/30/2021

LOT # 231019
EXP: NOV 1, 2022

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ No X

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ If No _____

no, were samples shipped on dry ice? Yes _____ No _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF; W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____

Florida Department of Environmental Protection

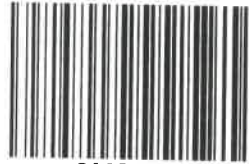
Central Laboratory Submittal Form

Customer: CEN-DIST

Project ID: SMP

Requester: Michael Linger

Field Report Prepared By: LEIF BOMANCollected By: Leif Boman, Elizabeth BatesSampling Agency: FDAP-COROC

WIN ID / Field ID →				☐ Comp ☒ Grab		Collection (comp begin or grab)		☒ Eastern ☐ Central		Composite end		Bottle Group(s)	
Fox Lake @ center of SE Lobe		G3CE0004		Date		Time		Date		Time		(See pg 2)	
				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☒ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
Latitude		Longitude		Temp (C)		pH		Sample Depth		☐ ft ☒ m		Sp. Conductance (umho/cm)	
☐ dd ☐ dms		☐ dd ☐ dms		Salinity (ppt)		Comments							
Location				☐ Comp ☐ Grab		Collection (comp begin or grab)		☐ Eastern ☐ Central		Composite end		Bottle Group(s)	
Field ID				Date		Time		Date		Time			
WIN/STORET #				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
Latitude		Longitude		Temp (C)		pH		Sample Depth		☐ ft ☐ m		Sp. Conductance (umho/cm)	
☐ dd ☐ dms		☐ dd ☐ dms		Salinity (ppt)		Comments							
Location				☐ Comp ☐ Grab		Collection (comp begin or grab)		☐ Eastern ☐ Central		Composite end		Bottle Group(s)	
Field ID				Date		Time		Date		Time			
WIN/STORET #				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
Latitude		Longitude		Temp (C)		pH		Sample Depth		☐ ft ☐ m		Sp. Conductance (umho/cm)	
☐ dd ☐ dms		☐ dd ☐ dms		Salinity (ppt)		Comments							
Location				☐ Comp ☐ Grab		Collection (comp begin or grab)		☐ Eastern ☐ Central		Composite end		Bottle Group(s)	
Field ID				Date		Time		Date		Time			
WIN/STORET #				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
Latitude		Longitude		Temp (C)		pH		Sample Depth		☐ ft ☐ m		Sp. Conductance (umho/cm)	
☐ dd ☐ dms		☐ dd ☐ dms		Salinity (ppt)		Comments							
Location				☐ Comp ☐ Grab		Collection (comp begin or grab)		☐ Eastern ☐ Central		Composite end		Bottle Group(s)	
Field ID				Date		Time		Date		Time			
WIN/STORET #				Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen		☐ mg/L ☐ % sat		Total Res. Chlorine (mg/L)			
Latitude		Longitude		Temp (C)		pH		Sample Depth		☐ ft ☐ m		Sp. Conductance (umho/cm)	
☐ dd ☐ dms		☐ dd ☐ dms		Salinity (ppt)		Comments							

Relinquished By:	Date/Time	Shipping Method	Number of Coolers Shipped:	Received By:	Date/Time
<u>Leif Boman</u>	<u>06/03/2020 15:30</u>	<u>FEDEx</u>	<u>1</u>	<u>Tyler R.</u>	<u>06/03/2020 @</u>

Group: A	Bottle Type:	P-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY					
	TURBIDITY					
	W-CL-IC					
	W-COLOR					
	W-F					
	W-SO4-IC					
	W-TDS					
	W-TSS					
Group: A	Bottle Type:	P-250ML-WI-THI	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CD-AEL-EC					
Group: A	Bottle Type:	BP-1L	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CHLSUITE-W					
Group: A	Bottle Type:	P-500ML	# of Bottles: 2	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-NH3					
	W-NO2NO3					
	W-S-A-TP					
	W-TKN					
	W-TOC					
Group: A	Bottle Type:	P-125ML	# of Bottles: 2	Preservative:	FILTER-ICE	Enter Number of Bottles Sent to Lab _____
	W-PO4-F					
Group: B	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____ 1
	ALKALINITY					
	TURBIDITY					
	W-CL-IC					
	W-COLOR					
	W-F					
	W-SO4-IC					
	W-TDS					
	W-TSS					
Group: B	Bottle Type:	BP-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____ 1
	CHLSUITE-W					
Group: B	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab _____ 1

H2SO4
LOT# SA9301030
EXP: 10/28/2020

Group: B	Bottle Type:	P-500ML	# of Bottles: 1	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab
	W-NH3				
	W-NO2NO3				
	W-S-A-TP				
	W-TKN				
	W-TOC				

Group: B	Bottle Type:	P-125ML	# of Bottles: 1	Preservative: FILTER-ICE	Enter Number of Bottles Sent to Lab
	W-PO4-F				

Date of Request: 17-FEB-2020
 Created By: LINGER_M On: 17-FEB-2020
 Modified By: JASROTIA_P On: 20-FEB-2020
 Customer: CEN-DIST
 Project: SMP
 Division: Division of Environmental Assessment and Restoration
 District: Central District
 Sampling Event: Econ Trib / Fox / Kasey

Send Coolers To:

Phone: 407-894-4180
 FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Natalie Ayala

Send Final Report To:

FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Natalie Ayala

Program Module Number:

Priority: 3
 Event Status: R
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 20-FEB-2020
 Biology Request Reviewed By: JASROTIA_P On: 20-FEB-2020
 Sampling Kit Required: YES Ship on: 28-FEB-2020
 Sampling Kit Shipped: YES On: 26-FEB-2020
 Sampling Kit Packed By: SHAIK_A
 Preservatives Needed: NO
 Date to Receive Samples: 09-MAR-2020
 Received By: SHAIK_A On: 02-JUN-2020

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments: A: Econ / Kasey
 B: Fox

Bottle Group A (Water) With 2 Samples:

Bottle Type: P-1L	Number of Bottles: 2	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-2011) Alkalinity in aqueous matrices as mg CaCO ₃ /L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices
W-COLOR	Template: DEFAULT	(SM 2120 B-2011) True Color measured at 450 nm (not valid for NPDES monitoring)
Color (true)		
W-F	Template: DEFAULT	(SM 4500 F-C-2011) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO ₄ -IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TDS	Template: DEFAULT	(SM 2540 C-2011) Total Dissolved Solids in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-2011) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample
Bottle Type: P-250ML-WI-THI	Number of Bottles: 2	Preserved With: ICE
CD-AEL-EC	Template: DEFAULT	(EPA 1603) E. coli by MF by AEL in Altamonte Springs
Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H ₂ SO ₄
W-NH ₃	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO ₂ NO ₃	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-2011) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: FILTER-ICE
W-PO ₄ -F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-2011) Alkalinity in aqueous matrices as mg CaCO ₃ /L

Bottle Group B (Water) With 1 Samples:

Bottle Type: P-1L		Number of Bottles: 1	Preserved With: ICE
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices	
W-CL-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Chloride in aqueous matrices	
W-COLOR	Template: DEFAULT	(SM 2120 B-2011) True Color measured at 450 nm (not valid for NPDES monitoring)	
Color (true)			
W-F	Template: DEFAULT	(SM 4500 F-C-2011) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)	
W-SO4-IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices	
W-TDS	Template: DEFAULT	(SM 2540 C-2011) Total Dissolved Solids in aqueous matrices	
W-TSS	Template: DEFAULT	(SM 2540 D-2011) Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample	
Bottle Type: BP-1L		Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry	
Bottle Type: P-500ML		Number of Bottles: 1	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L	
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L	
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L	
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices	
W-TOC	Template: DEFAULT	(SM 5310 B-2011) Nonpurgeable Organic Carbon in aqueous matrices	
Bottle Type: P-125ML		Number of Bottles: 1	Preserved With: FILTER-ICE
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L	

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.