

Chemical Analysis Report

NW-DIST-2020-03-31-02

Florida Department of Environmental Protection
Central Laboratory
2600 Blair Stone Road
Tallahassee, FL 32399-2400
DOH Accreditation E31780

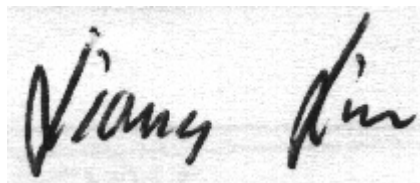
Event Description: **NW Run**
Request ID: **RQ-2020-03-30-11**
Customer: **NW-DIST**
Project ID: **SMP**

Send Reports to:
FL Dept. of Environmental Protection
160 Government Center
Suite 208
Pensacola, FL 32502-5794
Attn: Cheryl Bunch

For additional information please contact
Colin Wright, Ph.D.
Liang-Tsair Lin, Ph.D.
Kerry Tate, Ph.D.
Dr. rer. nat. Bettina Steinbock
Thekkekalathil Chandrasekhar, Ph.D, QA Officer
Phone (850) 245-8085

Certified by: Liang Lin, Environmental Administrator

Date Certified: 20-APR-2020 15:43

A handwritten signature in black ink, appearing to read "Liang Lin", is shown on a light-colored background.

Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical groups are included in this report: Nutrients and Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to 1.3×10^3 or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (**) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited by the Florida Department of Health Environmental Laboratory Certification Program or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

Sample Location: McDavid Creek 100 m upstream SR99

Collection Date/Time: 03/30/2020 09:35

Field ID: G5NW0150

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2168930	EPA 300.0 Rev. 2.1	Chloride	3.8		mg Cl/L	P381991	
		Sulfate	0.38	I	mg SO4/L	P381997	
	SM 2320 B-2011	Total Alkalinity	1.6	I	mg CaCO3/L	P381935	
	SM 2540 C-2011	TDS	15	U	mg/L	P381905	
	SM 2540 D-2011	TSS	2	I	mg/L	P381898	
	SM 4500 F-C-2011	Fluoride	0.035	U	mg F/L	P381848	
2168932	EPA 350.1 Rev. 2.0	Ammonia-N	0.005	I	mg N/L	P381762	
	EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	0.18	I	mg N/L	P381722	
	EPA 353.2 Rev. 2.0	NO2NO3-N	0.21		mg N/L	P381667	
	EPA 365.1 Rev. 2.0	Total-P	0.006		mg P/L	P381687	
	SM 5310 B-2011	Organic Carbon	2.6		mg C/L	P381746	

Ref. Method and Comment:

SM 2540 D-2011: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

EPA 350.1 Rev. 2.0: Batch matrix spike recoveries are unavailable because of high analyte concentration in the QC sample.

Sample Location: Big Escambia Creek downstream of Fannie Rd Collection Date/Time: 03/30/2020 11:35

Field ID: G4NW0421

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2168931	EPA 300.0 Rev. 2.1	Chloride	4.5		mg Cl/L	P381991	
		Sulfate	1.1		mg SO4/L	P381997	
	SM 2320 B-2011	Total Alkalinity	3.9		mg CaCO3/L	P381935	
	SM 2540 C-2011	TDS	25		mg/L	P381905	
	SM 2540 D-2011	TSS	4	IA	mg/L	P381898	
	SM 4500 F-C-2011	Fluoride	0.035	U	mg F/L	P381848	
2168933	EPA 350.1 Rev. 2.0	Ammonia-N	0.009		mg N/L	P381762	
	EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	0.26		mg N/L	P381722	
	EPA 353.2 Rev. 2.0	NO2NO3-N	0.49		mg N/L	P381667	
	EPA 365.1 Rev. 2.0	Total-P	0.014		mg P/L	P381687	
	SM 5310 B-2011	Organic Carbon	2.8		mg C/L	P381746	

Ref. Method and Comment:

SM 2540 D-2011: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

EPA 350.1 Rev. 2.0: Batch matrix spike recoveries are unavailable because of high analyte concentration in the QC sample.

Sample Location: Sevenmile Creek upstream of Alderbrook Blvd. Collection Date/Time: 03/30/2020 13:00

Field ID: G4NW0345

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2168939	EPA 8321B	2,4-D	0.0020	U	ug/L	P381751	
		Acesulfame K**	0.10	U	ug/L	P381627	MS
		AMPA**	0.10	U	ug/L	P381627	
		Sucralose**	0.35		ug/L	P381627	
		Acetaminophen**	0.0080	U	ug/L	P381751	
		Acetamiprid**	0.0020	U	ug/L	P381751	
		Endothall**	0.25	U	ug/L	P381627	
		Glufosinate**	0.10	U	ug/L	P381627	
		Glyphosate**	0.10	U	ug/L	P381627	
		Afidopyropen**	0.0020	UJ	ug/L	P381751	
		Bentazon	8.1E-04	I	ug/L	P381751	
		Benzovindiflupyr**	0.0020	UJ	ug/L	P381751	
		Carbamazepine**	0.0025	I	ug/L	P381751	
		Clothianidin**	0.0056	I	ug/L	P381751	
		Dinotefuran**	0.0020	U	ug/L	P381751	
		Diuron	0.0020	U	ug/L	P381751	
		Fenuron	0.016	U	ug/L	P381751	
		Fluridone**	8.0E-04	U	ug/L	P381751	
		Imazapyr**	0.0040	U	ug/L	P381751	
		Hydrocodone**	0.0020	U	ug/L	P381751	
		Ibuprofen**	0.020	U	ug/L	P381751	
		Imidacloprid	0.024		ug/L	P381751	
		Linuron	0.0040	U	ug/L	P381751	
		Mandestrobin**	0.0020	UJ	ug/L	P381751	
		MCPP	0.0020	U	ug/L	P381751	
		Naproxen**	0.0080	U	ug/L	P381751	
		Primidone**	0.0040	U	ug/L	P381751	
		Pyraclostrobin**	0.0020	U	ug/L	P381751	
		Thiamethoxam**	0.0020	U	ug/L	P381751	
		Tolfenpyrad**	0.0020	U	ug/L	P381751	
		Triclopyr**	0.0040	U	ug/L	P381751	

Ref. Method and Comment:

EPA 8321B: J - second source check standards for some analytes were not available for analysis. MS accuracy for some analytes could not be assessed due to high concentration of parameter in the spiked sample.

EPA 8321B: MS accuracy for some analytes could not be assessed due to high concentration of parameter in the spiked sample.

Quality Assurance Report Method Blank Results

Reference Method: EPA 300.0 Rev. 2.1
 Batch ID: P381991

Component	Result	Code	Units
Chloride	0.20	U	mg Cl/L

Reference Method: EPA 300.0 Rev. 2.1
 Batch ID: P381997

Component	Result	Code	Units
Sulfate	0.20	U	mg SO4/L

Reference Method: EPA 350.1 Rev. 2.0
 Batch ID: P381762

Component	Result	Code	Units
Ammonia-N	0.002	U	mg N/L

Reference Method: EPA 351.2 Rev. 2.0
 Batch ID: P381722

Component	Result	Code	Units
Kjeldahl Nitrogen	0.080	U	mg N/L

Reference Method: EPA 353.2 Rev. 2.0
 Batch ID: P381667

Component	Result	Code	Units
NO2NO3-N	0.004	U	mg N/L

Reference Method: EPA 365.1 Rev. 2.0
 Batch ID: P381687

Component	Result	Code	Units
Total-P	0.002	U	mg P/L

Reference Method: EPA 8321B
 Batch ID: P381627

Component	Result	Code	Units
Acesulfame K	0.10	U	ug/L
AMPA	0.10	U	ug/L
Endothall	0.25	U	ug/L
Glufosinate	0.10	U	ug/L
Glyphosate	0.10	U	ug/L
Sucralose	0.010	U	ug/L

Reference Method: EPA 8321B
 Batch ID: P381751

Component	Result	Code	Units
2,4-D	0.0020	U	ug/L
Acetaminophen	0.0080	U	ug/L
Acetamiprid	0.0020	U	ug/L
Afidopyropen	0.0020	U	ug/L
Bentazon	8.0E-04	U	ug/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8321B

Batch ID: P381751

Component	Result	Code	Units
Benzovindiflupyr	0.0020	U	ug/L
Carbamazepine	8.0E-04	U	ug/L
Clothianidin	0.0020	U	ug/L
Dinotefuran	0.0020	U	ug/L
Diuron	0.0020	U	ug/L
Fenuron	0.016	U	ug/L
Fluridone	8.0E-04	U	ug/L
Hydrocodone	0.0020	U	ug/L
Ibuprofen	0.020	U	ug/L
Imazapyr	0.0040	U	ug/L
Imidacloprid	0.0020	U	ug/L
Linuron	0.0040	U	ug/L
Mandestrobin	0.0020	U	ug/L
MCPP	0.0020	U	ug/L
Naproxen	0.0080	U	ug/L
Primidone	0.0040	U	ug/L
Pyraclostrobin	0.0020	U	ug/L
Thiamethoxam	0.0020	U	ug/L
Tolfenpyrad	0.0020	U	ug/L
Triclopyr	0.0040	U	ug/L

Reference Method: SM 2320 B-2011

Batch ID: P381935

Component	Result	Code	Units
Total Alkalinity	0.65	U	mg CaCO3/L

Reference Method: SM 2540 C-2011

Batch ID: P381905

Component	Result	Code	Units
TDS	15	U	mg/L

Reference Method: SM 2540 D-2011

Batch ID: P381898

Component	Result	Code	Units
TSS	2	U	mg/L

Reference Method: SM 4500 F-C-2011

Batch ID: P381848

Component	Result	Code	Units
Fluoride	0.035	U	mg F/L

Reference Method: SM 5310 B-2011

Batch ID: P381746

Component	Result	Code	Units
Organic Carbon	0.50	U	mg C/L

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381991

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Chloride	98.4		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381997

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sulfate	98.9		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P381762

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Ammonia-N	105		P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P381722

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Kjeldahl Nitrogen	100		P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P381667

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
NO2NO3-N	97.5		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P381687

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total-P	104		P	90 - 110

Reference Method: EPA 8321B
Batch ID: P381627

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Acesulfame K	97.7		P	40 - 150
AMPA	107		P	40 - 150
Endothall	86.8		P	40 - 150
Glufosinate	126		P	40 - 150
Glyphosate	135		P	40 - 140
Sucralose	105		P	40 - 150

Reference Method: EPA 8321B
Batch ID: P381751

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2,4-D	121		P	30 - 160
Acetaminophen	78.3		P	30 - 160
Acetamiprid	104		P	30 - 160
Afidopyropen	96.5		P	30 - 160
Bentazon	68.9		P	30 - 160

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 8321B
Batch ID: P381751

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Benzovindiflupyr	85.7		P	30 - 160
Carbamazepine	121		P	30 - 160
Clothianidin	94.0		P	30 - 160
Dinotefuran	78.5		P	30 - 160
Diuron	102		P	30 - 160
Fenuron	107		P	30 - 160
Fluridone	87.2		P	30 - 160
Hydrocodone	80.3		P	30 - 160
Ibuprofen	88.2		P	30 - 160
Imazapyr	97.3		P	30 - 160
Imidacloprid	112		P	30 - 160
Linuron	74.3		P	30 - 160
Mandestrobin	89.5		P	30 - 160
MCPP	122		P	30 - 160
Naproxen	73.8		P	30 - 160
Primidone	95.2		P	30 - 160
Pyraclostrobin	86.4		P	30 - 160
Thiamethoxam	98.0		P	30 - 160
Tolfenpyrad	50.4		P	30 - 160
Triclopyr	97.8		P	30 - 160

Reference Method: SM 2320 B-2011
Batch ID: P381935

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total Alkalinity	98.4		P	98 - 107

Reference Method: SM 4500 F-C-2011
Batch ID: P381848

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Fluoride	98.2		P	92 - 104

Reference Method: SM 5310 B-2011
Batch ID: P381746

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Organic Carbon	96.6		P	85 - 115

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381991

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168861	Chloride	98.3		P	90 - 110
2168902	Chloride	98.3		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381997

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168861	Sulfate	98.7		P	90 - 110
2168902	Sulfate	97.6		P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P381722

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168932	Kjeldahl Nitrogen	107	103	P/P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P381667

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168904	NO2NO3-N	96.0		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P381687

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168903	Total-P	108	105	P/P	90 - 110

Reference Method: EPA 8321B
Batch ID: P381627

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168793	Acesulfame K	20.5	21.4	F/F	40 - 150
2168793	Endothall	101	103	P/P	40 - 150
2168793	Glufosinate	120	103	P/P	40 - 150
2168793	Sucralose	103	84.2	P/P	40 - 150

Reference Method: EPA 8321B
Batch ID: P381751

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168793	2,4-D	103	113	P/P	30 - 160
2168793	Acetaminophen	90.5	95.3	P/P	30 - 160
2168793	Acetamiprid	70.9	85.0	P/P	30 - 160
2168793	Afidopyropen	83.3	98.1	P/P	30 - 160
2168793	Benzovindiflupyr	70.2	75.6	P/P	30 - 160
2168793	Carbamazepine	73.5	84.2	P/P	30 - 160
2168793	Clothianidin	76.4	89.6	P/P	30 - 160
2168793	Dinotefuran	95.6	105	P/P	30 - 160
2168793	Diuron	77.1	88.7	P/P	30 - 160
2168793	Fenuron	66.9	72.5	P/P	30 - 160
2168793	Hydrocodone	75.4	85.5	P/P	30 - 160

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 8321B
Batch ID: P381751

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168793	Ibuprofen	66.2	74.6	P/P	30 - 160
2168793	Imidacloprid	114	132	P/P	30 - 160
2168793	Linuron	51.5	58.2	P/P	30 - 160
2168793	Mandestrobin	75.7	83.2	P/P	30 - 160
2168793	MCPP	106	105	P/P	30 - 160
2168793	Naproxen	83.2	82.1	P/P	30 - 160
2168793	Primidone	72.5	82.5	P/P	30 - 160
2168793	Pyraclostrobin	77.6	84.6	P/P	30 - 160
2168793	Thiamethoxam	107	113	P/P	30 - 160
2168793	Tolfenpyrad	50.2	52.0	P/P	30 - 160
2168793	Triclopyr	93.8	96.3	P/P	30 - 160

Reference Method: SM 4500 F-C-2011
Batch ID: P381848

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168898	Fluoride	97.8	96.2	P/P	91 - 105

Reference Method: SM 5310 B-2011
Batch ID: P381746

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2168825	Organic Carbon	97.4	97.0	P/P	85 - 115

Quality Assurance Report Precision

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381991

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168902	Chloride	0.100	Sample	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P381997

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168902	Sulfate	0.0432	Sample	P	0 - 20

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P381762

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168903	Ammonia-N	0.0441	Spike	P	0 - 20

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P381722

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168932	Kjeldahl Nitrogen	3.24	Spike	P	0 - 20

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P381667

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168904	NO2NO3-N	0.733	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P381687

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168903	Total-P	2.35	Spike	P	0 - 20

Reference Method: EPA 8321B
Batch ID: P381627

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168793	Acesulfame K	4.59	Spike	P	0 - 30
2168793	AMPA	5.23	Spike	P	0 - 30
2168793	Endothall	1.59	Spike	P	0 - 30
2168793	Glufosinate	15.6	Spike	P	0 - 30
2168793	Glyphosate	10.4	Spike	P	0 - 30
2168793	Sucralose	12.6	Spike	P	0 - 30

Quality Assurance Report Precision

Reference Method: EPA 8321B
Batch ID: P381751

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168793	2,4-D	9.00	Spike	P	0 - 30
2168793	Acetaminophen	5.18	Spike	P	0 - 30
2168793	Acetamiprid	18.0	Spike	P	0 - 30
2168793	Afidopyropen	16.3	Spike	P	0 - 30
2168793	Bentazon	5.26	Spike	P	0 - 30
2168793	Benzovindiflupyr	7.45	Spike	P	0 - 30
2168793	Carbamazepine	10.8	Spike	P	0 - 30
2168793	Clothianidin	16.0	Spike	P	0 - 30
2168793	Dinotefuran	9.62	Spike	P	0 - 30
2168793	Diuron	13.0	Spike	P	0 - 30
2168793	Fenuron	7.94	Spike	P	0 - 30
2168793	Fluridone	11.7	Spike	P	0 - 30
2168793	Hydrocodone	12.6	Spike	P	0 - 30
2168793	Ibuprofen	11.9	Spike	P	0 - 30
2168793	Imazapyr	4.16	Spike	P	0 - 30
2168793	Imidacloprid	13.7	Spike	P	0 - 30
2168793	Linuron	12.3	Spike	P	0 - 30
2168793	Mandestrobin	9.43	Spike	P	0 - 30
2168793	MCPP	0.708	Spike	P	0 - 30
2168793	Naproxen	1.30	Spike	P	0 - 30
2168793	Primidone	11.3	Spike	P	0 - 30
2168793	Pyraclostrobin	8.64	Spike	P	0 - 30
2168793	Thiamethoxam	5.40	Spike	P	0 - 30
2168793	Tolfenpyrad	3.47	Spike	P	0 - 30
2168793	Triclopyr	2.63	Spike	P	0 - 30

Reference Method: SM 2320 B-2011
Batch ID: P381935

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168962	Total Alkalinity	0.556	Sample	P	0 - 3.3

Reference Method: SM 2540 C-2011
Batch ID: P381905

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168319	TDS	7.47	Sample	P	0 - 10

Reference Method: SM 4500 F-C-2011
Batch ID: P381848

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168898	Fluoride	1.53	Spike	P	0 - 2.0

Quality Assurance Report Precision

Reference Method: SM 5310 B-2011
Batch ID: P381746

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2168825	Organic Carbon	0.281	Spike	P	0 - 20

* Sample, spike and/or laboratory control sample precision (LCS) is reported.

Quality Assurance Report Surrogates

Lab Sample ID: 2168939

Field Sample ID: G4NW0345

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	2,4-D-d3	116	P	30 - 160
EPA 8321B	Acetaminophen-d4	78.6	P	30 - 160
EPA 8321B	Carbamazepine-d10	126	P	30 - 160
EPA 8321B	Diuron-d6	122	P	30 - 160
EPA 8321B	Endothall-d6	92.3	P	30 - 160
EPA 8321B	Endothall-d6	92.3	P	30 - 160
EPA 8321B	Glyphosate 13C 15N	112	P	30 - 160
EPA 8321B	Glyphosate 13C 15N	112	P	30 - 160
EPA 8321B	Ibuprofen-d3	91.1	P	30 - 160
EPA 8321B	Primidone-d5	109	P	30 - 160
EPA 8321B	Sucralose-d6	107	P	30 - 160
EPA 8321B	Sucralose-d6	107	P	30 - 160

Quality Assurance Report Calibration Verification

Reference Method: EPA 353.2 Rev. 2.0

Run ID: A98582

Included Lab Sample IDs: 2168932, 2168933

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
NO2NO3-N	98.5	97.5	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A98599

Included Lab Sample IDs: 2168939

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
AMPA	143	137	P/P	40 - 200
Glufosinate	120	118	P/P	40 - 200
Glyphosate	136	131	P/P	40 - 200

Reference Method: SM 5310 B-2011

Run ID: A98614

Included Lab Sample IDs: 2168932, 2168933

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Organic Carbon	97.6	99.6	P/P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0

Run ID: A98623

Included Lab Sample IDs: 2168932, 2168933

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Ammonia-N	103	103	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0

Run ID: A98638

Included Lab Sample IDs: 2168932, 2168933

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total-P	99.2	99.8	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0

Run ID: A98645

Included Lab Sample IDs: 2168932, 2168933

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Kjeldahl Nitrogen	102	99.3	P/P	90 - 110
Kjeldahl Nitrogen	99.3	100	P/P	90 - 110

Reference Method: SM 4500 F-C-2011

Run ID: A98665

Included Lab Sample IDs: 2168930, 2168931

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Fluoride	101	99.0	P/P	90 - 110

Quality Assurance Report Calibration Verification

Reference Method: EPA 300.0 Rev. 2.1

Run ID: A98686

Included Lab Sample IDs: 2168930, 2168931

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Chloride	97.5	99.2	P/P	90 - 110
Chloride	99.2	98.3	P/P	90 - 110
Sulfate	100	99.3	P/P	90 - 110
Sulfate	98.5	100	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A98689

Included Lab Sample IDs: 2168939

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
2,4-D	107	94.1	P/P	50 - 150
Acetaminophen	90.4	88.0	P/P	60 - 160
Acetamiprid	97.1	91.6	P/P	50 - 150
Afidopyropen	92.7	93.2	P/P	50 - 150
Bentazon	86.5	91.6	P/P	50 - 160
Benzovindiflupyr	108	107	P/P	50 - 150
Carbamazepine	97.9	97.7	P/P	60 - 150
Clothianidin	103	89.6	P/P	60 - 150
Dinotefuran	86.2	86.9	P/P	50 - 150
Diuron	109	95.3	P/P	60 - 160
Fenuron	88.7	85.9	P/P	60 - 150
Fluridone	103	105	P/P	60 - 160
Hydrocodone	110	92.9	P/P	60 - 150
Ibuprofen	107	108	P/P	50 - 160
Imazapyr	94.6	102	P/P	50 - 150
Imidacloprid	99.1	95.7	P/P	60 - 150
Linuron	101	87.9	P/P	60 - 150
Mandestrobin	109	105	P/P	50 - 150
MCP	98.4	100	P/P	50 - 150
Naproxen	115	109	P/P	50 - 160
Primidone	106	88.0	P/P	60 - 150
Pyraclostrobin	110	109	P/P	60 - 150
Thiamethoxam	94.4	92.7	P/P	50 - 150
Tolfenpyrad	111	114	P/P	60 - 150
Triclopyr	102	93.6	P/P	50 - 150

Reference Method: EPA 8321B

Run ID: A98701

Included Lab Sample IDs: 2168939

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Acesulfame K	106	104	P/P	60 - 160
Endothall	94.0	89.5	P/P	60 - 160

Reference Method: SM 2320 B-2011

Run ID: A98708

Included Lab Sample IDs: 2168930, 2168931

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total Alkalinity	99.3	95.4	P/P	90 - 110

Quality Assurance Report Calibration Verification

Reference Method: EPA 8321B

Run ID: A98790

Included Lab Sample IDs: 2168939

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Sucralose	109	104	P/P	60 - 160

* Pass/Fail determinations are made for each bracketing calibration verification check.

Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.

Where they are different, both control limits are provided.

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery	MS % Recovery		LCS	Precision	MS
						SMP	
EPA 300.0 Rev. 2.1	Chloride	98.4	98.3	98.3		0.100	
	Sulfate	98.9	97.6	98.7		0.0432	
EPA 350.1 Rev. 2.0	Ammonia-N	105					0.0441
EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	100	107	103			3.24
EPA 353.2 Rev. 2.0	NO ₂ NO ₃ -N	97.5	96.0				0.733
EPA 365.1 Rev. 2.0	Total-P	104	108	105			2.35
EPA 8321B	2,4-D	121	103	113			9.00
	Acesulfame K	97.7	20.5	21.4			4.59
	Acetaminophen	78.3	90.5	95.3			5.18
	Acetamiprid	104	70.9	85.0			18.0
	Afidopyropen	96.5	83.3	98.1			16.3
	AMPA	107					5.23
	Bentazon	68.9					5.26
	Benzovindiflupyr	85.7	70.2	75.6			7.45
	Carbamazepine	121	73.5	84.2			10.8
	Clothianidin	94.0	76.4	89.6			16.0
	Dinotefuran	78.5	95.6	105			9.62
	Diuron	102	77.1	88.7			13.0
	Endothall	86.8	101	103			1.59
	Fenuron	107	66.9	72.5			7.94
	Fluridone	87.2					11.7
	Glufosinate	126	120	103			15.6
	Glyphosate	135					10.4
	Hydrocodone	80.3	75.4	85.5			12.6
	Ibuprofen	88.2	66.2	74.6			11.9
	Imazapyr	97.3					4.16
	Imidacloprid	112	114	132			13.7
	Linuron	74.3	51.5	58.2			12.3
	Mandestrobin	89.5	75.7	83.2			9.43
	MCP	122	106	105			0.708
	Naproxen	73.8	83.2	82.1			1.30
	Primidone	95.2	72.5	82.5			11.3
	Pyraclostrobin	86.4	77.6	84.6			8.64
	Sucralose	105	103	84.2			12.6
	Thiamethoxam	98.0	107	113			5.40
	Tolfenpyrad	50.4	50.2	52.0			3.47
	Triclopyr	97.8	93.8	96.3			2.63
SM 2320 B-2011	Total Alkalinity	98.4				0.556	
SM 2540 C-2011	TDS					7.47	
SM 4500 F-C-2011	Fluoride	98.2	97.8	96.2			1.53
SM 5310 B-2011	Organic Carbon	96.6	97.4	97.0			0.281

Reference Method Descriptions

Method	Description	Associated Samples
EPA 300.0 Rev. 2.1	Chloride in aqueous matrices	2168930, 2168931
EPA 300.0 Rev. 2.1	Sulfate in aqueous matrices	2168930, 2168931
EPA 350.1 Rev. 2.0	Ammonia in aqueous matrices as mg N/L	2168932, 2168933
EPA 351.2 Rev. 2.0	Total Kjeldahl Nitrogen in aqueous matrices	2168932, 2168933
EPA 353.2 Rev. 2.0	Nitrite/Nitrate in aqueous matrices as mg N/L	2168932, 2168933
EPA 365.1 Rev. 2.0	Total Phosphorus in aqueous matrices as mg P/L	2168932, 2168933
EPA 8321B	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS	2168939
EPA 8321B	Water soluble organic compounds by HPLC/MS/MS	2168939

Reference Method Descriptions

Method	Description	<u>Associated Samples</u>
SM 2320 B-2011	Alkalinity in aqueous matrices as mg CaCO ₃ /L	2168930, 2168931
SM 2540 C-2011	Total Dissolved Solids in aqueous matrices	2168930, 2168931
SM 2540 D-2011	Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample	2168930, 2168931
SM 4500 F-C-2011	Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)	2168930, 2168931
SM 5310 B-2011	Nonpurgeable Organic Carbon in aqueous matrices	2168932, 2168933

Preparation and Analysis Log

Ref. Method	Received Date	Prep Date/Time	Prepared By	Analysis Date/Time	Analyzed By	Associated Samples
EPA 300.0 Rev. 2.1	03/31/2020			04/08/2020 21:26	Jhamieka S. Greenwood	2168930
	03/31/2020			04/08/2020 22:05	Jhamieka S. Greenwood	2168931
EPA 350.1 Rev. 2.0	03/31/2020			04/02/2020 17:13	Julia Storbeck	2168933
	03/31/2020			04/02/2020 17:16	Julia Storbeck	2168932
EPA 351.2 Rev. 2.0	03/31/2020	04/02/2020 14:50	Jhamieka S. Greenwood	04/03/2020 14:27	Jhamieka S. Greenwood	2168932
	03/31/2020	04/02/2020 14:50	Jhamieka S. Greenwood	04/03/2020 14:43	Jhamieka S. Greenwood	2168933
EPA 353.2 Rev. 2.0	03/31/2020			04/01/2020 18:02	Lauren Lees	2168932
	03/31/2020			04/01/2020 18:03	Lauren Lees	2168933
EPA 365.1 Rev. 2.0	03/31/2020	04/02/2020 10:05	Lipi Saha	04/03/2020 11:47	Lipi Saha	2168932
	03/31/2020	04/02/2020 10:05	Lipi Saha	04/03/2020 11:48	Lipi Saha	2168933
EPA 8321B	03/31/2020	04/01/2020 10:45	Rebecca Ware	04/01/2020 13:47	Rebecca Ware	2168939
	03/31/2020	04/01/2020 10:45	Rebecca Ware	04/02/2020 16:54	Rebecca Ware	2168939
	03/31/2020	04/01/2020 10:45	Rebecca Ware	04/14/2020 16:07	Rebecca Ware	2168939
	03/31/2020	04/03/2020 09:00	Hoor Shaik	04/07/2020 20:21	Juyoung Kim	2168939
SM 2320 B-2011	03/31/2020			04/08/2020 02:47	Samantha Davila	2168930
	03/31/2020			04/08/2020 02:57	Samantha Davila	2168931
SM 2540 C-2011	03/31/2020			04/01/2020 16:21	Yijie Li	2168930, 2168931
SM 2540 D-2011	03/31/2020			04/01/2020 16:21	Yijie Li	2168930, 2168931
SM 4500 F-C-2011	03/31/2020			04/05/2020 13:54	Samantha Davila	2168930
	03/31/2020			04/05/2020 14:05	Samantha Davila	2168931
SM 5310 B-2011	03/31/2020			04/02/2020 09:45	Madeline Gruver	2168932
	03/31/2020			04/02/2020 10:00	Madeline Gruver	2168933