

Chemical Analysis Report

SO-DIST-2021-12-16-01

Florida Department of Environmental Protection
Central Laboratory
2600 Blair Stone Road
Tallahassee, FL 32399-2400
DOH Accreditation E31780

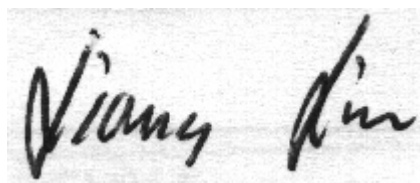
Event Description: **2021 SMP: Peace River HA/SCI**
Request ID: **RQ-2021-11-01-59**
Customer: **SO-DIST**
Project ID: **SMP**

Send Reports to:
FL Dept. of Environmental Protection
FLDEP South District Office
2295 Victoria Ave. Suite 364
Fort Myers, FL 33901-3381
Attn: William Mullen

For additional information please contact
Colin Wright, Ph.D.
Liang-Tsair Lin, Ph.D.
Kerry Tate, Ph.D.
Dr. rer. nat. Bettina Steinbock
Thekkekalathil Chandrasekhar, Ph.D, QA Officer
Phone (850) 245-8085

Certified by: Liang Lin, Environmental Administrator

Date Certified: 11-JAN-2022 16:15

A handwritten signature in black ink, appearing to read "Liang Lin", is shown on a light-colored background.

Case Narrative

Unless otherwise noted, all samples included in this report were received in accordance with protocols referenced in Chapter 62-160, Florida Administrative Code (F.A.C.). Results published in this report pertain only to the samples as submitted to, and received by the laboratory. All times in this report are adjusted to the applicable Eastern Time Zone (EST or EDT).

Results for the following analytical groups are included in this report: Metals, Nutrients and Pesticides.

Scientific notation may be used in reporting very large or small values. Values reported using scientific notation will take the form of the following example: 1.3E+03, which is equivalent to 1.3×10^3 or 1300.

Unless otherwise noted, analytical values for soil and sediment samples are reported on a dry weight basis, and analytical values for waste and tissue samples are reported on a wet weight basis.

Results for TNI accredited tests met requirements established by The NELAC Institute. A double asterisk (**) is used to indicate an analyte/matrix/method for which the laboratory is not TNI accredited by the Florida Department of Health Environmental Laboratory Certification Program or where accreditation for that field of testing is not applicable.

Any significant anomalies or deviations from established protocols are documented in Non-Conformance Reports, which, where appropriate, are included within this analytical report. Additional comments related to specific analytical tests may be included as remarks following the analytical results for each sample. Such comments and remarks are for informational purposes only and are not intended to convey judgement about the usability of the reported data.

A quality control report on the performance of the test method for the submitted samples is included. Uncertainty associated with the analytical results contained in this report can be estimated from the reported quality assurance results and from published quality control acceptance limits for each analytical test. Matrix quality control results (matrix spike recoveries and matrix sample precision) pertain only to the matrix sample tested and do not necessarily reflect test method performance for other samples.

Typical matrix quality control (QC) measurements may include matrix spike recovery, matrix spike duplicate recovery, matrix spike precision and matrix sample precision. Not all matrix QC results may be available or reportable; where they are not an explanation is provided. Typical reasons for unavailable QC results include, but are not limited to, a) insufficient matrix sample to perform some or all QC measurements; b) analyte concentration in the sample replicated was too low for a meaningful measurement of precision and c) analyte concentration in the matrix sample spiked was too high (relative to the amount of analyte spiked) for a meaningful measurement of recovery. Where matrix QC results are unavailable, other method performance metrics (e.g., LCS recovery, LCS precision, surrogate recovery) may be used to assess performance of the method. Comments explaining any missing QC measurements are not intended to convey any adverse conclusions about the quality of the reported data.

Precision is reported as relative percent difference unless otherwise noted.

Quality Control codes as defined below may be used in this report to indicate results that are associated with one or more quality control elements which did not fall within established test method criteria. Such results may be qualified as estimates using a J qualifier as required by 62-160 F.A.C. Explanations are included in the report for any results that were reported as estimates for other reasons.

QC Codes used in this report may include:

- LCS – Recovery for the batch Laboratory Control Sample (LCS) was outside existing control limits;
- MS – Recovery for the batch matrix spike (MS) was outside existing control limits;
- CCV – Recovery for a continuing calibration verification (CCV) standard was outside existing control limits;
- SUR – Recovery of a surrogate (SUR) for associated analytes was outside existing control limits;
- RPD – The precision, measured as relative percent difference (RPD), of batch replicate measurements was outside existing control limits;
- RSD – The precision, measured as relative standard deviation (RSD), of batch replicate measurements was outside existing control limits;
- SMP – Sample - used precision derived from replicate analyses of a sample;

The following data qualifiers are used, where applicable, in this report as specified in 62-160 F.A.C.

- A - Value reported is the mean of two or more determinations.
- B - Results based on colony counts outside the acceptable range.
- I - The reported value is between the laboratory method detection limit and the laboratory practical quantitation limit.
- J - Estimated value and/or the analysis did not meet established quality control criteria.
- K - Actual value is known to be less than value given.
- L - Actual value is known to be greater than value given.
- N - Presumptive evidence of presence of material.
- O - Sampled, but analysis lost or not performed.
- Q - Sample held beyond normal holding time.
- T - Value reported is less than the criterion of detection.
- U - Material was analyzed for but not detected. The reported value is the method detection limit for the sample analyzed.
- V - Analyte was detected in both sample and method blank.
- X - Too few individuals to calculate SCI value.
- Y - The laboratory analysis was from an unpreserved or improperly preserved sample. The data may not be accurate.
- Z - Colonies were too numerous to count (TNTC).

Quality control information from overflow laboratories may not be included in this report. Please refer to the associated report from the overflow laboratory for additional information.

Sample Location: Peace River Above Horse Creek 2

Collection Date/Time: 12/15/2021 11:20

Field ID: G3SD0154

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2295723	EPA 180.1 Rev. 2.0	Turbidity	3.7		NTU	P407570	
	EPA 300.0 Rev. 2.1	Chloride	32		mg Cl/L	P407704	
		Sulfate	73		mg SO4/L	P407707	
	SM 2120 B-2011	Color (true)	70		PCU	P407567	
	SM 2320 B-2011	Total Alkalinity	99		mg CaCO3/L	P407664	
	SM 2540 C-2011	TDS	292	A	mg/L	P407892	
	SM 2540 D-2011	TSS	4	IA	mg/L	P407702	
	SM 4500 F-C-2011	Fluoride	0.79		mg F/L	P407667	
2295724	EPA 350.1 Rev. 2.0	Ammonia-N	0.036		mg N/L	P408018	
	EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	0.82	J	mg N/L	P407963	MS
	EPA 353.2 Rev. 2.0	NO2NO3-N	0.74		mg N/L	P407737	
	EPA 365.1 Rev. 2.0	Total-P	0.86		mg P/L	P407843	MS
	SM 5310 B-2011	Organic Carbon	13		mg C/L	P407990	
2295725	EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	0.75		mg P/L	P407560	
2295728	EPA 8321B	Aldicarb	0.020	U	ug/L	P407683	
		Aldicarb Sulfone	0.0020	U	ug/L	P407683	
		Aldicarb Sulfoxide	0.0020	UJ	ug/L	P407683	MS
		Carbaryl	0.0020	U	ug/L	P407683	
		Carbofuran	0.0020	U	ug/L	P407683	
		3-Hydroxycarbofuran	0.0020	U	ug/L	P407683	
		Methiocarb	0.0020	U	ug/L	P407683	
		Methomyl	0.0020	U	ug/L	P407683	
		Oxamyl	0.0020	U	ug/L	P407683	
		Propoxur	0.0020	U	ug/L	P407683	
2295729		2,4-D	0.076		ug/L	P407620	
		Acesulfame K	0.10	UJ	ug/L	P407617	CCV
		AMPA	1.1		ug/L	P407617	
		2,4,5-T	0.0040	U	ug/L	P407620	
		Acetaminophen	0.0080	U	ug/L	P407620	
		Endothall	0.25	U	ug/L	P407617	
		Acetamiprid	0.0020	U	ug/L	P407620	
		Glufosinate	0.10	U	ug/L	P407617	
		Glyphosate	1.1		ug/L	P407617	
		Afidopyropen	0.0020	U	ug/L	P407620	
		Sucralose	0.82		ug/L	P407617	
		Bentazon	0.0076		ug/L	P407620	
		Benzovindiflupyr	0.0020	U	ug/L	P407620	
		Carbamazepine	0.0030	I	ug/L	P407620	
		Clothianidin	0.045		ug/L	P407620	
		Dinotefuran	0.0037	I	ug/L	P407620	
		Diuron	0.0080	I	ug/L	P407620	
		Fenuron	0.016	U	ug/L	P407620	
		Fluridone	9.9E-04	I	ug/L	P407620	

Field ID: G3SD0154

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2295729	EPA 8321B	Imazapyr	0.099		ug/L	P407620	
		Hydrocodone	0.0020	U	ug/L	P407620	
		Ibuprofen	0.020	U	ug/L	P407620	
		Imidacloprid	0.065		ug/L	P407620	
		Linuron	0.0040	U	ug/L	P407620	
		Mandestrobin	0.0020	U	ug/L	P407620	
		MCP	0.0040	U	ug/L	P407620	
		Naproxen	0.0080	U	ug/L	P407620	
		Primidone	0.0040	U	ug/L	P407620	MS
		Pyraclostrobin	0.0020	U	ug/L	P407620	
		Silvex	0.0040	U	ug/L	P407620	
		Thiamethoxam	0.098		ug/L	P407620	
		Tolfenpyrad	0.0020	U	ug/L	P407620	
		Triclopyr	0.0040	U	ug/L	P407620	
2295730	EPA 8270E	Aldrin	0.71	U	ng/L	P407878	RPD
		Alpha-BHC	0.11	U	ng/L	P407878	
		Alpha-Chlordane	0.22	U	ng/L	P407878	
		Beta-BHC	0.11	U	ng/L	P407878	
		Beta-Cyfluthrin**	1.4	U	ng/L	P407878	
		Bifenthrin**	0.55	U	ng/L	P407878	
		Chlorothalonil	0.55	U	ng/L	P407878	
		Cis-Nonachlor**	0.22	U	ng/L	P407878	
		Cypermethrin	1.6	U	ng/L	P407878	
		Dacthal**	0.16	U	ng/L	P407878	
		DDD-p,p'	0.27	U	ng/L	P407878	
		DDE-p,p'	0.22	U	ng/L	P407878	
		DDT-p,p'	0.27	U	ng/L	P407878	
		Delta-BHC	0.44	U	ng/L	P407878	
		Deltamethrin**	1.4	U	ng/L	P407878	
		Dichlobenil**	0.11	U	ng/L	P407878	
		Dicofol	1.4	U	ng/L	P407878	
		Dieldrin	0.44	U	ng/L	P407878	
		Endosulfan I	0.44	U	ng/L	P407878	
		Endosulfan II	0.44	U	ng/L	P407878	
		Endosulfan Sulfate	0.33	U	ng/L	P407878	
		Endrin	0.44	U	ng/L	P407878	
		Endrin Aldehyde	0.82	U	ng/L	P407878	
		Endrin Ketone	0.44	U	ng/L	P407878	
		Esfenvalerate**	0.82	U	ng/L	P407878	
		Ethalfuralin**	0.16	U	ng/L	P407878	
		Fenprothrin**	0.27	U	ng/L	P407878	
		Gamma-BHC	0.14	U	ng/L	P407878	
		Gamma-Chlordane	0.22	U	ng/L	P407878	
		Heptachlor	0.22	U	ng/L	P407878	
		Heptachlor Epoxide	0.27	U	ng/L	P407878	

Field ID: G3SD0154

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2295730	EPA 8270E	Hexachlorobenzene	1.1	U	ng/L	P407878	
		Kepone**	5.5	U	ng/L	P407878	
		Lambda-Cyhalothrin**	0.82	U	ng/L	P407878	
		Methoprene**	0.82	U	ng/L	P407878	
		Methoxychlor	0.33	U	ng/L	P407878	
		MGK-264**	0.22	U	ng/L	P407878	
		Mirex	0.77	U	ng/L	P407878	
		Oxychlordane**	0.33	U	ng/L	P407878	
		Permethrin	1.8	U	ng/L	P407878	
		Phenothrin**	0.99	UJ	ng/L	P407878	LCS
		Piperonyl Butoxide**	0.16	U	ng/L	P407878	
		Prallethrin**	2.2	U	ng/L	P407878	
		Tau-Fluvalinate**	0.27	UJ	ng/L	P407878	LCS
		Tetramethrin**	0.82	U	ng/L	P407878	
		Trans-Nonachlor**	0.22	U	ng/L	P407878	
		Triclosan Methyl**	0.16	U	ng/L	P407878	
		Trifluralin	0.22	U	ng/L	P407878	
	EPA 8276	Chlordane	2.7	UJ	ng/L	P407878	SUR
		Toxaphene	16	UJ	ng/L	P407878	SUR
2295731	EPA 8270E	Acetochlor	0.25	U	ng/L	P407641	
		Alachlor	0.25	U	ng/L	P407641	
		Ametryn	0.59	U	ng/L	P407641	
		Atrazine	1.9		ng/L	P407641	
		Atrazine Desethyl	1.5	U	ng/L	P407641	
		Azinphos Methyl	2.0	U	ng/L	P407641	
		Azoxystrobin**	0.92	I	ng/L	P407641	
		Bromacil	120		ng/L	P407641	
		Butylate	0.39	U	ng/L	P407641	
		Caffeine**	7.4	U	ng/L	P407641	
		Carbophenothion	0.49	U	ng/L	P407641	
		Carfentrazone Ethyl**	0.098	U	ng/L	P407641	
		Chlorfenapyr**	0.17	U	ng/L	P407641	
		Chlorpyrifos Ethyl	0.25	U	ng/L	P407641	
		Chlorpyrifos Methyl	0.049	U	ng/L	P407641	
		Coumaphos**	0.49	U	ng/L	P407641	
		Cyanazine	3.2	U	ng/L	P407641	
		Cyprodinil**	0.098	U	ng/L	P407641	
		Demeton	1.5	U	ng/L	P407641	
		Diazinon	0.12	U	ng/L	P407641	
		Difenoconazole**	0.59	U	ng/L	P407641	
		Dimethenamid**	0.098	U	ng/L	P407641	
		Dimethomorph**	0.17	U	ng/L	P407641	MS
		Disulfoton	0.49	U	ng/L	P407641	
		Dithiopyr**	0.29	I	ng/L	P407641	
		EPTC	1.2	U	ng/L	P407641	

Field ID: G3SD0154

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2295731	EPA 8270E	Ethion	0.15	U	ng/L	P407641	
		Ethoprop	0.098	U	ng/L	P407641	
		Etridiazole**	0.15	U	ng/L	P407641	
		Fenamiphos	0.49	U	ng/L	P407641	
		Fenbuconazole**	0.29	I	ng/L	P407641	
		Fipronil	0.25	U	ng/L	P407641	
		Fipronil Desulfinyll**	0.12	U	ng/L	P407641	
		Fipronil Sulfide	0.15	U	ng/L	P407641	
		Fipronil Sulfone	0.15	U	ng/L	P407641	
		Fluazifop-P-butyl**	0.098	U	ng/L	P407641	
		Fludioxonil**	0.12	U	ng/L	P407641	
		Flumioxazin**	1.7	U	ng/L	P407641	
		Flutolanil**	0.098	U	ng/L	P407641	
		Fluxapyroxad**	0.098	U	ng/L	P407641	
		Fonofos	0.20	U	ng/L	P407641	
		Hexazinone	16		ng/L	P407641	
		Imazalil**	0.74	U	ng/L	P407641	
		Iprodione**	0.59	U	ng/L	P407641	
		Loratadine**	0.098	U	ng/L	P407641	
		Malathion	0.34	U	ng/L	P407641	
		Metalaxyl	18		ng/L	P407641	
		Metolachlor	1.2	I	ng/L	P407641	
		Metribuzin	3.2	U	ng/L	P407641	
		Mevinphos	1.0	U	ng/L	P407641	
		Molinate	0.29	U	ng/L	P407641	
		Myclobutanil**	0.25	U	ng/L	P407641	
		Naled**	1.5	UJ	ng/L	P407641	LCS
		Napropamide**	0.39	U	ng/L	P407641	
		Norflurazon	160		ng/L	P407641	
		Oxadiazon	0.29	U	ng/L	P407641	
		Oxyfluorfen**	0.15	U	ng/L	P407641	
		Parathion Ethyl	0.25	U	ng/L	P407641	
		Parathion Methyl	0.54	U	ng/L	P407641	
		Pendimethalin	0.98	UJ	ng/L	P407641	LCS
		Phenytain**	3.4	U	ng/L	P407641	MS
		Phorate	0.51	U	ng/L	P407641	
		Prodiamine**	0.29	U	ng/L	P407641	
		Prometon	0.88	U	ng/L	P407641	
		Prometryn	0.20	U	ng/L	P407641	
		Pronamide**	0.15	U	ng/L	P407641	
		Propanil**	0.12	U	ng/L	P407641	
		Propargite**	1.5	U	ng/L	P407641	
		Propiconazole**	0.49	U	ng/L	P407641	
		Pyraflufen Ethyl**	0.25	U	ng/L	P407641	
		Pyridaben**	0.44	U	ng/L	P407641	

Field ID: G3SD0154

Matrix: W-SURF-FRH

Sample ID	Ref. Method	Component	Result	Code	Units	Batch ID	QC Codes
2295731	EPA 8270E	Pyriproxyfen**	0.12	U	ng/L	P407641	
		Simazine	1.0	I	ng/L	P407641	
		Stirophos**	0.12	U	ng/L	P407641	
		Sulfentrazone**	4.8		ng/L	P407641	
		Tebuconazole**	0.49	U	ng/L	P407641	
		Terbufos	0.098	U	ng/L	P407641	
		Terbuthylazine	0.42	U	ng/L	P407641	
		Thiobencarb**	0.59	U	ng/L	P407641	
		Triadimefon**	0.25	U	ng/L	P407641	
2295732	EPA 200.7 Rev. 4.4	Barium	13.6		ug/L	P407676	
		Calcium	43.3		mg/L	P407676	
		Iron	250		ug/L	P407676	
		Magnesium	18.0		mg/L	P407676	
		Manganese	12.5		ug/L	P407676	
		Potassium	6.3		mg/L	P407676	
		Sodium	24.7		mg/L	P407676	
		Strontium	1.25E+03		ug/L	P407676	
		Tin	3.0	U	ug/L	P407676	
		Titanium	1.3	I	ug/L	P407676	
	EPA 200.8 Rev. 5.4	Vanadium	3.3	I	ug/L	P407676	
		Zinc	5.5	I	ug/L	P407676	
		Aluminum	136		ug/L	P407676	
		Antimony	0.27		ug/L	P407676	
		Arsenic	1.45		ug/L	P407676	
		Beryllium	0.013	I	ug/L	P407676	
		Boron**	54.9		ug/L	P407676	
		Cadmium	0.040	I	ug/L	P407676	
		Chromium	0.60	I	ug/L	P407676	
		Cobalt	0.146		ug/L	P407676	
		Copper	0.56	I	ug/L	P407676	
		Lead	0.20	U	ug/L	P407676	
		Molybdenum	3.85		ug/L	P407676	
		Nickel	1.1	I	ug/L	P407676	
		Selenium	0.37	I	ug/L	P407676	
		Silver	0.010	U	ug/L	P407676	
		Thallium	0.10	U	ug/L	P407676	
	SM 2340B	Hardness	182		mg/L	P407676	

Ref. Method and Comment:

SM 2540 D-2011: Batch relative percent difference is unavailable because of low analyte concentration in the QC sample.

EPA 351.2 Rev. 2.0: Refer to the Lab Analysis Report for an explanation of QC Codes.

EPA 8321B: Refer to the Lab Analysis Report for an explanation of QC Codes.

EPA 8321B: The sample result for acesulfame K was confirmed beyond holding time. Refer to the Lab Analysis Report for an explanation of QC Codes.

EPA 8270E: Refer to the Lab Analysis Report for an explanation of QC Codes.

EPA 8276: Reported results qualified with J due to surrogate below control limits; the sample was subsequently re-analyzed (after expiration) with acceptable surrogate recovery and the same analytical results were obtained. Refer to the Lab Analysis Report for an explanation of QC Codes.

Quality Assurance Report Method Blank Results

Reference Method: EPA 180.1 Rev. 2.0
Batch ID: P407570

Component	Result	Code	Units
Turbidity	0.10	U	NTU

Reference Method: EPA 200.7 Rev. 4.4
Batch ID: P407676

Component	Result	Code	Units
Barium	1.0	U	ug/L
Calcium	0.075	U	mg/L
Iron	30	U	ug/L
Magnesium	0.040	U	mg/L
Manganese	1.0	U	ug/L
Potassium	0.30	U	mg/L
Sodium	0.50	U	mg/L
Strontium	2.0	U	ug/L
Tin	3.0	U	ug/L
Titanium	0.75	U	ug/L
Vanadium	2.0	U	ug/L
Zinc	5.0	U	ug/L

Reference Method: EPA 200.8 Rev. 5.4
Batch ID: P407676

Component	Result	Code	Units
Aluminum	5.0	U	ug/L
Antimony	0.050	U	ug/L
Arsenic	0.050	U	ug/L
Beryllium	0.010	U	ug/L
Boron	2.0	U	ug/L
Cadmium	0.020	U	ug/L
Chromium	0.40	U	ug/L
Cobalt	0.020	U	ug/L
Copper	0.40	U	ug/L
Lead	0.20	U	ug/L
Molybdenum	0.15	U	ug/L
Nickel	0.50	U	ug/L
Selenium	0.20	U	ug/L
Silver	0.010	U	ug/L
Thallium	0.10	U	ug/L

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P407704

Component	Result	Code	Units
Chloride	0.20	U	mg Cl/L

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P407707

Component	Result	Code	Units
Sulfate	0.20	U	mg SO4/L

Quality Assurance Report Method Blank Results

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P408018

Component	Result	Code	Units
Ammonia-N	0.002	U	mg N/L

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P407963

Component	Result	Code	Units
Kjeldahl Nitrogen	0.080	U	mg N/L

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P407737

Component	Result	Code	Units
NO2NO3-N	0.004	U	mg N/L

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P407843

Component	Result	Code	Units
Total-P	0.002	U	mg P/L

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P407560

Component	Result	Code	Units
O-Phosphate-P	0.004	U	mg P/L

Reference Method: EPA 8270E
Batch ID: P407641

Component	Result	Code	Units
Acetochlor	0.25	U	ng/L
Acetochlor	0.25	U	ng/L
Alachlor	0.25	U	ng/L
Alachlor	0.25	U	ng/L
Ametryn	0.60	U	ng/L
Ametryn	0.60	U	ng/L
Atrazine	0.25	U	ng/L
Atrazine	0.25	U	ng/L
Atrazine Desethyl	1.5	U	ng/L
Atrazine Desethyl	1.5	U	ng/L
Azinphos Methyl	2.0	U	ng/L
Azinphos Methyl	2.0	U	ng/L
Azoxystrobin	0.50	U	ng/L
Azoxystrobin	0.50	U	ng/L
Bromacil	0.50	U	ng/L
Bromacil	0.50	U	ng/L
Butylate	0.40	U	ng/L
Butylate	0.40	U	ng/L
Caffeine	7.5	U	ng/L
Caffeine	7.5	U	ng/L
Carbophenothion	0.50	U	ng/L
Carbophenothion	0.50	U	ng/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8270E

Batch ID: P407641

Component	Result	Code	Units
Carfentrazone Ethyl	0.10	U	ng/L
Carfentrazone Ethyl	0.10	U	ng/L
Chlorfenapyr	0.18	U	ng/L
Chlorfenapyr	0.18	U	ng/L
Chlorpyrifos Ethyl	0.25	U	ng/L
Chlorpyrifos Ethyl	0.25	U	ng/L
Chlorpyrifos Methyl	0.050	U	ng/L
Chlorpyrifos Methyl	0.050	U	ng/L
Coumaphos	0.50	U	ng/L
Coumaphos	0.50	U	ng/L
Cyanazine	3.2	U	ng/L
Cyanazine	3.2	U	ng/L
Cyprodinil	0.10	U	ng/L
Cyprodinil	0.10	U	ng/L
Demeton	1.5	U	ng/L
Demeton	1.5	U	ng/L
Diazinon	0.12	U	ng/L
Diazinon	0.12	U	ng/L
Difenoconazole	0.60	U	ng/L
Difenoconazole	0.60	U	ng/L
Dimethenamid	0.10	U	ng/L
Dimethenamid	0.10	U	ng/L
Dimethomorph	0.18	U	ng/L
Dimethomorph	0.18	U	ng/L
Disulfoton	0.50	U	ng/L
Disulfoton	0.50	U	ng/L
Dithiopyr	0.18	U	ng/L
Dithiopyr	0.18	U	ng/L
EPTC	1.2	U	ng/L
EPTC	1.2	U	ng/L
Ethion	0.15	U	ng/L
Ethion	0.15	U	ng/L
Ethoprop	0.10	U	ng/L
Ethoprop	0.10	U	ng/L
Etridiazole	0.15	U	ng/L
Etridiazole	0.15	U	ng/L
Fenamiphos	0.50	U	ng/L
Fenamiphos	0.50	U	ng/L
Fenbuconazole	0.12	U	ng/L
Fenbuconazole	0.12	U	ng/L
Fipronil	0.25	U	ng/L
Fipronil	0.25	U	ng/L
Fipronil Desulfinyl	0.12	U	ng/L
Fipronil Desulfinyl	0.12	U	ng/L
Fipronil Sulfide	0.15	U	ng/L
Fipronil Sulfide	0.15	U	ng/L
Fipronil Sulfone	0.15	U	ng/L
Fipronil Sulfone	0.15	U	ng/L
Fluazifop-P-butyl	0.10	U	ng/L
Fluazifop-P-butyl	0.10	U	ng/L
Fludioxonil	0.12	U	ng/L
Fludioxonil	0.12	U	ng/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8270E

Batch ID: P407641

Component	Result	Code	Units
Flumioxazin	1.8	U	ng/L
Flumioxazin	1.8	U	ng/L
Flutolanil	0.10	U	ng/L
Flutolanil	0.10	U	ng/L
Fluxapyroxad	0.10	U	ng/L
Fluxapyroxad	0.10	U	ng/L
Fonofos	0.20	U	ng/L
Fonofos	0.20	U	ng/L
Hexazinone	0.50	U	ng/L
Hexazinone	0.50	U	ng/L
Imazalil	0.75	U	ng/L
Imazalil	0.75	U	ng/L
Iprodione	0.60	U	ng/L
Iprodione	0.60	U	ng/L
Loratadine	0.10	U	ng/L
Loratadine	0.10	U	ng/L
Malathion	0.35	U	ng/L
Malathion	0.35	U	ng/L
Metaxyl	0.75	U	ng/L
Metaxyl	0.75	U	ng/L
Metolachlor	0.35	U	ng/L
Metolachlor	0.35	U	ng/L
Metribuzin	3.2	U	ng/L
Metribuzin	3.2	U	ng/L
Mevinphos	1.0	U	ng/L
Mevinphos	1.0	U	ng/L
Molinate	0.30	U	ng/L
Molinate	0.30	U	ng/L
Myclobutanil	0.25	U	ng/L
Myclobutanil	0.25	U	ng/L
Naled	1.5	U	ng/L
Naled	1.5	U	ng/L
Napropamide	0.40	U	ng/L
Napropamide	0.40	U	ng/L
Norflurazon	0.50	U	ng/L
Norflurazon	0.50	U	ng/L
Oxadiazon	0.30	U	ng/L
Oxadiazon	0.30	U	ng/L
Oxyfluorfen	0.15	U	ng/L
Oxyfluorfen	0.15	U	ng/L
Parathion Ethyl	0.25	U	ng/L
Parathion Ethyl	0.25	U	ng/L
Parathion Methyl	0.55	U	ng/L
Parathion Methyl	0.55	U	ng/L
Pendimethalin	1.0	U	ng/L
Pendimethalin	1.0	U	ng/L
Phenytol	3.5	U	ng/L
Phenytol	3.5	U	ng/L
Phorate	0.52	U	ng/L
Phorate	0.52	U	ng/L
Prodiamine	0.30	U	ng/L
Prodiamine	0.30	U	ng/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8270E

Batch ID: P407641

Component	Result	Code	Units
Prometon	0.90	U	ng/L
Prometon	0.90	U	ng/L
Prometryn	0.20	U	ng/L
Prometryn	0.20	U	ng/L
Pronamide	0.15	U	ng/L
Pronamide	0.15	U	ng/L
Propanil	0.12	U	ng/L
Propanil	0.12	U	ng/L
Propargite	1.5	U	ng/L
Propargite	1.5	U	ng/L
Propiconazole	0.50	U	ng/L
Propiconazole	0.50	U	ng/L
Pyraflufen Ethyl	0.25	U	ng/L
Pyraflufen Ethyl	0.25	U	ng/L
Pyridaben	0.45	U	ng/L
Pyridaben	0.45	U	ng/L
Pyriproxyfen	0.12	U	ng/L
Pyriproxyfen	0.12	U	ng/L
Simazine	0.50	U	ng/L
Simazine	0.50	U	ng/L
Stirophos	0.12	U	ng/L
Stirophos	0.12	U	ng/L
Sulfentrazone	0.50	U	ng/L
Sulfentrazone	0.50	U	ng/L
Tebuconazole	0.50	U	ng/L
Tebuconazole	0.50	U	ng/L
Terbufos	0.10	U	ng/L
Terbufos	0.10	U	ng/L
Terbuthylazine	0.42	U	ng/L
Terbuthylazine	0.42	U	ng/L
Thiobencarb	0.60	U	ng/L
Thiobencarb	0.60	U	ng/L
Triadimefon	0.25	U	ng/L
Triadimefon	0.25	U	ng/L

Reference Method: EPA 8270E

Batch ID: P407878

Component	Result	Code	Units
Aldrin	0.65	U	ng/L
Aldrin	0.65	U	ng/L
Alpha-BHC	0.10	U	ng/L
Alpha-BHC	0.10	U	ng/L
Alpha-Chlordane	0.20	U	ng/L
Alpha-Chlordane	0.20	U	ng/L
Beta-BHC	0.10	U	ng/L
Beta-BHC	0.10	U	ng/L
Beta-Cyfluthrin	1.2	U	ng/L
Beta-Cyfluthrin	1.2	U	ng/L
Bifenthrin	0.50	U	ng/L
Bifenthrin	0.50	U	ng/L
Chlorothalonil	0.50	U	ng/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8270E

Batch ID: P407878

Component	Result	Code	Units
Chlorothalonil	0.50	U	ng/L
Cis-Nonachlor	0.20	U	ng/L
Cis-Nonachlor	0.20	U	ng/L
Cypermethrin	1.5	U	ng/L
Cypermethrin	1.5	U	ng/L
Dacthal	0.15	U	ng/L
Dacthal	0.15	U	ng/L
DDD-p,p'	0.25	U	ng/L
DDD-p,p'	0.25	U	ng/L
DDE-p,p'	0.20	U	ng/L
DDE-p,p'	0.20	U	ng/L
DDT-p,p'	0.25	U	ng/L
DDT-p,p'	0.25	U	ng/L
Delta-BHC	0.40	U	ng/L
Delta-BHC	0.40	U	ng/L
Deltamethrin	1.2	U	ng/L
Deltamethrin	1.2	U	ng/L
Dichlobenil	0.10	U	ng/L
Dichlobenil	0.10	U	ng/L
Dicofol	1.2	U	ng/L
Dicofol	1.2	U	ng/L
Dieldrin	0.40	U	ng/L
Dieldrin	0.40	U	ng/L
Endosulfan I	0.40	U	ng/L
Endosulfan I	0.40	U	ng/L
Endosulfan II	0.40	U	ng/L
Endosulfan II	0.40	U	ng/L
Endosulfan Sulfate	0.30	U	ng/L
Endosulfan Sulfate	0.30	U	ng/L
Endrin	0.40	U	ng/L
Endrin	0.40	U	ng/L
Endrin Aldehyde	0.75	U	ng/L
Endrin Aldehyde	0.75	U	ng/L
Endrin Ketone	0.40	U	ng/L
Endrin Ketone	0.40	U	ng/L
Esfenvalerate	0.75	U	ng/L
Esfenvalerate	0.75	U	ng/L
Ethalfuralin	0.15	U	ng/L
Ethalfuralin	0.15	U	ng/L
Fenpropathrin	0.25	U	ng/L
Fenpropathrin	0.25	U	ng/L
Gamma-BHC	0.12	U	ng/L
Gamma-BHC	0.12	U	ng/L
Gamma-Chlordane	0.20	U	ng/L
Gamma-Chlordane	0.20	U	ng/L
Heptachlor	0.20	U	ng/L
Heptachlor	0.20	U	ng/L
Heptachlor Epoxide	0.25	U	ng/L
Heptachlor Epoxide	0.25	U	ng/L
Hexachlorobenzene	1.0	U	ng/L
Hexachlorobenzene	1.0	U	ng/L
Kepone	5.0	U	ng/L

Quality Assurance Report Method Blank Results

Reference Method: EPA 8270E

Batch ID: P407878

Component	Result	Code	Units
Kepone	5.0	U	ng/L
Lambda-Cyhalothrin	0.75	U	ng/L
Lambda-Cyhalothrin	0.75	U	ng/L
Methoprene	0.75	U	ng/L
Methoprene	0.75	U	ng/L
Methoxychlor	0.30	U	ng/L
Methoxychlor	0.30	U	ng/L
MGK-264	0.20	U	ng/L
MGK-264	0.20	U	ng/L
Mirex	0.70	U	ng/L
Mirex	0.70	U	ng/L
Oxychlordane	0.30	U	ng/L
Oxychlordane	0.30	U	ng/L
Permethrin	1.6	U	ng/L
Permethrin	1.6	U	ng/L
Phenothrin	0.90	U	ng/L
Phenothrin	0.90	U	ng/L
Piperonyl Butoxide	0.15	U	ng/L
Piperonyl Butoxide	0.15	U	ng/L
Prallethrin	2.0	U	ng/L
Prallethrin	2.0	U	ng/L
Tau-Fluvalinate	0.25	U	ng/L
Tau-Fluvalinate	0.25	U	ng/L
Tetramethrin	0.75	U	ng/L
Tetramethrin	0.75	U	ng/L
Trans-Nonachlor	0.20	U	ng/L
Trans-Nonachlor	0.20	U	ng/L
Triclosan Methyl	0.15	U	ng/L
Triclosan Methyl	0.15	U	ng/L
Trifluralin	0.20	U	ng/L
Trifluralin	0.20	U	ng/L

Reference Method: EPA 8276

Batch ID: P407878

Component	Result	Code	Units
Chlordane	2.5	U	ng/L
Chlordane	2.5	U	ng/L
Toxaphene	15	U	ng/L
Toxaphene	15	U	ng/L

Reference Method: EPA 8321B

Batch ID: P407617

Component	Result	Code	Units
Acesulfame K	0.10	U	ug/L
AMPA	0.10	U	ug/L
Endothall	0.25	U	ug/L
Glufosinate	0.10	U	ug/L
Glyphosate	0.10	U	ug/L
Sucralose	0.010	U	ug/L

Quality Assurance Report

Method Blank Results

Reference Method: EPA 8321B

Batch ID: P407620

Component	Result	Code	Units
2,4-D	0.0020	U	ug/L
2,4,5-T	0.0040	U	ug/L
Acetaminophen	0.0080	U	ug/L
Acetamiprid	0.0020	U	ug/L
Afidopyropen	0.0020	U	ug/L
Bentazon	8.0E-04	U	ug/L
Benzovindiflupyr	0.0020	U	ug/L
Carbamazepine	8.0E-04	U	ug/L
Clothianidin	0.0020	U	ug/L
Dinotefuran	0.0020	U	ug/L
Diuron	0.0020	U	ug/L
Fenuron	0.016	U	ug/L
Fluridone	8.0E-04	U	ug/L
Hydrocodone	0.0020	U	ug/L
Ibuprofen	0.020	U	ug/L
Imazapyr	0.0040	U	ug/L
Imidacloprid	0.0020	U	ug/L
Linuron	0.0040	U	ug/L
Mandestrobin	0.0020	U	ug/L
MCPP	0.0040	U	ug/L
Naproxen	0.0080	U	ug/L
Primidone	0.0040	U	ug/L
Pyraclostrobin	0.0020	U	ug/L
Silvex	0.0040	U	ug/L
Thiamethoxam	0.0020	U	ug/L
Tolfenpyrad	0.0020	U	ug/L
Triclopyr	0.0040	U	ug/L

Reference Method: EPA 8321B

Batch ID: P407683

Component	Result	Code	Units
3-Hydroxycarbofuran	0.0020	U	ug/L
Aldicarb	0.020	U	ug/L
Aldicarb Sulfone	0.0020	U	ug/L
Aldicarb Sulfoxide	0.0020	U	ug/L
Carbaryl	0.0020	U	ug/L
Carbofuran	0.0020	U	ug/L
Methiocarb	0.0020	U	ug/L
Methomyl	0.0020	U	ug/L
Oxamyl	0.0020	U	ug/L
Propoxur	0.0020	U	ug/L

Reference Method: SM 2120 B-2011

Batch ID: P407567

Component	Result	Code	Units
Color (true)	2.5	U	PCU

Quality Assurance Report

Method Blank Results

Reference Method: SM 2320 B-2011
Batch ID: P407664

Component	Result	Code	Units
Total Alkalinity	0.65	U	mg CaCO ₃ /L

Reference Method: SM 2540 C-2011
Batch ID: P407892

Component	Result	Code	Units
TDS	15	U	mg/L

Reference Method: SM 2540 D-2011
Batch ID: P407702

Component	Result	Code	Units
TSS	2	U	mg/L

Reference Method: SM 4500 F-C-2011
Batch ID: P407667

Component	Result	Code	Units
Fluoride	0.035	U	mg F/L

Reference Method: SM 5310 B-2011
Batch ID: P407990

Component	Result	Code	Units
Organic Carbon	0.50	U	mg C/L

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 200.7 Rev. 4.4

Batch ID: P407676

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Barium	103		P	85 - 115
Calcium	108		P	85 - 115
Iron	111		P	85 - 115
Magnesium	110		P	85 - 115
Manganese	103		P	85 - 115
Potassium	106		P	85 - 115
Sodium	104		P	85 - 115
Strontium	102		P	85 - 115
Tin	105		P	85 - 115
Titanium	104		P	85 - 115
Vanadium	104		P	85 - 115
Zinc	107		P	85 - 115

Reference Method: EPA 200.8 Rev. 5.4

Batch ID: P407676

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Aluminum	102		P	85 - 115
Antimony	98.4		P	85 - 115
Arsenic	101		P	85 - 115
Beryllium	101		P	85 - 115
Boron	101		P	85 - 115
Cadmium	100		P	85 - 115
Chromium	99.1		P	85 - 115
Cobalt	101		P	85 - 115
Copper	104		P	85 - 115
Lead	97.6		P	85 - 115
Molybdenum	102		P	85 - 115
Nickel	103		P	85 - 115
Selenium	101		P	85 - 115
Silver	99.7		P	85 - 115
Thallium	104		P	85 - 115

Reference Method: EPA 300.0 Rev. 2.1

Batch ID: P407704

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Chloride	100		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1

Batch ID: P407707

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Sulfate	99.0		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0

Batch ID: P408018

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Ammonia-N	98.4		P	90 - 110

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 351.2 Rev. 2.0

Batch ID: P407963

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Kjeldahl Nitrogen	102		P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0

Batch ID: P407737

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
NO2NO3-N	104		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0

Batch ID: P407843

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total-P	107		P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved

Batch ID: P407560

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
O-Phosphate-P	98.8		P	90 - 110

Reference Method: EPA 8270E

Batch ID: P407641

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Acetochlor	121	108	P/P	70 - 121
Alachlor	112	98.0	P/P	70 - 119
Ametryn	109	110	P/P	61 - 135
Atrazine	111	105	P/P	76 - 123
Atrazine Desethyl	106	103	P/P	35 - 140
Azinphos Methyl	139	131	P/P	57 - 163
Azoxystrobin	109	99.2	P/P	43 - 231
Bromacil	95.8	102	P/P	42 - 123
Butylate	53.5	53.3	P/P	34 - 92.0
Caffeine	72.1	76.0	P/P	70 - 130
Carbophenothion	98.9	92.5	P/P	61 - 121
Carfentrazone Ethyl	127	115	P/P	62 - 139
Chlorfenapyr	98.7	83.8	P/P	50 - 150
Chlorpyrifos Ethyl	87.1	78.3	P/P	67 - 121
Chlorpyrifos Methyl	99.7	93.0	P/P	67 - 120
Coumaphos	105	96.8	P/P	50 - 220
Cyanazine	120	110	P/P	20 - 226
Cyprodinil	124	107	P/P	50 - 150
Demeton	106	91.7	P/P	35 - 125
Diazinon	121	109	P/P	70 - 122
Difenoconazole	146	141	P/P	56 - 186
Dimethenamid	98.8	88.9	P/P	67 - 119
Dimethomorph	118	104	P/P	50 - 150
Disulfoton	108	105	P/P	47 - 120
Dithiopyr	110	99.4	P/P	67 - 118
EPTC	57.7	55.8	P/P	33 - 90.0
Ethion	93.2	85.0	P/P	40 - 133
Ethoprop	97.5	92.3	P/P	61 - 121

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 8270E
 Batch ID: P407641

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Etridiazole	67.5	62.2	P/P	50 - 150
Fenamiphos	92.3	78.3	P/P	31 - 139
Fenbuconazole	116	106	P/P	66 - 141
Fipronil	123	114	P/P	62 - 129
Fipronil Desulfinyl	126	119	P/P	59 - 126
Fipronil Sulfide	96.5	90.6	P/P	63 - 117
Fipronil Sulfone	91.5	80.8	P/P	57 - 117
Fluazifop-P-butyl	118	108	P/P	63 - 124
Fludioxonil	115	107	P/P	63 - 123
Flumioxazin	173	153	P/P	34 - 245
Flutolanil	105	99.9	P/P	56 - 131
Fluxapyroxad	106	93.9	P/P	57 - 117
Fonofos	96.5	85.3	P/P	61 - 116
Hexazinone	111	96.7	P/P	55 - 138
Imazalil	109	88.3	P/P	33 - 143
Iprodione	103	102	P/P	59 - 118
Loratadine	110	92.3	P/P	50 - 150
Malathion	85.4	74.8	P/P	62 - 138
Metaxyl	102	99.6	P/P	24 - 147
Metolachlor	104	91.7	P/P	68 - 118
Metribuzin	107	97.5	P/P	20 - 239
Mevinphos	83.2	84.1	P/P	46 - 124
Molinate	72.5	68.0	P/P	46 - 100
Myclobutanil	107	99.5	P/P	32 - 149
Naled	99.5	91.0	F/P	32 - 95.0
Napropamide	111	95.6	P/P	50 - 150
Norflurazon	118	109	P/P	57 - 127
Oxadiazon	93.7	85.0	P/P	63 - 118
Oxyfluorfen	134	120	P/P	69 - 137
Parathion Ethyl	108	93.4	P/P	70 - 113
Parathion Methyl	124	129	P/P	71 - 130
Pendimethalin	126	105	F/P	55 - 118
Phenytoin	61.4	53.3	P/P	50 - 200
Phorate	85.1	74.2	P/P	46 - 125
Prodiamine	44.8	38.1	P/P	20 - 141
Prometon	103	97.6	P/P	54 - 122
Prometryn	111	97.7	P/P	66 - 124
Pronamide	114	105	P/P	79 - 122
Propanil	138	150	P/P	50 - 150
Propargite	102	93.2	P/P	50 - 200
Propiconazole	109	101	P/P	61 - 126
Pyraflufen Ethyl	114	102	P/P	50 - 150
Pyridaben	109	95.2	P/P	50 - 200
Pyriproxyfen	122	111	P/P	52 - 131
Simazine	106	96.1	P/P	75 - 128
Stirophos	64.7	54.8	P/P	50 - 150
Sulfentrazone	113	106	P/P	20 - 132
Tebuconazole	82.5	76.8	P/P	20 - 116
Terbufos	110	95.4	P/P	61 - 117
Terbutylazine	102	93.2	P/P	74 - 116
Thiobencarb	107	93.5	P/P	50 - 150
Triadimefon	109	96.5	P/P	50 - 150

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 8270E
 Batch ID: P407878

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Aldrin	33.8	26.5	P/P	20 - 83.0
Alpha-BHC	93.3	87.8	P/P	74 - 108
Alpha-Chlordane	64.5	61.9	P/P	53 - 109
Beta-BHC	103	100	P/P	64 - 139
Beta-Cyfluthrin	34.4	39.9	P/P	27 - 171
Bifenthrin	20.7	26.5	P/P	20 - 124
Chlorothalonil	102	95.2	P/P	20 - 182
Cis-Nonachlor	58.4	55.3	P/P	46 - 110
Cypermethrin	37.8	44.1	P/P	35 - 160
Dacthal	91.6	85.3	P/P	70 - 115
DDD-p,p'	67.6	63.2	P/P	51 - 108
DDE-p,p'	68.8	68.3	P/P	51 - 104
DDT-p,p'	64.6	63.8	P/P	52 - 107
Delta-BHC	105	98.9	P/P	73 - 146
Deltamethrin	40.4	45.0	P/P	20 - 190
Dichlobenil	83.8	79.9	P/P	30 - 100
Dicofol	68.6	64.3	P/P	52 - 110
Dieldrin	71.4	67.0	P/P	57 - 111
Endosulfan I	74.8	67.9	P/P	61 - 106
Endosulfan II	81.6	73.3	P/P	57 - 122
Endosulfan Sulfate	96.4	87.6	P/P	58 - 122
Endrin	73.9	68.2	P/P	34 - 125
Endrin Aldehyde	70.6	67.6	P/P	40 - 120
Endrin Ketone	101	84.9	P/P	51 - 138
Esfenvalerate	29.9	35.4	P/P	20 - 193
Ethalfuralin	61.4	59.5	P/P	51 - 99.0
Fenpropathrin	45.1	45.6	P/P	40 - 116
Gamma-BHC	94.7	88.1	P/P	74 - 116
Gamma-Chlordane	58.1	57.1	P/P	49 - 105
Heptachlor	56.7	58.5	P/P	45 - 98.0
Heptachlor Epoxide	73.8	64.6	P/P	61 - 106
Hexachlorobenzene	63.9	62.7	P/P	41 - 96.0
Kepone	110	123	P/P	27 - 179
Lambda-Cyhalothrin	29.4	32.2	P/P	20 - 199
Methoprene	24.2	26.2	P/P	20 - 134
Methoxychlor	80.4	76.4	P/P	61 - 111
MGK-264	52.4	43.7	P/P	20 - 124
Mirex	42.0	47.4	P/P	20 - 199
Oxychlordane	61.7	60.1	P/P	39 - 112
Permethrin	36.4	43.6	P/P	31 - 155
Phenothrin	17.3	17.0	F/F	20 - 100
Piperonyl Butoxide	75.2	79.7	P/P	20 - 144
Prallethrin	31.1	27.5	P/P	20 - 103
Tau-Fluvalinate	22.0	28.5	F/P	24 - 133
Tetramethrin	35.8	28.7	P/P	20 - 116
Trans-Nonachlor	59.7	59.0	P/P	49 - 105
Triclosan Methyl	77.6	73.3	P/P	60 - 111
Trifluralin	61.3	59.8	P/P	53 - 97.0

Quality Assurance Report Laboratory Control Sample Accuracy

Reference Method: EPA 8276
Batch ID: P407878

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Chlordane	60.3	73.4	P/P	56 - 117
Toxaphene	59.6	66.2	P/P	45 - 116

Reference Method: EPA 8321B
Batch ID: P407617

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Acesulfame K	61.8		P	40 - 150
AMPA	127		P	40 - 160
Endothall	77.6		P	40 - 150
Glufosinate	119		P	40 - 160
Glyphosate	116		P	40 - 160
Sucralose	104		P	40 - 150

Reference Method: EPA 8321B
Batch ID: P407620

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2,4-D	105		P	40 - 150
2,4,5-T	123		P	40 - 150
Acetaminophen	87.7		P	30 - 150
Acetamiprid	88.4		P	40 - 150
Afidopyropen	77.0		P	40 - 150
Bentazon	124		P	30 - 150
Benzovindiflupyr	83.0		P	40 - 150
Carbamazepine	97.5		P	40 - 150
Clothianidin	110		P	40 - 150
Dinotefuran	83.4		P	40 - 150
Diuron	79.9		P	40 - 150
Fenuron	93.9		P	40 - 150
Fluridone	91.9		P	40 - 150
Hydrocodone	104		P	40 - 150
Ibuprofen	110		P	40 - 150
Imazapyr	103		P	40 - 150
Imidacloprid	100		P	40 - 150
Linuron	77.5		P	40 - 150
Mandestrobin	89.4		P	40 - 150
MCPP	101		P	40 - 150
Naproxen	56.8		P	40 - 150
Primidone	141		P	40 - 150
Pyraclostrobin	70.5		P	40 - 150
Silvex	90.5		P	40 - 150
Thiamethoxam	96.5		P	40 - 150
Tolfenpyrad	33.0		P	30 - 150
Triclopyr	106		P	40 - 150

Reference Method: EPA 8321B
Batch ID: P407683

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
3-Hydroxycarbofuran	74.8		P	40 - 150
Aldicarb	75.9		P	30 - 150

Quality Assurance Report

Laboratory Control Sample Accuracy

Reference Method: EPA 8321B

Batch ID: P407683

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Aldicarb Sulfone	66.6		P	40 - 150
Aldicarb Sulfoxide	100		P	40 - 150
Carbaryl	70.0		P	40 - 150
Carbofuran	86.1		P	40 - 150
Methiocarb	88.2		P	40 - 150
Methomyl	80.5		P	40 - 150
Oxamyl	77.8		P	40 - 150
Propoxur	86.0		P	40 - 150

Reference Method: SM 2120 B-2011

Batch ID: P407567

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Color (true)	98.4		P	85 - 115

Reference Method: SM 2320 B-2011

Batch ID: P407664

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Total Alkalinity	97.6		P	94 - 106

Reference Method: SM 4500 F-C-2011

Batch ID: P407667

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Fluoride	101		P	93 - 104

Reference Method: SM 5310 B-2011

Batch ID: P407990

Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
Organic Carbon	96.5		P	85 - 115

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 200.7 Rev. 4.4

Batch ID: P407676

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295684	Barium	101	102	P/P	80 - 120
2295684	Calcium	102	103	P/P	80 - 120
2295684	Iron	108	109	P/P	80 - 120
2295684	Magnesium	105	106	P/P	80 - 120
2295684	Manganese	100	102	P/P	80 - 120
2295684	Potassium	101	101	P/P	80 - 120
2295684	Sodium	101	101	P/P	80 - 120
2295684	Strontium	99.3	99.9	P/P	80 - 120
2295684	Tin	103	104	P/P	80 - 120
2295684	Titanium	101	103	P/P	80 - 120
2295684	Vanadium	101	102	P/P	80 - 120
2295684	Zinc	102	104	P/P	80 - 120
2295746	Barium	101		P	80 - 120
2295746	Calcium	101		P	80 - 120
2295746	Iron	109		P	80 - 120
2295746	Magnesium	102		P	80 - 120
2295746	Manganese	100		P	80 - 120
2295746	Potassium	102		P	80 - 120
2295746	Sodium	98.4		P	80 - 120
2295746	Strontium	101		P	80 - 120
2295746	Tin	102		P	80 - 120
2295746	Titanium	101		P	80 - 120
2295746	Vanadium	102		P	80 - 120
2295746	Zinc	103		P	80 - 120

Reference Method: EPA 200.8 Rev. 5.4

Batch ID: P407676

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295684	Aluminum	99.4	98.4	P/P	80 - 120
2295684	Antimony	98.0	97.3	P/P	80 - 120
2295684	Arsenic	98.7	98.5	P/P	80 - 120
2295684	Beryllium	98.4	98.4	P/P	80 - 120
2295684	Boron	98.7	97.2	P/P	80 - 120
2295684	Cadmium	99.4	98.3	P/P	80 - 120
2295684	Chromium	99.2	98.2	P/P	80 - 120
2295684	Cobalt	98.5	97.5	P/P	80 - 120
2295684	Copper	101	101	P/P	80 - 120
2295684	Lead	96.5	95.0	P/P	80 - 120
2295684	Molybdenum	100	98.5	P/P	80 - 120
2295684	Nickel	102	102	P/P	80 - 120
2295684	Selenium	98.2	98.1	P/P	80 - 120
2295684	Silver	98.8	98.6	P/P	80 - 120
2295684	Thallium	103	103	P/P	80 - 120
2295746	Aluminum	102		P	80 - 120
2295746	Antimony	100		P	80 - 120
2295746	Arsenic	102		P	80 - 120
2295746	Beryllium	98.1		P	80 - 120
2295746	Boron	98.1		P	80 - 120
2295746	Cadmium	99.3		P	80 - 120
2295746	Chromium	98.1		P	80 - 120
2295746	Cobalt	96.9		P	80 - 120

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 200.8 Rev. 5.4

Batch ID: P407676

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295746	Copper	101		P	80 - 120
2295746	Lead	97.2		P	80 - 120
2295746	Molybdenum	103		P	80 - 120
2295746	Nickel	101		P	80 - 120
2295746	Selenium	100		P	80 - 120
2295746	Silver	98.6		P	80 - 120
2295746	Thallium	103		P	80 - 120

Reference Method: EPA 300.0 Rev. 2.1

Batch ID: P407704

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295571	Chloride	99.8		P	90 - 110
2295626	Chloride	100		P	90 - 110

Reference Method: EPA 300.0 Rev. 2.1

Batch ID: P407707

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295571	Sulfate	97.8		P	90 - 110
2295626	Sulfate	97.5		P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0

Batch ID: P408018

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295645	Ammonia-N	98.6	99.6	P/P	90 - 110

Reference Method: EPA 351.2 Rev. 2.0

Batch ID: P407963

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295724	Kjeldahl Nitrogen	118	126	F/F	90 - 110

Reference Method: EPA 353.2 Rev. 2.0

Batch ID: P407737

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295710	NO2NO3-N	106	106	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0

Batch ID: P407843

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295585	Total-P	107	110	P/F	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved

Batch ID: P407560

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295630	O-Phosphate-P	96.9	95.3	P/P	90 - 110

Quality Assurance Report

Matrix Spike Accuracy

Reference Method: EPA 8270E

Batch ID: P407641

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295927	Acetochlor	108	117	P/P	66 - 122
2295927	Alachlor	103	102	P/P	65 - 122
2295927	Ametryn	118	110	P/P	45 - 173
2295927	Atrazine	121	131	P/P	70 - 134
2295927	Atrazine Desethyl	96.1	99.2	P/P	25 - 150
2295927	Azinphos Methyl	119	127	P/P	44 - 174
2295927	Azoxystrobin	122	122	P/P	10 - 268
2295927	Bromacil	82.1	99.3	P/P	31 - 145
2295927	Butylate	50.3	57.7	P/P	15 - 97.0
2295927	Caffeine	89.9	101	P/P	70 - 130
2295927	Carbophenothion	95.8	98.9	P/P	42 - 129
2295927	Carfentrazone Ethyl	111	121	P/P	62 - 145
2295927	Chlorfenapyr	90.7	103	P/P	50 - 150
2295927	Chlorpyrifos Ethyl	79.2	103	P/P	60 - 124
2295927	Chlorpyrifos Methyl	95.2	99.4	P/P	66 - 119
2295927	Coumaphos	90.2	94.3	P/P	50 - 220
2295927	Cyanazine	122	102	P/P	17 - 225
2295927	Cyprodinil	118	135	P/P	50 - 150
2295927	Demeton	111	116	P/P	36 - 142
2295927	Diazinon	126	126	P/P	70 - 128
2295927	Difenoconazole	132	158	P/P	33 - 222
2295927	Dimethenamid	86.9	94.8	P/P	54 - 125
2295927	Dimethomorph	172	137	F/P	50 - 150
2295927	Disulfoton	100	111	P/P	49 - 133
2295927	Dithiopyr	96.3	108	P/P	55 - 123
2295927	EPTC	58.2	62.4	P/P	19 - 91.0
2295927	Ethion	68.1	86.0	P/P	13 - 143
2295927	Ethoprop	110	103	P/P	49 - 144
2295927	Etridiazole	70.8	78.9	P/P	50 - 150
2295927	Fenamiphos	87.6	89.5	P/P	32 - 136
2295927	Fenbuconazole	101	112	P/P	73 - 148
2295927	Fipronil	108	126	P/P	57 - 129
2295927	Fipronil Desulfinyl	104	116	P/P	49 - 127
2295927	Fipronil Sulfide	90.6	95.7	P/P	44 - 127
2295927	Fipronil Sulfone	79.0	84.5	P/P	35 - 126
2295927	Fluazifop-P-butyl	106	112	P/P	67 - 129
2295927	Fludioxonil	104	115	P/P	61 - 126
2295927	Flumioxazin	153	182	P/P	38 - 279
2295927	Flutolanil	95.8	113	P/P	55 - 136
2295927	Fluxapyroxad	85.0	100	P/P	33 - 140
2295927	Fonofos	96.7	97.4	P/P	58 - 125
2295927	Hexazinone	106	115	P/P	57 - 148
2295927	Imazalil	106	105	P/P	10 - 221
2295927	Iprodione	94.7	112	P/P	32 - 140
2295927	Loratadine	150	120	P/P	50 - 150
2295927	Malathion	80.1	89.6	P/P	52 - 138
2295927	Metalaxyl	94.8	105	P/P	46 - 134
2295927	Metolachlor	84.6	107	P/P	58 - 122
2295927	Metribuzin	110	113	P/P	16 - 272
2295927	Mevinphos	87.4	96.9	P/P	45 - 140
2295927	Molinate	79.2	80.0	P/P	41 - 103
2295927	Myclobutanil	99.8	109	P/P	60 - 134

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 8270E
Batch ID: P407641

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295927	Naled	87.4	108	P/P	20 - 113
2295927	Napropamide	97.5	113	P/P	50 - 150
2295927	Norflurazon	89.3	107	P/P	51 - 123
2295927	Oxadiazon	90.2	92.3	P/P	44 - 125
2295927	Oxyfluorfen	124	138	P/P	66 - 176
2295927	Parathion Ethyl	105	109	P/P	57 - 132
2295927	Parathion Methyl	124	130	P/P	59 - 156
2295927	Pendimethalin	125	124	P/P	59 - 129
2295927	Phenytoin	45.0	59.7	F/P	50 - 200
2295927	Phorate	89.5	96.0	P/P	47 - 136
2295927	Prodiamine	46.8	59.6	P/P	10 - 159
2295927	Prometon	90.8	106	P/P	59 - 127
2295927	Prometryn	98.7	111	P/P	59 - 129
2295927	Pronamide	101	113	P/P	65 - 145
2295927	Propanil	105	115	P/P	50 - 150
2295927	Propargite	81.5	106	P/P	50 - 200
2295927	Propiconazole	89.1	111	P/P	28 - 165
2295927	Pyraflufen Ethyl	99.8	109	P/P	50 - 150
2295927	Pyridaben	97.7	100	P/P	50 - 200
2295927	Pyriproxyfen	114	114	P/P	21 - 180
2295927	Simazine	110	117	P/P	63 - 147
2295927	Stirophos	70.1	80.2	P/P	50 - 150
2295927	Sulfentrazone	97.5	109	P/P	32 - 136
2295927	Tebuconazole	58.9	82.2	P/P	10 - 117
2295927	Terbufos	116	125	P/P	61 - 131
2295927	Terbutylazine	95.5	104	P/P	62 - 126
2295927	Thiobencarb	84.3	106	P/P	50 - 150
2295927	Triadimefon	103	107	P/P	50 - 150

Reference Method: EPA 8270E
Batch ID: P407878

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295034	Aldrin	24.2	35.2	P/P	10 - 94.0
2295034	Alpha-BHC	87.1	85.7	P/P	71 - 108
2295034	Alpha-Chlordane	61.4	64.6	P/P	42 - 115
2295034	Beta-BHC	105	104	P/P	56 - 161
2295034	Beta-Cyfluthrin	53.4	51.3	P/P	46 - 190
2295034	Bifenthrin	32.5	46.0	P/P	19 - 126
2295034	Chlorothalonil	108	106	P/P	10 - 262
2295034	Cis-Nonachlor	54.7	60.7	P/P	44 - 112
2295034	Cypermethrin	49.1	55.1	P/P	40 - 178
2295034	Dacthal	87.1	88.1	P/P	60 - 119
2295034	DDD-p,p'	61.7	68.0	P/P	40 - 114
2295034	DDE-p,p'	64.4	63.1	P/P	22 - 125
2295034	DDT-p,p'	59.8	62.9	P/P	39 - 110
2295034	Delta-BHC	105	100	P/P	64 - 174
2295034	Deltamethrin	58.0	61.0	P/P	10 - 227
2295034	Dichlobenil	78.5	77.9	P/P	20 - 99.0
2295034	Dicofol	63.1	66.1	P/P	43 - 115
2295034	Dieldrin	66.7	70.8	P/P	31 - 131
2295034	Endosulfan I	66.0	72.3	P/P	52 - 110

Quality Assurance Report

Matrix Spike Accuracy

Reference Method: EPA 8270E

Batch ID: P407878

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295034	Endosulfan II	72.7	74.0	P/P	53 - 127
2295034	Endosulfan Sulfate	91.4	88.6	P/P	44 - 135
2295034	Endrin	69.5	73.3	P/P	36 - 122
2295034	Endrin Aldehyde	76.1	74.1	P/P	23 - 115
2295034	Endrin Ketone	89.0	95.8	P/P	46 - 147
2295034	Esfenvalerate	44.1	49.1	P/P	25 - 217
2295034	Ethalfuralin	60.2	60.5	P/P	46 - 99.0
2295034	Fenpropathrin	56.6	53.3	P/P	42 - 121
2295034	Gamma-BHC	90.2	89.3	P/P	63 - 131
2295034	Gamma-Chlordane	55.7	56.1	P/P	40 - 108
2295034	Heptachlor	52.2	56.2	P/P	38 - 98.0
2295034	Heptachlor Epoxide	72.2	70.2	P/P	39 - 124
2295034	Hexachlorobenzene	51.3	58.9	P/P	37 - 96.0
2295034	Kepone	119	144	P/P	10 - 216
2295034	Lambda-Cyhalothrin	42.3	49.9	P/P	21 - 220
2295034	Methoprene	38.7	37.2	P/P	19 - 112
2295034	Methoxychlor	74.3	81.3	P/P	56 - 118
2295034	MGK-264	61.5	55.6	P/P	28 - 125
2295034	Mirex	43.9	47.0	P/P	10 - 203
2295034	Oxychlordane	62.0	60.8	P/P	46 - 92.0
2295034	Permethrin	55.4	52.8	P/P	42 - 173
2295034	Phenothrin	21.2	33.4	P/P	10 - 140
2295034	Piperonyl Butoxide	87.0	79.9	P/P	10 - 158
2295034	Prallethrin	41.0	31.0	P/P	19 - 119
2295034	Tau-Fluvalinate	31.7	46.4	P/P	27 - 164
2295034	Tetramethrin	46.2	45.0	P/P	16 - 130
2295034	Trans-Nonachlor	57.7	57.0	P/P	43 - 105
2295034	Triclosan Methyl	68.9	74.4	P/P	50 - 113
2295034	Trifluralin	59.3	60.3	P/P	48 - 98.0

Reference Method: EPA 8276

Batch ID: P407878

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295428	Chlordane	74.2	68.6	P/P	47 - 128
2295428	Toxaphene	69.0	68.5	P/P	11 - 163

Reference Method: EPA 8321B

Batch ID: P407617

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295641	Acesulfame K	106	104	P/P	40 - 150
2295641	AMPA	131	135	P/P	40 - 160
2295641	Endothall	97.3	103	P/P	40 - 150
2295641	Glufosinate	128	126	P/P	40 - 160
2295641	Glyphosate	126	127	P/P	40 - 160
2295641	Sucralose	105	102	P/P	40 - 150

Reference Method: EPA 8321B

Batch ID: P407620

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
---------------	-----------	---------	---------	-----------	----------------

Quality Assurance Report Matrix Spike Accuracy

Reference Method: EPA 8321B
 Batch ID: P407620

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295376	2,4-D	95.6	82.5	P/P	40 - 150
2295376	2,4,5-T	99.6	102	P/P	40 - 150
2295376	Acetaminophen	87.2	92.9	P/P	30 - 150
2295376	Acetamiprid	84.3	90.8	P/P	40 - 150
2295376	Afidopyropen	85.9	68.7	P/P	40 - 150
2295376	Bentazon	94.3	94.0	P/P	30 - 150
2295376	Benzovindiflupyr	83.1	77.8	P/P	40 - 150
2295376	Carbamazepine	89.3	86.6	P/P	40 - 150
2295376	Clothianidin	93.2	112	P/P	40 - 150
2295376	Dinotefuran	86.7	89.1	P/P	40 - 150
2295376	Diuron	86.6	76.1	P/P	40 - 150
2295376	Fenuron	82.4	78.2	P/P	40 - 150
2295376	Fluridone	87.4	87.9	P/P	40 - 150
2295376	Hydrocodone	101	94.2	P/P	40 - 150
2295376	Ibuprofen	84.0	68.7	P/P	40 - 150
2295376	Imazapyr	108	106	P/P	40 - 150
2295376	Imidacloprid	112	111	P/P	40 - 150
2295376	Linuron	79.1	65.9	P/P	40 - 150
2295376	Mandestrobin	86.6	85.2	P/P	40 - 150
2295376	MCCP	101	94.8	P/P	40 - 150
2295376	Naproxen	71.3	83.4	P/P	40 - 150
2295376	Primidone	163	135	F/P	40 - 150
2295376	Pyraclostrobin	80.6	81.7	P/P	40 - 150
2295376	Silvex	83.2	82.5	P/P	40 - 150
2295376	Thiamethoxam	105	95.2	P/P	40 - 150
2295376	Tolfenpyrad	57.9	48.3	P/P	30 - 150
2295376	Triclopyr	99.7	99.2	P/P	40 - 150

Reference Method: EPA 8321B
 Batch ID: P407683

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295728	3-Hydroxycarbofuran	69.4	67.0	P/P	40 - 150
2295728	Aldicarb	82.1	66.6	P/P	30 - 150
2295728	Aldicarb Sulfone	74.9	70.4	P/P	40 - 150
2295728	Aldicarb Sulfoxide	42.3	37.5	P/F	40 - 150
2295728	Carbaryl	77.7	64.7	P/P	40 - 150
2295728	Carbofuran	85.6	74.3	P/P	40 - 150
2295728	Methiocarb	94.8	74.9	P/P	40 - 150
2295728	Methomyl	72.6	64.3	P/P	40 - 150
2295728	Oxamyl	69.5	62.5	P/P	40 - 150
2295728	Propoxur	74.6	68.7	P/P	40 - 150

Reference Method: SM 4500 F-C-2011
 Batch ID: P407667

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295578	Fluoride	100	101	P/P	92 - 107

Quality Assurance Report

Matrix Spike Accuracy

Reference Method: SM 5310 B-2011
Batch ID: P407990

Spiked Sample	Component	% Rec.1	% Rec.2	Pass/Fail	Control Limits
2295629	Organic Carbon	95.2	96.6	P/P	85 - 115

Quality Assurance Report Precision

Reference Method: EPA 180.1 Rev. 2.0

Batch ID: P407570

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295626	Turbidity	8.47	Sample	P	0 - 20

Reference Method: EPA 200.7 Rev. 4.4

Batch ID: P407676

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295684	Barium	1.44	Spike	P	0 - 20
2295684	Calcium	0.454	Spike	P	0 - 20
2295684	Iron	0.962	Spike	P	0 - 20
2295684	Magnesium	0.147	Spike	P	0 - 20
2295684	Manganese	1.46	Spike	P	0 - 20
2295684	Potassium	0.284	Spike	P	0 - 20
2295684	Sodium	0.195	Spike	P	0 - 20
2295684	Strontium	0.617	Spike	P	0 - 20
2295684	Tin	0.870	Spike	P	0 - 20
2295684	Titanium	1.39	Spike	P	0 - 20
2295684	Vanadium	1.41	Spike	P	0 - 20
2295684	Zinc	1.25	Spike	P	0 - 20

Reference Method: EPA 200.8 Rev. 5.4

Batch ID: P407676

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295684	Aluminum	0.969	Spike	P	0 - 20
2295684	Antimony	0.660	Spike	P	0 - 20
2295684	Arsenic	0.245	Spike	P	0 - 20
2295684	Beryllium	0.0310	Spike	P	0 - 20
2295684	Boron	1.36	Spike	P	0 - 20
2295684	Cadmium	1.12	Spike	P	0 - 20
2295684	Chromium	0.971	Spike	P	0 - 20
2295684	Cobalt	1.01	Spike	P	0 - 20
2295684	Copper	0.779	Spike	P	0 - 20
2295684	Lead	1.44	Spike	P	0 - 20
2295684	Molybdenum	1.55	Spike	P	0 - 20
2295684	Nickel	0.130	Spike	P	0 - 20
2295684	Selenium	0.122	Spike	P	0 - 20
2295684	Silver	0.157	Spike	P	0 - 20
2295684	Thallium	0.0394	Spike	P	0 - 20

Reference Method: EPA 300.0 Rev. 2.1

Batch ID: P407704

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295571	Chloride	0.118	Sample	P	0 - 20

Quality Assurance Report Precision

Reference Method: EPA 300.0 Rev. 2.1
Batch ID: P407707

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295571	Sulfate	0.496	Sample	P	0 - 20

Reference Method: EPA 350.1 Rev. 2.0
Batch ID: P408018

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295645	Ammonia-N	0.895	Spike	P	0 - 20

Reference Method: EPA 351.2 Rev. 2.0
Batch ID: P407963

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295724	Kjeldahl Nitrogen	4.08	Spike	P	0 - 20

Reference Method: EPA 353.2 Rev. 2.0
Batch ID: P407737

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295710	NO2NO3-N	0.473	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0
Batch ID: P407843

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295585	Total-P	2.35	Spike	P	0 - 20

Reference Method: EPA 365.1 Rev. 2.0 dissolved
Batch ID: P407560

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295630	O-Phosphate-P	1.48	Spike	P	0 - 20

Reference Method: EPA 8270E
Batch ID: P407641

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295927	Acetochlor	7.56	Spike	P	0 - 24
2295927	Alachlor	1.16	Spike	P	0 - 24
2295927	Ametryn	7.29	Spike	P	0 - 27
2295927	Atrazine	7.19	Spike	P	0 - 29
2295927	Atrazine Desethyl	3.22	Spike	P	0 - 30
2295927	Azinphos Methyl	6.18	Spike	P	0 - 50
2295927	Azoxystrobin	0.0597	Spike	P	0 - 32
2295927	Bromacil	15.5	Spike	P	0 - 30
2295927	Butylate	13.7	Spike	P	0 - 47

Quality Assurance Report Precision

Reference Method: EPA 8270E
Batch ID: P407641

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295927	Caffeine	11.4	Spike	P	0 - 60
2295927	Carbophenothion	3.13	Spike	P	0 - 24
2295927	Carfentrazone Ethyl	9.19	Spike	P	0 - 26
2295927	Chlorfenapyr	12.9	Spike	P	0 - 30
2295927	Chlorpyrifos Ethyl	26.2	Spike	P	0 - 27
2295927	Chlorpyrifos Methyl	4.22	Spike	P	0 - 22
2295927	Coumaphos	4.46	Spike	P	0 - 30
2295927	Cyanazine	18.1	Spike	P	0 - 32
2295927	Cyprodinil	13.7	Spike	P	0 - 30
2295927	Demeton	4.89	Spike	P	0 - 25
2295927	Diazinon	0.460	Spike	P	0 - 24
2295927	Difenoconazole	18.0	Spike	P	0 - 25
2295927	Dimethenamid	8.69	Spike	P	0 - 30
2295927	Dimethomorph	22.5	Spike	P	0 - 30
2295927	Disulfoton	10.3	Spike	P	0 - 26
2295927	Dithiopyr	11.1	Spike	P	0 - 22
2295927	EPTC	6.88	Spike	P	0 - 38
2295927	Ethion	23.3	Spike	P	0 - 47
2295927	Ethoprop	6.60	Spike	P	0 - 23
2295927	Etridiazole	10.8	Spike	P	0 - 30
2295927	Fenamiphos	2.12	Spike	P	0 - 34
2295927	Fenbuconazole	10.6	Spike	P	0 - 37
2295927	Fipronil	14.8	Spike	P	0 - 23
2295927	Fipronil Desulfinyl	10.2	Spike	P	0 - 26
2295927	Fipronil Sulfide	5.42	Spike	P	0 - 23
2295927	Fipronil Sulfone	6.75	Spike	P	0 - 24
2295927	Fluazifop-P-butyl	5.54	Spike	P	0 - 24
2295927	Fludioxonil	9.88	Spike	P	0 - 26
2295927	Flumioxazin	17.3	Spike	P	0 - 37
2295927	Flutolanil	16.4	Spike	P	0 - 26
2295927	Fluxapyroxad	16.2	Spike	P	0 - 34
2295927	Fonofos	0.696	Spike	P	0 - 22
2295927	Hexazinone	5.54	Spike	P	0 - 21
2295927	Imazalil	0.891	Spike	P	0 - 65
2295927	Iprodione	16.5	Spike	P	0 - 33
2295927	Loratadine	22.4	Spike	P	0 - 30
2295927	Malathion	11.2	Spike	P	0 - 26
2295927	Metalaxyl	10.4	Spike	P	0 - 38
2295927	Metolachlor	23.6	Spike	P	0 - 36
2295927	Metribuzin	2.59	Spike	P	0 - 29
2295927	Mevinphos	10.3	Spike	P	0 - 26
2295927	Molinate	1.02	Spike	P	0 - 27
2295927	Myclobutanil	8.91	Spike	P	0 - 21
2295927	Naled	21.3	Spike	P	0 - 26
2295927	Napropamide	14.7	Spike	P	0 - 30
2295927	Norflurazon	18.2	Spike	P	0 - 24
2295927	Oxadiazon	2.34	Spike	P	0 - 23
2295927	Oxyfluorfen	11.0	Spike	P	0 - 24
2295927	Parathion Ethyl	3.06	Spike	P	0 - 23
2295927	Parathion Methyl	4.61	Spike	P	0 - 23
2295927	Pendimethalin	0.456	Spike	P	0 - 31

Quality Assurance Report Precision

Reference Method: EPA 8270E
Batch ID: P407641

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295927	Phenytoin	28.0	Spike	P	0 - 30
2295927	Phorate	7.03	Spike	P	0 - 27
2295927	Prodiamine	24.1	Spike	P	0 - 52
2295927	Prometon	15.2	Spike	P	0 - 31
2295927	Prometryn	11.8	Spike	P	0 - 24
2295927	Pronamide	11.1	Spike	P	0 - 26
2295927	Propanil	8.98	Spike	P	0 - 30
2295927	Propargite	26.0	Spike	P	0 - 30
2295927	Propiconazole	22.0	Spike	P	0 - 31
2295927	Pyraflufen Ethyl	8.90	Spike	P	0 - 30
2295927	Pyridaben	2.22	Spike	P	0 - 30
2295927	Pyriproxyfen	0.0630	Spike	P	0 - 50
2295927	Simazine	6.30	Spike	P	0 - 25
2295927	Stirophos	13.5	Spike	P	0 - 30
2295927	Sulfentrazone	11.0	Spike	P	0 - 33
2295927	Tebuconazole	33.1	Spike	P	0 - 43
2295927	Terbufos	7.40	Spike	P	0 - 22
2295927	Terbutylazine	8.31	Spike	P	0 - 24
2295927	Thiobencarb	23.0	Spike	P	0 - 30
2295927	Triadimefon	3.90	Spike	P	0 - 30
LFB	Acetochlor	10.6	LCS	P	0 - 22
LFB	Alachlor	13.0	LCS	P	0 - 20
LFB	Ametryn	1.63	LCS	P	0 - 25
LFB	Atrazine	5.71	LCS	P	0 - 20
LFB	Atrazine Desethyl	2.93	LCS	P	0 - 33
LFB	Azinphos Methyl	5.96	LCS	P	0 - 51
LFB	Azoxystrobin	9.08	LCS	P	0 - 47
LFB	Bromacil	6.53	LCS	P	0 - 26
LFB	Butylate	0.407	LCS	P	0 - 35
LFB	Caffeine	5.31	LCS	P	0 - 27
LFB	Carbophenothion	6.68	LCS	P	0 - 22
LFB	Carfentrazone Ethyl	10.1	LCS	P	0 - 21
LFB	Chlorfenapyr	16.4	LCS	P	0 - 30
LFB	Chlorpyrifos Ethyl	10.6	LCS	P	0 - 23
LFB	Chlorpyrifos Methyl	6.94	LCS	P	0 - 24
LFB	Coumaphos	7.81	LCS	P	0 - 30
LFB	Cyanazine	9.37	LCS	P	0 - 37
LFB	Cyprodinil	14.8	LCS	P	0 - 30
LFB	Demeton	14.9	LCS	P	0 - 32
LFB	Diazinon	10.7	LCS	P	0 - 21
LFB	Difenoconazole	3.07	LCS	P	0 - 37
LFB	Dimethenamid	10.6	LCS	P	0 - 21
LFB	Dimethomorph	12.6	LCS	P	0 - 30
LFB	Disulfoton	3.20	LCS	P	0 - 31
LFB	Dithiopyr	9.69	LCS	P	0 - 21
LFB	EPTC	3.42	LCS	P	0 - 41
LFB	Ethion	9.17	LCS	P	0 - 45
LFB	Ethoprop	5.44	LCS	P	0 - 28
LFB	Etridiazole	8.19	LCS	P	0 - 30
LFB	Fenamiphos	16.4	LCS	P	0 - 28
LFB	Fenbuconazole	8.87	LCS	P	0 - 36

Quality Assurance Report

Precision

Reference Method: EPA 8270E
Batch ID: P407641

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
LFB	Fipronil	7.47	LCS	P	0 - 23
LFB	Fipronil Desulfinyl	5.71	LCS	P	0 - 22
LFB	Fipronil Sulfide	6.31	LCS	P	0 - 24
LFB	Fipronil Sulfone	12.4	LCS	P	0 - 24
LFB	Fluazifop-P-butyl	8.13	LCS	P	0 - 23
LFB	Fludioxonil	7.30	LCS	P	0 - 23
LFB	Flumioxazin	12.7	LCS	P	0 - 39
LFB	Flutolanil	5.16	LCS	P	0 - 27
LFB	Fluxapyroxad	12.6	LCS	P	0 - 38
LFB	Fonofos	12.3	LCS	P	0 - 28
LFB	Hexazinone	14.0	LCS	P	0 - 27
LFB	Imazalil	21.0	LCS	P	0 - 45
LFB	Iprodione	1.37	LCS	P	0 - 42
LFB	Loratadine	17.8	LCS	P	0 - 30
LFB	Malathion	13.2	LCS	P	0 - 23
LFB	Metalaxyl	2.87	LCS	P	0 - 41
LFB	Metolachlor	12.5	LCS	P	0 - 21
LFB	Metribuzin	9.38	LCS	P	0 - 31
LFB	Mevinphos	1.14	LCS	P	0 - 32
LFB	Molinate	6.43	LCS	P	0 - 31
LFB	Myclobutanil	7.03	LCS	P	0 - 27
LFB	Naled	8.96	LCS	P	0 - 32
LFB	Napropamide	15.0	LCS	P	0 - 30
LFB	Norflurazon	8.05	LCS	P	0 - 25
LFB	Oxadiazon	9.73	LCS	P	0 - 25
LFB	Oxyfluorfen	11.3	LCS	P	0 - 22
LFB	Parathion Ethyl	14.4	LCS	P	0 - 32
LFB	Parathion Methyl	4.38	LCS	P	0 - 30
LFB	Pendimethalin	18.2	LCS	P	0 - 39
LFB	Phenytoin	14.1	LCS	P	0 - 30
LFB	Phorate	13.7	LCS	P	0 - 36
LFB	Prodiamine	16.0	LCS	P	0 - 71
LFB	Prometon	5.22	LCS	P	0 - 23
LFB	Prometryn	12.6	LCS	P	0 - 22
LFB	Pronamide	7.94	LCS	P	0 - 21
LFB	Propanil	8.09	LCS	P	0 - 30
LFB	Propargite	8.70	LCS	P	0 - 30
LFB	Propiconazole	7.93	LCS	P	0 - 23
LFB	Pyraflufen Ethyl	10.8	LCS	P	0 - 30
LFB	Pyridaben	13.4	LCS	P	0 - 30
LFB	Pyriproxyfen	9.32	LCS	P	0 - 53
LFB	Simazine	9.35	LCS	P	0 - 22
LFB	Stirophos	16.6	LCS	P	0 - 30
LFB	Sulfentrazone	6.36	LCS	P	0 - 45
LFB	Tebuconazole	7.13	LCS	P	0 - 52
LFB	Terbufos	13.8	LCS	P	0 - 27
LFB	Terbuthylazine	9.07	LCS	P	0 - 21
LFB	Thiobencarb	13.6	LCS	P	0 - 30
LFB	Triadimefon	12.0	LCS	P	0 - 30

Quality Assurance Report Precision

Reference Method: EPA 8270E

Batch ID: P407878

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295034	Aldrin	37.0	Spike	F	0 - 37
2295034	Alpha-BHC	1.60	Spike	P	0 - 16
2295034	Alpha-Chlordane	5.05	Spike	P	0 - 28
2295034	Beta-BHC	1.33	Spike	P	0 - 32
2295034	Beta-Cyfluthrin	3.98	Spike	P	0 - 41
2295034	Bifenthrin	34.3	Spike	P	0 - 36
2295034	Chlorothalonil	2.36	Spike	P	0 - 54
2295034	Cis-Nonachlor	10.4	Spike	P	0 - 33
2295034	Cypermethrin	11.3	Spike	P	0 - 38
2295034	Dacthal	1.14	Spike	P	0 - 23
2295034	DDD-p,p'	9.76	Spike	P	0 - 35
2295034	DDE-p,p'	2.09	Spike	P	0 - 27
2295034	DDT-p,p'	5.03	Spike	P	0 - 31
2295034	Delta-BHC	4.33	Spike	P	0 - 30
2295034	Deltamethrin	4.97	Spike	P	0 - 76
2295034	Dichlobenil	0.730	Spike	P	0 - 33
2295034	Dicofol	4.70	Spike	P	0 - 24
2295034	Dieldrin	5.99	Spike	P	0 - 35
2295034	Endosulfan I	9.13	Spike	P	0 - 25
2295034	Endosulfan II	1.67	Spike	P	0 - 31
2295034	Endosulfan Sulfate	3.20	Spike	P	0 - 38
2295034	Endrin	5.29	Spike	P	0 - 53
2295034	Endrin Aldehyde	2.66	Spike	P	0 - 81
2295034	Endrin Ketone	7.38	Spike	P	0 - 33
2295034	Esfenvalerate	10.6	Spike	P	0 - 46
2295034	Ethalfuralin	0.510	Spike	P	0 - 22
2295034	Fenpropathrin	5.97	Spike	P	0 - 29
2295034	Gamma-BHC	0.992	Spike	P	0 - 17
2295034	Gamma-Chlordane	0.685	Spike	P	0 - 28
2295034	Heptachlor	7.38	Spike	P	0 - 28
2295034	Heptachlor Epoxide	2.79	Spike	P	0 - 23
2295034	Hexachlorobenzene	13.6	Spike	P	0 - 22
2295034	Kepone	18.9	Spike	P	0 - 61
2295034	Lambda-Cyhalothrin	16.5	Spike	P	0 - 52
2295034	Methoprene	3.99	Spike	P	0 - 38
2295034	Methoxychlor	8.94	Spike	P	0 - 29
2295034	MGK-264	10.1	Spike	P	0 - 41
2295034	Mirex	6.85	Spike	P	0 - 39
2295034	Oxychlordane	2.03	Spike	P	0 - 33
2295034	Permethrin	4.64	Spike	P	0 - 39
2295034	Phenothrin	44.6	Spike	P	0 - 52
2295034	Piperonyl Butoxide	8.62	Spike	P	0 - 91
2295034	Prallethrin	27.7	Spike	P	0 - 34
2295034	Tau-Fluvalinate	37.5	Spike	P	0 - 41
2295034	Tetramethrin	2.59	Spike	P	0 - 43
2295034	Trans-Nonachlor	1.16	Spike	P	0 - 31
2295034	Triclosan Methyl	7.73	Spike	P	0 - 24
2295034	Trifluralin	1.60	Spike	P	0 - 23
LFB	Aldrin	24.3	LCS	P	0 - 61
LFB	Alpha-BHC	6.10	LCS	P	0 - 15
LFB	Alpha-Chlordane	4.15	LCS	P	0 - 23

Quality Assurance Report Precision

Reference Method: EPA 8270E
Batch ID: P407878

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
LFB	Beta-BHC	3.04	LCS	P	0 - 24
LFB	Beta-Cyfluthrin	14.8	LCS	P	0 - 39
LFB	Bifenthrin	24.8	LCS	P	0 - 48
LFB	Chlorothalonil	6.41	LCS	P	0 - 32
LFB	Cis-Nonachlor	5.41	LCS	P	0 - 32
LFB	Cypermethrin	15.4	LCS	P	0 - 34
LFB	Dacthal	7.11	LCS	P	0 - 19
LFB	DDD-p,p'	6.80	LCS	P	0 - 28
LFB	DDE-p,p'	0.645	LCS	P	0 - 24
LFB	DDT-p,p'	1.22	LCS	P	0 - 22
LFB	Delta-BHC	6.14	LCS	P	0 - 20
LFB	Deltamethrin	10.8	LCS	P	0 - 47
LFB	Dichlobenil	4.74	LCS	P	0 - 22
LFB	Dicofol	6.44	LCS	P	0 - 21
LFB	Dieldrin	6.37	LCS	P	0 - 21
LFB	Endosulfan I	9.60	LCS	P	0 - 20
LFB	Endosulfan II	10.8	LCS	P	0 - 22
LFB	Endosulfan Sulfate	9.52	LCS	P	0 - 25
LFB	Endrin	8.10	LCS	P	0 - 20
LFB	Endrin Aldehyde	4.36	LCS	P	0 - 33
LFB	Endrin Ketone	17.0	LCS	P	0 - 20
LFB	Esfenvalerate	16.9	LCS	P	0 - 42
LFB	Ethalfuralin	3.17	LCS	P	0 - 20
LFB	Fenpropathrin	1.23	LCS	P	0 - 29
LFB	Gamma-BHC	7.30	LCS	P	0 - 16
LFB	Gamma-Chlordane	1.76	LCS	P	0 - 23
LFB	Heptachlor	3.15	LCS	P	0 - 27
LFB	Heptachlor Epoxide	13.3	LCS	P	0 - 20
LFB	Hexachlorobenzene	1.89	LCS	P	0 - 24
LFB	Kepone	11.2	LCS	P	0 - 80
LFB	Lambda-Cyhalothrin	9.26	LCS	P	0 - 42
LFB	Methoprene	8.12	LCS	P	0 - 48
LFB	Methoxychlor	5.18	LCS	P	0 - 22
LFB	MGK-264	18.1	LCS	P	0 - 54
LFB	Mirex	12.2	LCS	P	0 - 32
LFB	Oxychlordane	2.69	LCS	P	0 - 21
LFB	Permethrin	18.0	LCS	P	0 - 36
LFB	Phenothrin	1.64	LCS	P	0 - 60
LFB	Piperonyl Butoxide	5.88	LCS	P	0 - 36
LFB	Prallethrin	12.4	LCS	P	0 - 41
LFB	Tau-Fluvalinate	25.7	LCS	P	0 - 40
LFB	Tetramethrin	22.0	LCS	P	0 - 66
LFB	Trans-Nonachlor	1.21	LCS	P	0 - 25
LFB	Triclosan Methyl	5.65	LCS	P	0 - 19
LFB	Trifluralin	2.54	LCS	P	0 - 21

Reference Method: EPA 8276
Batch ID: P407878

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
--------------------------	-----------	-----------	-------------------	-----------	----------------

Quality Assurance Report Precision

Reference Method: EPA 8276
Batch ID: P407878

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295428	Chlordane	7.94	Spike	P	0 - 30
2295428	Toxaphene	0.664	Spike	P	0 - 30
LFB	Chlordane	19.5	LCS	P	0 - 30
LFB	Toxaphene	10.5	LCS	P	0 - 30

Reference Method: EPA 8321B
Batch ID: P407617

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295641	Acesulfame K	1.49	Spike	P	0 - 30
2295641	AMPA	2.83	Spike	P	0 - 30
2295641	Endothall	6.00	Spike	P	0 - 30
2295641	Glufosinate	1.72	Spike	P	0 - 30
2295641	Glyphosate	0.769	Spike	P	0 - 30
2295641	Sucralose	3.20	Spike	P	0 - 30

Reference Method: EPA 8321B
Batch ID: P407620

Replicated Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295376	2,4-D	14.7	Spike	P	0 - 30
2295376	2,4,5-T	2.51	Spike	P	0 - 30
2295376	Acetaminophen	6.38	Spike	P	0 - 30
2295376	Acetamiprid	7.42	Spike	P	0 - 30
2295376	Afidopyropen	22.3	Spike	P	0 - 30
2295376	Bentazon	0.320	Spike	P	0 - 30
2295376	Benzovindiflupyr	6.69	Spike	P	0 - 30
2295376	Carbamazepine	3.07	Spike	P	0 - 30
2295376	Clothianidin	18.0	Spike	P	0 - 30
2295376	Dinotefuran	2.68	Spike	P	0 - 30
2295376	Diuron	13.0	Spike	P	0 - 30
2295376	Fenuron	5.21	Spike	P	0 - 30
2295376	Fluridone	0.622	Spike	P	0 - 30
2295376	Hydrocodone	7.01	Spike	P	0 - 30
2295376	Ibuprofen	20.0	Spike	P	0 - 30
2295376	Imazapyr	2.16	Spike	P	0 - 30
2295376	Imidacloprid	0.881	Spike	P	0 - 30
2295376	Linuron	18.2	Spike	P	0 - 30
2295376	Mandestrobin	1.61	Spike	P	0 - 30
2295376	MCPP	6.48	Spike	P	0 - 30
2295376	Naproxen	15.6	Spike	P	0 - 30
2295376	Primidone	18.7	Spike	P	0 - 30
2295376	Pyraclostrobin	1.40	Spike	P	0 - 30
2295376	Silvex	0.802	Spike	P	0 - 30
2295376	Thiamethoxam	9.84	Spike	P	0 - 30
2295376	Tolfenpyrad	18.1	Spike	P	0 - 30
2295376	Triclopyr	0.503	Spike	P	0 - 30

Quality Assurance Report Precision

Reference Method: EPA 8321B

Batch ID: P407683

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295728	3-Hydroxycarbofuran	3.47	Spike	P	0 - 30
2295728	Aldicarb	20.9	Spike	P	0 - 30
2295728	Aldicarb Sulfone	6.17	Spike	P	0 - 30
2295728	Aldicarb Sulfoxide	12.1	Spike	P	0 - 30
2295728	Carbaryl	18.4	Spike	P	0 - 30
2295728	Carbofuran	14.1	Spike	P	0 - 30
2295728	Methiocarb	23.5	Spike	P	0 - 30
2295728	Methomyl	12.1	Spike	P	0 - 30
2295728	Oxamyl	10.6	Spike	P	0 - 30
2295728	Propoxur	8.17	Spike	P	0 - 30

Reference Method: SM 2120 B-2011

Batch ID: P407567

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295626	Color (true)	1.16	Sample	P	0 - 20

Reference Method: SM 2320 B-2011

Batch ID: P407664

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295578	Total Alkalinity	1.53	Sample	P	0 - 5.2

Reference Method: SM 2540 C-2011

Batch ID: P407892

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295723	TDS	0.342	Sample	P	0 - 10

Reference Method: SM 4500 F-C-2011

Batch ID: P407667

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295578	Fluoride	0.530	Spike	P	0 - 2.1

Reference Method: SM 5310 B-2011

Batch ID: P407990

Replicated

Lab Sample	Component	% RSD/RPD	Sample/Spike/LCS*	Pass/Fail	Control Limits
2295629	Organic Carbon	1.14	Spike	P	0 - 20

* Sample, spike and/or laboratory control sample precision (LCS) is reported.

Quality Assurance Report Surrogates

Lab Sample ID: 2295728
Field Sample ID: G3SD0154

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	Carbaryl-d7	73.4	P	30 - 160

Lab Sample ID: 2295729
Field Sample ID: G3SD0154

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8321B	2,4-D-d3	99.5	P	30 - 160
EPA 8321B	Acetaminophen-d4	97.6	P	30 - 160
EPA 8321B	Carbamazepine-d10	89.3	P	30 - 160
EPA 8321B	Diuron-d6	90.0	P	30 - 160
EPA 8321B	Endothall-d6	127	P	30 - 160
EPA 8321B	Glyphosate 13C 15N	124	P	30 - 160
EPA 8321B	Ibuprofen-d3	56.7	P	30 - 160
EPA 8321B	Primidone-d5	80.4	P	30 - 160
EPA 8321B	Sucralose-d6	105	P	30 - 160

Lab Sample ID: 2295730
Field Sample ID: G3SD0154

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8270E	Decachlorobiphenyl	38.6	P	29 - 123
EPA 8270E	Tetrachloro-m-xylene	36.3	P	24 - 97.0
EPA 8276	Decachlorobiphenyl	92.5	F	29 - 92.0
EPA 8276	Decachlorobiphenyl	37.0	P	29 - 92.0
EPA 8276	PCNB	88.0	P	43 - 134
EPA 8276	PCNB	39.3	F	43 - 134

Lab Sample ID: 2295731
Field Sample ID: G3SD0154

Reference Method	Surrogate	% Rec.	Pass/Fail	Control Limits
EPA 8270E	Caffeine-d9	67.0	P	20 - 200
EPA 8270E	Simazine-d10	134	P	73 - 135
EPA 8270E	Terbufos-d10	106	P	58 - 130

Quality Assurance Report Calibration Verification

Reference Method: EPA 300.0 Rev. 2.1

Run ID: A109387

Included Lab Sample IDs: 2295723

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Chloride	100	101	P/P	90 - 110
Sulfate	99.1	99.2	P/P	90 - 110

Reference Method: EPA 365.1 Rev. 2.0 dissolved

Run ID: A109435

Included Lab Sample IDs: 2295725

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
O-Phosphate-P	98.7	98.8	P/P	90 - 110

Reference Method: SM 2120 B-2011

Run ID: A109438

Included Lab Sample IDs: 2295723

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Color (true)	99.9	101	P/P	85 - 115

Reference Method: EPA 180.1 Rev. 2.0

Run ID: A109439

Included Lab Sample IDs: 2295723

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Turbidity	99.5	100	P/P	95 - 105

Reference Method: SM 2320 B-2011

Run ID: A109475

Included Lab Sample IDs: 2295723

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total Alkalinity	95.5	98.8	P/P	90 - 110

Reference Method: SM 4500 F-C-2011

Run ID: A109475

Included Lab Sample IDs: 2295723

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Fluoride	105	104	P/P	90 - 110

Reference Method: EPA 353.2 Rev. 2.0

Run ID: A109508

Included Lab Sample IDs: 2295724

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
NO2NO3-N	104	104	P/P	90 - 110

Reference Method: EPA 8321B

Run ID: A109521

Included Lab Sample IDs: 2295729

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
AMPA	125	128	P/P	60 - 160

Quality Assurance Report Calibration Verification

Reference Method: EPA 8321B
Run ID: A109521
Included Lab Sample IDs: 2295729

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Glufosinate	122	130	P/P	60 - 160
Glyphosate	115	114	P/P	60 - 160

Reference Method: EPA 8321B
Run ID: A109560
Included Lab Sample IDs: 2295729

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Acesulfame K	57.7*	101	F/P	60 - 160
Endothall	74.8	79.2	P/P	60 - 160
Sucralose	98.2	92.3	P/P	60 - 160

Reference Method: EPA 200.7 Rev. 4.4
Run ID: A109575
Included Lab Sample IDs: 2295732

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Barium	101	101	P/P	90 - 110
Calcium	100	99.1	P/P	90 - 110
Iron	103	102	P/P	90 - 110
Magnesium	102	101	P/P	90 - 110
Manganese	98.9	100	P/P	90 - 110
Potassium	98.5	98.1	P/P	90 - 110
Sodium	97.8	97.3	P/P	90 - 110
Strontium	100	98.4	P/P	90 - 110
Tin	101	100	P/P	90 - 110
Titanium	97.7	99.7	P/P	90 - 110
Vanadium	96.9	98.5	P/P	90 - 110
Zinc	100	100	P/P	90 - 110

Reference Method: EPA 8270E
Run ID: A109577
Included Lab Sample IDs: 2295730

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Aldrin	101		P	80 - 120
Alpha-BHC	101		P	80 - 120
Alpha-Chlordane	108		P	80 - 120
Beta-BHC	103		P	80 - 120
Beta-Cyfluthrin	103		P	80 - 120
Bifenthrin	105		P	80 - 120
Chlorothalonil	104		P	80 - 120
Cis-Nonachlor	104		P	80 - 120
Cypermethrin	93.8		P	80 - 120
Dacthal	99.6		P	80 - 120
DDD-p,p'	102		P	80 - 120
DDE-p,p'	101		P	80 - 120
DDT-p,p'	100		P	80 - 120
Delta-BHC	102		P	80 - 120
Deltamethrin	99.2		P	80 - 120
Dichlobenil	97.7		P	80 - 120

Quality Assurance Report Calibration Verification

Reference Method: EPA 8270E
Run ID: A109577
Included Lab Sample IDs: 2295730

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Dicofol	102		P	80 - 120
Dieldrin	100		P	80 - 120
Endosulfan I	101		P	80 - 120
Endosulfan II	103		P	80 - 120
Endosulfan Sulfate	104		P	80 - 120
Endrin	102		P	80 - 120
Endrin Aldehyde	102		P	80 - 120
Endrin Ketone	96.2		P	80 - 120
Esfenvalerate	103		P	80 - 120
Ethalfuralin	104		P	80 - 120
Fenpropathrin	102		P	80 - 120
Gamma-BHC	102		P	80 - 120
Gamma-Chlordane	99.5		P	80 - 120
Heptachlor	102		P	80 - 120
Heptachlor Epoxide	98.3		P	80 - 120
Hexachlorobenzene	101		P	80 - 120
Kepone	104		P	80 - 120
Lambda-Cyhalothrin	104		P	80 - 120
Methoprene	103		P	80 - 120
Methoxychlor	101		P	80 - 120
MGK-264	98.6		P	80 - 120
Mirex	107		P	80 - 120
Oxychlordane	101		P	80 - 120
Permethrin	106		P	80 - 120
Phenothrin	106		P	80 - 120
Piperonyl Butoxide	95.1		P	80 - 120
Prallethrin	101		P	80 - 120
Tau-Fluvalinate	101		P	80 - 120
Tetramethrin	103		P	80 - 120
Trans-Nonachlor	94.0		P	80 - 120
Triclosan Methyl	102		P	80 - 120
Trifluralin	98.8		P	80 - 120

Reference Method: EPA 8276
Run ID: A109578
Included Lab Sample IDs: 2295730

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Chlordane	98.9		P	80 - 120
Toxaphene	96.9		P	80 - 120

Reference Method: EPA 365.1 Rev. 2.0
Run ID: A109586
Included Lab Sample IDs: 2295724

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Total-P	107	104	P/P	90 - 110

Quality Assurance Report Calibration Verification

Reference Method: EPA 200.8 Rev. 5.4

Run ID: A109595

Included Lab Sample IDs: 2295732

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Aluminum	97.3	97.5	P/P	90 - 110
Antimony	97.8	97.9	P/P	90 - 110
Arsenic	97.9	98.0	P/P	90 - 110
Boron	99.1	96.6	P/P	90 - 110
Cadmium	98.4	97.9	P/P	90 - 110
Chromium	94.8	94.7	P/P	90 - 110
Cobalt	93.2	94.0	P/P	90 - 110
Copper	96.6	96.8	P/P	90 - 110
Lead	91.9	91.9	P/P	90 - 110
Molybdenum	97.6	96.9	P/P	90 - 110
Nickel	96.0	96.5	P/P	90 - 110
Selenium	98.1	97.6	P/P	90 - 110
Silver	97.6	97.2	P/P	90 - 110
Thallium	100	98.5	P/P	90 - 110

Reference Method: EPA 200.8 Rev. 5.4

Run ID: A109606

Included Lab Sample IDs: 2295732

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Beryllium	96.0	95.0	P/P	90 - 110

Reference Method: EPA 8270E

Run ID: A109616

Included Lab Sample IDs: 2295731

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Acetochlor	102		P	80 - 120
Alachlor	99.9		P	80 - 120
Ametryn	99.7		P	80 - 120
Atrazine	95.8		P	80 - 120
Atrazine Desethyl	95.6		P	80 - 120
Azinphos Methyl	91.1		P	80 - 120
Azoxystrobin	100		P	80 - 120
Butylate	106		P	80 - 120
Caffeine	82.9		P	80 - 120
Carbophenothion	95.4		P	80 - 120
Carfentrazone Ethyl	99.4		P	80 - 120
Chlorfenapyr	110		P	80 - 120
Chlorpyrifos Ethyl	103		P	80 - 120
Chlorpyrifos Methyl	98.9		P	80 - 120
Coumaphos	98.5		P	80 - 120
Cyanazine	99.9		P	80 - 120
Cyprodinil	92.6		P	80 - 120
Demeton	93.0		P	80 - 120
Diazinon	101		P	80 - 120
Difenoconazole	96.9		P	80 - 120
Dimethenamid	103		P	80 - 120
Dimethomorph	97.5		P	80 - 120
Disulfoton	91.3		P	80 - 120
Dithiopyr	101		P	80 - 120

Quality Assurance Report Calibration Verification

Reference Method: EPA 8270E
 Run ID: A109616
 Included Lab Sample IDs: 2295731

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
EPTC	103		P	80 - 120
Ethion	99.0		P	80 - 120
Ethoprop	101		P	80 - 120
Etridiazole	94.4		P	80 - 120
Fenamiphos	95.8		P	80 - 120
Fenbuconazole	101		P	80 - 120
Fipronil	98.5		P	80 - 120
Fipronil Desulfinyl	103		P	80 - 120
Fipronil Sulfide	105		P	80 - 120
Fipronil Sulfone	107		P	80 - 120
Fluazifop-P-butyl	102		P	80 - 120
Fludioxonil	98.5		P	80 - 120
Flumioxazin	96.4		P	80 - 120
Flutolanil	102		P	80 - 120
Fluxapyroxad	98.1		P	80 - 120
Fonofos	99.2		P	80 - 120
Hexazinone	109		P	80 - 120
Imazalil	96.2		P	80 - 120
Iprodione	95.8		P	80 - 120
Loratadine	104		P	80 - 120
Malathion	101		P	80 - 120
Metalaxyl	106		P	80 - 120
Metolachlor	101		P	80 - 120
Metribuzin	103		P	80 - 120
Mevinphos	89.7		P	80 - 120
Molinate	104		P	80 - 120
Myclobutanil	101		P	80 - 120
Naled	105		P	80 - 120
Napropamide	103		P	80 - 120
Oxadiazon	102		P	80 - 120
Oxyfluorfen	94.1		P	80 - 120
Parathion Ethyl	96.3		P	80 - 120
Parathion Methyl	95.6		P	80 - 120
Pendimethalin	98.8		P	80 - 120
Phenytoin	99.9		P	80 - 120
Phorate	108		P	80 - 120
Proclamate	87.4		P	80 - 120
Prometon	101		P	80 - 120
Prometryn	95.5		P	80 - 120
Pronamide	92.6		P	80 - 120
Propanil	93.5		P	80 - 120
Propargite	92.0		P	80 - 120
Propiconazole	105		P	80 - 120
Pyraflufen Ethyl	107		P	80 - 120
Pyridaben	96.2		P	80 - 120
Pyriproxyfen	93.2		P	80 - 120
Simazine	112		P	80 - 120
Stirophos	102		P	80 - 120
Sulfentrazone	97.0		P	80 - 120
Tebuconazole	96.4		P	80 - 120
Terbufos	103		P	80 - 120

Quality Assurance Report Calibration Verification

Reference Method: EPA 8270E
Run ID: A109616
Included Lab Sample IDs: 2295731

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Terbutylazine	101		P	80 - 120
Thiobencarb	101		P	80 - 120
Triadimefon	99.2		P	80 - 120

Reference Method: EPA 8270E
Run ID: A109617
Included Lab Sample IDs: 2295731

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Bromacil	103		P	80 - 120
Norflurazon	104		P	80 - 120

Reference Method: SM 5310 B-2011
Run ID: A109635
Included Lab Sample IDs: 2295724

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Organic Carbon	96.6	95.8	P/P	90 - 110

Reference Method: EPA 350.1 Rev. 2.0
Run ID: A109639
Included Lab Sample IDs: 2295724

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Ammonia-N	98.9	98.6	P/P	90 - 110

Reference Method: EPA 8321B
Run ID: A109654
Included Lab Sample IDs: 2295728

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
3-Hydroxycarbofuran	103	84.2	P/P	60 - 150
Aldicarb	114	94.6	P/P	60 - 150
Aldicarb Sulfone	97.5	107	P/P	50 - 150
Aldicarb Sulfoxide	96.5	104	P/P	50 - 150
Carbaryl	89.7	87.3	P/P	60 - 150
Carbofuran	102	104	P/P	50 - 150
Methiocarb	89.6	96.3	P/P	50 - 150
Methomyl	98.4	104	P/P	50 - 150
Oxamyl	93.6	101	P/P	50 - 150
Propoxur	88.7	91.4	P/P	50 - 150

Reference Method: EPA 8321B
Run ID: A109663
Included Lab Sample IDs: 2295729

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
2,4-D	114	92.2	P/P	50 - 150
2,4,5-T	119	118	P/P	50 - 150
Acetaminophen	96.5	95.9	P/P	60 - 160
Acetamiprid	94.5	104	P/P	50 - 150

Quality Assurance Report Calibration Verification

Reference Method: EPA 8321B
 Run ID: A109663
 Included Lab Sample IDs: 2295729

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Afidopyropen	93.0	81.6	P/P	50 - 150
Bentazon	130	136	P/P	50 - 160
Benzovindiflupyr	105	102	P/P	50 - 150
Carbamazepine	96.5	100	P/P	60 - 150
Clothianidin	103	102	P/P	60 - 150
Dinotefuran	85.2	99.2	P/P	50 - 150
Diuron	92.1	97.7	P/P	60 - 160
Fenuron	98.5	98.8	P/P	60 - 150
Fluridone	100	102	P/P	60 - 160
Hydrocodone	106	107	P/P	60 - 150
Ibuprofen	72.2	80.2	P/P	50 - 160
Imazapyr	124	143	P/P	50 - 150
Imidacloprid	104	97.6	P/P	60 - 150
Linuron	79.5	98.1	P/P	60 - 150
Mandestrobin	106	103	P/P	50 - 150
MCPP	89.5	107	P/P	50 - 150
Naproxen	107	78.2	P/P	50 - 160
Primidone	93.0	130	P/P	60 - 150
Pyraclostrobin	99.9	97.4	P/P	60 - 150
Silvex	108	109	P/P	50 - 150
Thiamethoxam	102	91.9	P/P	50 - 150
Tolfenpyrad	90.7	91.9	P/P	60 - 150
Triclopyr	110	93.8	P/P	50 - 150

Reference Method: EPA 351.2 Rev. 2.0
 Run ID: A109670
 Included Lab Sample IDs: 2295724

Component	% Rec.1	% Rec.2	Pass/Fail*	Control Limits
Kjeldahl Nitrogen	105	104	P/P	90 - 110

* Pass/Fail determinations are made for each bracketing calibration verification check.
 Control limits for initial calibration checks may be different from those for continuing checks, depending on method requirements.
 Where they are different, both control limits are provided.

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery		MS % Recovery			LCS	Precision SMP	MS
EPA 180.1 Rev. 2.0	Turbidity							8.47	
EPA 200.7 Rev. 4.4	Barium	103		101	101	102			1.44
	Calcium	108		101	102	103			0.454
	Iron	111		109	108	109			0.962
	Magnesium	110		102	105	106			0.147
	Manganese	103		100	100	102			1.46
	Potassium	106		102	101	101			0.284
	Sodium	104		98.4	101	101			0.195
	Strontium	102		101	99.3	99.9			0.617
	Tin	105		102	103	104			0.870
	Titanium	104		101	101	103			1.39
	Vanadium	104		102	101	102			1.41
	Zinc	107		103	102	104			1.25
EPA 200.8 Rev. 5.4	Aluminum	102		99.4	98.4	102			0.969
	Antimony	98.4		98.0	97.3	100			0.660
	Arsenic	101		98.7	98.5	102			0.245
	Beryllium	101		98.4	98.4	98.1			0.0310
	Boron	101		98.7	97.2	98.1			1.36
	Cadmium	100		99.4	98.3	99.3			1.12
	Chromium	99.1		99.2	98.2	98.1			0.971
	Cobalt	101		98.5	97.5	96.9			1.01
	Copper	104		101	101	101			0.779
	Lead	97.6		96.5	95.0	97.2			1.44
	Molybdenum	102		100	98.5	103			1.55
	Nickel	103		102	102	101			0.130
	Selenium	101		98.2	98.1	100			0.122
	Silver	99.7		98.8	98.6	98.6			0.157
	Thallium	104		103	103	103			0.0394
EPA 300.0 Rev. 2.1	Chloride	100		99.8	100			0.118	
	Sulfate	99.0		97.8	97.5			0.496	
EPA 350.1 Rev. 2.0	Ammonia-N	98.4		98.6	99.6				0.895
EPA 351.2 Rev. 2.0	Kjeldahl Nitrogen	102		118	126				4.08
EPA 353.2 Rev. 2.0	NO2NO3-N	104		106	106				0.473
EPA 365.1 Rev. 2.0	Total-P	107		107	110				2.35
EPA 365.1 Rev. 2.0 dissolved	O-Phosphate-P	98.8		96.9	95.3				1.48
EPA 8270E	Acetochlor	108	121	108	117	10.6			7.56
	Alachlor	112	98.0	103	102	13.0			1.16
	Aldrin	33.8	26.5	24.2	35.2	24.3			37.0
	Alpha-BHC	93.3	87.8	87.1	85.7	6.10			1.60
	Alpha-Chlordane	64.5	61.9	61.4	64.6	4.15			5.05
	Ametryn	109	110	118	110	1.63			7.29
	Atrazine	111	105	121	131	5.71			7.19
	Atrazine Desethyl	106	103	96.1	99.2	2.93			3.22
	Azinphos Methyl	139	131	119	127	5.96			6.18
	Azoxystrobin	109	99.2	122	122	9.08			0.0597
	Beta-BHC	103	100	105	104	3.04			1.33
	Beta-Cyfluthrin	34.4	39.9	53.4	51.3	14.8			3.98
	Bifenthrin	20.7	26.5	32.5	46.0	24.8			34.3
	Bromacil	95.8	102	82.1	99.3	6.53			15.5
	Butylate	53.5	53.3	50.3	57.7	0.407			13.7
	Caffeine	72.1	76.0	89.9	101	5.31			11.4
	Carbophenothion	98.9	92.5	95.8	98.9	6.68			3.13
	Carfentrazone Ethyl	127	115	111	121	10.1			9.19
	Chlorfenapyr	98.7	83.8	90.7	103	16.4			12.9

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery		MS % Recovery		Precision	
						LCS	MS
						SMP	
EPA 8270E	Chlorothalonil	102	95.2	108	106	6.41	2.36
	Chlorpyrifos Ethyl	87.1	78.3	79.2	103	10.6	26.2
	Chlorpyrifos Methyl	99.7	93.0	95.2	99.4	6.94	4.22
	Cis-Nonachlor	58.4	55.3	54.7	60.7	5.41	10.4
	Coumaphos	105	96.8	90.2	94.3	7.81	4.46
	Cyanazine	120	110	122	102	9.37	18.1
	Cypermethrin	37.8	44.1	49.1	55.1	15.4	11.3
	Cyprodinil	124	107	118	135	14.8	13.7
	Dacthal	91.6	85.3	87.1	88.1	7.11	1.14
	DDD-p,p'	67.6	63.2	61.7	68.0	6.80	9.76
	DDE-p,p'	68.8	68.3	64.4	63.1	0.645	2.09
	DDT-p,p'	64.6	63.8	59.8	62.9	1.22	5.03
	Delta-BHC	105	98.9	105	100	6.14	4.33
	Deltamethrin	40.4	45.0	58.0	61.0	10.8	4.97
	Demeton	106	91.7	111	116	14.9	4.89
	Diazinon	121	109	126	126	10.7	0.460
	Dichlobenil	83.8	79.9	78.5	77.9	4.74	0.730
	Dicofol	68.6	64.3	63.1	66.1	6.44	4.70
	Dieldrin	71.4	67.0	66.7	70.8	6.37	5.99
	Difenoconazole	146	141	132	158	3.07	18.0
	Dimethenamid	98.8	88.9	86.9	94.8	10.6	8.69
	Dimethomorph	118	104	172	137	12.6	22.5
	Disulfoton	108	105	100	111	3.20	10.3
	Dithiopyr	110	99.4	96.3	108	9.69	11.1
	Endosulfan I	74.8	67.9	66.0	72.3	9.60	9.13
	Endosulfan II	81.6	73.3	72.7	74.0	10.8	1.67
	Endosulfan Sulfate	96.4	87.6	91.4	88.6	9.52	3.20
	Endrin	73.9	68.2	69.5	73.3	8.10	5.29
	Endrin Aldehyde	70.6	67.6	76.1	74.1	4.36	2.66
	Endrin Ketone	101	84.9	89.0	95.8	17.0	7.38
	EPTC	57.7	55.8	58.2	62.4	3.42	6.88
	Esfenvalerate	29.9	35.4	44.1	49.1	16.9	10.6
	Ethalfuralin	61.4	59.5	60.2	60.5	3.17	0.510
	Ethion	93.2	85.0	68.1	86.0	9.17	23.3
	Ethoprop	97.5	92.3	110	103	5.44	6.60
	Etridiazole	67.5	62.2	70.8	78.9	8.19	10.8
	Fenamiphos	92.3	78.3	87.6	89.5	16.4	2.12
	Fenbuconazole	116	106	101	112	8.87	10.6
	Fenpropathrin	45.1	45.6	56.6	53.3	1.23	5.97
	Fipronil	123	114	108	126	7.47	14.8
	Fipronil Desulfinyl	126	119	104	116	5.71	10.2
	Fipronil Sulfide	96.5	90.6	90.6	95.7	6.31	5.42
	Fipronil Sulfone	91.5	80.8	79.0	84.5	12.4	6.75
	Fluazifop-P-butyl	118	108	106	112	8.13	5.54
	Fludioxonil	115	107	104	115	7.30	9.88
	Flumioxazin	153	173	153	182	12.7	17.3
	Flutolanil	105	99.9	95.8	113	5.16	16.4
	Fluxapyroxad	106	93.9	85.0	100	12.6	16.2
	Fonofos	96.5	85.3	96.7	97.4	12.3	0.696
	Gamma-BHC	94.7	88.1	90.2	89.3	7.30	0.992
	Gamma-Chlordane	58.1	57.1	55.7	56.1	1.76	0.685
	Heptachlor	56.7	58.5	52.2	56.2	3.15	7.38
	Heptachlor Epoxide	73.8	64.6	72.2	70.2	13.3	2.79
	Hexachlorobenzene	63.9	62.7	51.3	58.9	1.89	13.6

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery		MS % Recovery		LCS	Precision SMP	MS
EPA 8270E	Hexazinone	111	96.7	106	115	14.0		5.54
	Imazalil	109	88.3	106	105	21.0		0.891
	Iprodione	103	102	94.7	112	1.37		16.5
	Kepone	110	123	119	144	11.2		18.9
	Lambda-Cyhalothrin	29.4	32.2	42.3	49.9	9.26		16.5
	Loratadine	110	92.3	150	120	17.8		22.4
	Malathion	85.4	74.8	80.1	89.6	13.2		11.2
	Metalaxyl	102	99.6	94.8	105	2.87		10.4
	Methoprene	24.2	26.2	38.7	37.2	8.12		3.99
	Methoxychlor	80.4	76.4	74.3	81.3	5.18		8.94
	Metolachlor	104	91.7	84.6	107	12.5		23.6
	Metribuzin	107	97.5	110	113	9.38		2.59
	Mevinphos	83.2	84.1	87.4	96.9	1.14		10.3
	MGK-264	52.4	43.7	61.5	55.6	18.1		10.1
	Mirex	42.0	47.4	43.9	47.0	12.2		6.85
	Molinate	72.5	68.0	79.2	80.0	6.43		1.02
	Myclobutanil	107	99.5	99.8	109	7.03		8.91
	Naled	99.5	91.0	87.4	108	8.96		21.3
	Napropamide	111	95.6	97.5	113	15.0		14.7
	Norflurazon	118	109	89.3	107	8.05		18.2
	Oxadiazon	93.7	85.0	90.2	92.3	9.73		2.34
	Oxychlordane	61.7	60.1	62.0	60.8	2.69		2.03
	Oxyfluorfen	134	120	124	138	11.3		11.0
	Parathion Ethyl	108	93.4	105	109	14.4		3.06
	Parathion Methyl	124	129	124	130	4.38		4.61
	Pendimethalin	126	105	125	124	18.2		0.456
	Permethrin	36.4	43.6	55.4	52.8	18.0		4.64
	Phenothrin	17.3	17.0	21.2	33.4	1.64		44.6
	Phenytol	61.4	53.3	45.0	59.7	14.1		28.0
	Phorate	85.1	74.2	89.5	96.0	13.7		7.03
	Piperonyl Butoxide	75.2	79.7	87.0	79.9	5.88		8.62
	Prallethrin	31.1	27.5	41.0	31.0	12.4		27.7
	Prodiamine	44.8	38.1	46.8	59.6	16.0		24.1
	Prometon	103	97.6	90.8	106	5.22		15.2
	Prometryn	111	97.7	98.7	111	12.6		11.8
	Pronamide	114	105	101	113	7.94		11.1
	Propanil	138	150	105	115	8.09		8.98
	Propargite	102	93.2	81.5	106	8.70		26.0
	Propiconazole	109	101	89.1	111	7.93		22.0
	Pyraflufen Ethyl	114	102	99.8	109	10.8		8.90
	Pyridaben	109	95.2	97.7	100	13.4		2.22
	Pyriproxyfen	122	111	114	114	9.32		0.0630
	Simazine	106	96.1	110	117	9.35		6.30
	Stirophos	64.7	54.8	70.1	80.2	16.6		13.5
	Sulfentrazone	113	106	97.5	109	6.36		11.0
	Tau-Fluvalinate	22.0	28.5	31.7	46.4	25.7		37.5
	Tebuconazole	82.5	76.8	58.9	82.2	7.13		33.1
	Terbufos	110	95.4	116	125	13.8		7.40
	Terbutylazine	102	93.2	95.5	104	9.07		8.31
	Tetramethrin	35.8	28.7	46.2	45.0	22.0		2.59
	Thiobencarb	107	93.5	84.3	106	13.6		23.0
	Trans-Nonachlor	59.7	59.0	57.7	57.0	1.21		1.16
	Triadimefon	109	96.5	103	107	12.0		3.90
	Triclosan Methyl	77.6	73.3	68.9	74.4	5.65		7.73

Quality Assurance Report Summary

Ref. Method	Analyte	LCS % Recovery		MS % Recovery		Precision	
						LCS	MS
						SMP	
EPA 8270E	Trifluralin	61.3	59.8	59.3	60.3	2.54	1.60
EPA 8276	Chlordane	60.3	73.4	74.2	68.6	19.5	7.94
	Toxaphene	59.6	66.2	69.0	68.5	10.5	0.664
EPA 8321B	2,4-D	105		95.6	82.5		14.7
	2,4,5-T	123		99.6	102		2.51
	3-Hydroxycarbofuran	74.8		69.4	67.0		3.47
	Acesulfame K	61.8		106	104		1.49
	Acetaminophen	87.7		87.2	92.9		6.38
	Acetamiprid	88.4		84.3	90.8		7.42
	Afidopyropen	77.0		85.9	68.7		22.3
	Aldicarb	75.9		82.1	66.6		20.9
	Aldicarb Sulfone	66.6		74.9	70.4		6.17
	Aldicarb Sulfoxide	100		42.3	37.5		12.1
	AMPA	127		131	135		2.83
	Bentazon	124		94.3	94.0		0.320
	Benzovindiflupyr	83.0		83.1	77.8		6.69
	Carbamazepine	97.5		89.3	86.6		3.07
	Carbaryl	70.0		77.7	64.7		18.4
	Carbofuran	86.1		85.6	74.3		14.1
	Clothianidin	110		93.2	112		18.0
	Dinotefuran	83.4		86.7	89.1		2.68
	Diuron	79.9		86.6	76.1		13.0
	Endothall	77.6		97.3	103		6.00
	Fenuron	93.9		82.4	78.2		5.21
	Fluridone	91.9		87.4	87.9		0.622
	Glufosinate	119		128	126		1.72
	Glyphosate	116		126	127		0.769
	Hydrocodone	104		101	94.2		7.01
	Ibuprofen	110		84.0	68.7		20.0
	Imazapyr	103		108	106		2.16
	Imidacloprid	100		112	111		0.881
	Linuron	77.5		79.1	65.9		18.2
	Mandestrobin	89.4		86.6	85.2		1.61
	MCPP	101		101	94.8		6.48
	Methiocarb	88.2		94.8	74.9		23.5
	Methomyl	80.5		72.6	64.3		12.1
	Naproxen	56.8		71.3	83.4		15.6
	Oxamyl	77.8		69.5	62.5		10.6
	Primidone	141		163	135		18.7
	Propoxur	86.0		74.6	68.7		8.17
	Pyraclostrobin	70.5		80.6	81.7		1.40
	Silvex	90.5		83.2	82.5		0.802
	Sucralose	104		105	102		3.20
	Thiamethoxam	96.5		105	95.2		9.84
	Tolfenpyrad	33.0		57.9	48.3		18.1
	Triclopyr	106		99.7	99.2		0.503
SM 2120 B-2011	Color (true)	98.4				1.16	
SM 2320 B-2011	Total Alkalinity	97.6				1.53	
SM 2540 C-2011	TDS					0.342	
SM 4500 F-C-2011	Fluoride	101		100	101		0.530
SM 5310 B-2011	Organic Carbon	96.5		95.2	96.6		1.14

Reference Method Descriptions

Method	Description	Associated Samples
EPA 180.1 Rev. 2.0	Turbidity in aqueous matrices	2295723
EPA 200.7 Rev. 4.4	Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects	2295732
EPA 200.8 Rev. 5.4	Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects	2295732
EPA 300.0 Rev. 2.1	Chloride in aqueous matrices	2295723
EPA 300.0 Rev. 2.1	Sulfate in aqueous matrices	2295723
EPA 350.1 Rev. 2.0	Ammonia in aqueous matrices as mg N/L	2295724
EPA 351.2 Rev. 2.0	Total Kjeldahl Nitrogen in aqueous matrices	2295724
EPA 353.2 Rev. 2.0	Nitrite/Nitrate in aqueous matrices as mg N/L	2295724
EPA 365.1 Rev. 2.0	Total Phosphorus in aqueous matrices as mg P/L	2295724
EPA 365.1 Rev. 2.0 dissolved	Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L	2295725
EPA 8270E	Organochlorine pesticides, pyrethroids and tracers in water matrices by GC/MS/MS	2295730
EPA 8270E	Organonitrogen and phosphorus pesticides in water matrices by GC/MS/MS	2295731
EPA 8276	Organochlorine pesticides in water matrices by GC/MS with Negative Chemical Ionization	2295730
EPA 8321B	Carbamates in water matrices by HPLC/MS/MS	2295728
EPA 8321B	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS	2295729
SM 2120 B-2011	True Color measured at 450 nm (not valid for NPDES monitoring)	2295723
SM 2320 B-2011	Alkalinity in aqueous matrices as mg CaCO ₃ /L	2295723
SM 2340B	Hardness by calculation, in aqueous matrices, reported as mg/L CaCO ₃	2295732
SM 2540 C-2011	Total Dissolved Solids in aqueous matrices	2295723
SM 2540 D-2011	Total Suspended Solids in aqueous matrices using a maximum of 250 mL of sample	2295723
SM 4500 F-C-2011	Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)	2295723
SM 5310 B-2011	Nonpurgeable Organic Carbon in aqueous matrices	2295724

Preparation and Analysis Log

Ref. Method	Received Date	Prep Date/Time	Prepared By	Analysis Date/Time	Analyzed By	Associated Samples
EPA 180.1 Rev. 2.0	12/16/2021			12/16/2021 15:31	Khloe J Berg	2295723
EPA 200.7 Rev. 4.4	12/16/2021	12/20/2021 11:25	Vijayalakshmi Reddy	12/27/2021 18:45	Josef B Mick	2295732
EPA 200.8 Rev. 5.4	12/16/2021	12/20/2021 11:25	Vijayalakshmi Reddy	12/28/2021 18:59	Alexander Thompson	2295732
	12/16/2021	12/20/2021 11:25	Vijayalakshmi Reddy	12/29/2021 11:31	Alexander Thompson	2295732
EPA 300.0 Rev. 2.1	12/16/2021			12/17/2021 16:28	Roberta Tatti	2295723
EPA 350.1 Rev. 2.0	12/16/2021			01/03/2022 13:41	Roberta Tatti	2295724
EPA 351.2 Rev. 2.0	12/16/2021	01/04/2022 09:10	Samantha L Bates	01/04/2022 17:42	Virginia P. Brown	2295724
EPA 353.2 Rev. 2.0	12/16/2021			12/21/2021 10:35	Beverly Y. Sanders	2295724
EPA 365.1 Rev. 2.0	12/16/2021	12/27/2021 15:00	Simonne.V. Calhoun	12/28/2021 12:53	Shengyu Ding	2295724
EPA 365.1 Rev. 2.0 dissolved	12/16/2021			12/16/2021 14:40	James L Waggeberby	2295725
EPA 8270E	12/16/2021	12/17/2021 08:00	Julie Wi	12/21/2021 23:46	Vandana T. Nagar	2295730
	12/16/2021	12/20/2021 08:30	Rasheda Ghaffari	12/24/2021 03:06	Michael Poppell	2295731
	12/16/2021	12/20/2021 08:30	Rasheda Ghaffari	12/27/2021 22:31	Michael Poppell	2295731
EPA 8276	12/16/2021	12/17/2021 08:00	Julie Wi	12/22/2021 17:17	Arthur Maknenko	2295730
EPA 8321B	12/16/2021	12/21/2021 09:00	Hoor Shaik	12/23/2021 23:36	Juyoung Kim	2295729
	12/16/2021	12/21/2021 11:00	Juyoung Kim	12/21/2021 12:59	Juyoung Kim	2295729
	12/16/2021	12/21/2021 11:00	Juyoung Kim	12/21/2021 15:25	Manjita Shrestha	2295729
	12/16/2021	12/22/2021 09:00	Hoor Shaik	12/28/2021 14:59	Juyoung Kim	2295728
SM 2120 B-2011	12/16/2021			12/16/2021 15:51	Sarah A Nixon	2295723
SM 2320 B-2011	12/16/2021			12/17/2021 20:49	Dale L. Simmons	2295723
SM 2340B	12/16/2021			12/27/2021 18:45	Josef B Mick	2295732
SM 2540 C-2011	12/16/2021			12/17/2021 14:20	Simonne.V. Calhoun	2295723
SM 2540 D-2011	12/16/2021			12/17/2021 14:20	Simonne.V. Calhoun	2295723
SM 4500 F-C-2011	12/16/2021			12/17/2021 20:49	Dale L. Simmons	2295723
SM 5310 B-2011	12/16/2021			12/29/2021 21:30	Khloe J Berg	2295724