

Login Checklist

RQ-2022-05-09-55

Login Station ID: #4

Shipping Method: FedEx | UPS | HD | Greyhound

Date/Time of Receipt: 05/11/22 @ 9:40

*Cooler Temperature	Samples Frozen?	* All Samples in Cooler Preserved with		Number of Sample Containers in Cooler	Evidence Tape				Waybill Tracking #
					Present?		*Intact?		
	YES	HNO ₃	Formalin		Yes	No	Yes	No	
1.2 2.8				33 9		X			5225 5544 8195 5225 5544 9879

COOLER CHECK

*All samples received on ice unless otherwise noted. HNO₃ and Formalin preserved samples do NOT have a temperature requirement.

- If the temperature of a cooler exceeds 6.0 oC (above 10.0 oC for W-1-4-DIOX and microbiology) or received without ice, identify affected samples in an NCR. NCR# _____
- DOH coolers can exceed 2.0 °C above the standard temperature (6.0 or 10.0 °C for W-1-4-DIOX) without login confirmation from customer for samples requiring ice preservation; identify affected samples in an NCR. NCR# _____
- If cooler or samples are received with a damaged Evidence Seal; identify the affected samples in an NCR. NCR# _____
- If coolers or samples are received late; identify the affected samples in an NCR. NCR# _____

Chain of Custody/ Field Sheet(s) Included?

Yes ☒ No ☐

Micro-Biology Overflow Chain of Custody/ Field Sheet(s) Included?

Yes ☐ No ☐

CONTAINER CHECK

Evidence Tape on Bottles?

Yes ☐ No ☐ NA ☒

Evidence Tape intact? Yes ☐ No ☐

If Criminal, photographs taken?

Yes ☐ No ☐

Containers intact? Yes ☒ No ☐

Caps on tight?

Yes ☒ No ☐

Sufficient Sample Volume:

Yes ☒ No ☐

If **NO** is checked above, generate an NCR listing affected sample IDs in its appropriate category. NCR# _____

CHLORINE CHECK REQUIRED? (Blue dot on container)

Yes ☒ No ☐ Init: ☒

Chlorine detected? (One container checked per Field ID)

Yes ☐ No ☒ Init: ☒

If chlorine is detected, generate an NCR listing affected sample IDs . NCR# _____

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH < 2.0?

Yes ☒ No ☐ NA ☐ Init: ☒

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0?

Yes ☐ No ☐ NA ☒ Init: ☒

If samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____

Coolers Unpacked/Checked by: ☒

Date: 05/11/22

Event contains NCRs (Y/N)? ☒

Seminole Co Sampling - Lake Hnn

Event ID: CEN-DIST-2022-05-11-03 (SMP)

Date Received: 11-MAY-2022 09:40

Login Checklist

Login Preservation Equipment

Lot # & Exp: Date

Additional Comments:

Infrared Thermometer ID:	#4 Temp Gun EXP:10/19/2022
pH Test Strips 0 – 6	223819AV EXP:08/30/2023
pH Paper 0 – 3	N/A
pH Paper 0 – 13	207621 EXP:03/15/2024
Chlorine Test Strips	0070 EXP:02/2023

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes _____ Init: _____

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes _____ No _____

If no, were samples shipped on dry ice? Yes _____ No _____

If S-VOC-MS samples were not preserved correctly, generate an NCR listing affected sample IDs . NCR# _____

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check(W-HG-AF;W-HG-AF-F):

Samples preserved within 48 hours? Yes _____ No _____

Date and time samples preserved: _____




RQ-2022- 05-09-55
Customer: CEN-DIST
Project ID: SMP

Collected By: C. Hammell & H. Hazehwood
Field Report Prepared By: C. Hammell
Sampling Agency: Seminole County

WIN ID / Field ID →

Lake Ann at center

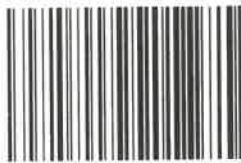

G2CE0097

Comments: LAB: please login PKD-QN-BV
 & DTY-QN-C under a separate event with priority 12

MCAA Buffer Ser# = 128343 EXP: 2/4/23

Matrix: Fresh ☒ Marine

(Check one)

☒ GRAB☐ COMPOSITE

Date	Time	DO (mg/L)	DO (%SAT)	Temp. (C°)	pH	Sample Depth (m)	Secchi Disk (m)	Total Depth (m)	Sp COND (µmhos/cm)	Salinity (PPTH)
5/10/2022	1220	8.58	108.7	27.39	7.02	0.3	1.4	3.7	145	N/A
EST / CST										
☒										
☒										

Central Lab please use top row for login purposes

EST / CST										

Parameter Suite	Parameter Methods	Preservation	pH Check	# Bottles sent to Lab	Bottle Group
Preserved Nutrients (P-500ML)	☒ W-NH3 / W-NO2NO3 / W-TKN / W-TOC / W-S-A-TP Lot # H2504 LOT# SA1308030 EXP: 12/01/2022 Exp:	☒ Ice ☒ H2SO4* ☐ <2	☐ <2	1	A
Metals (P-500ML)	☐ W-ICPMS Lot # Exp:	☐ Ice ☐ HNO3* ☐ <2			
Filtered Nutrients (P125ML)	☐ W-PO4-F ☐ Field Filtered 0.45 µm Filter Filter Lot # Syringe Lot #	☐ Ice			
Chlorophyll	☒ CHLSUITE-W	☐ Ice		1	A
Physical/Aggregate (Fresh) (P-1L)	☐ Alkalinity / W-F / W-TSS / TURBIDITY / W-CHC / W-COLOR / W-S04-IC / W-TDS	☐ Ice			
Physical/Aggregate (Marine) (P-1L)	☐ Alkalinity / W-BR-IC / W-F / W-TSS / TURBIDITY	☐ Ice			
Macroinvertebrates (PJ-2L)	☐ MI-FW-QLDC	☐ Formalin			
Periphyton (PT-50ML)	☐ ALGAE-ID	☐ Ice			
Microbiology (Contract Lab Bottle)	☐ E Coli ☐ F Coli ☐ Enterococci ☐ Contract Lab	☐ Ice			
Molecular (QPCR-P-500ML)	☐ PCR-HF183 ☐ PCR-BacR ☐ PCR-DG3 ☐ PCR-GULL2 ☐ PCR-GFD ☐ See Notes	☐ Ice			
Tracers (BG-500ML)	☐ W-E8321-DI ☐ W-E8321-MS	☐ Ice			
Pesticides (BG-500ML) (BG-1L)	☒ W-E8321-DI ☒ W-E8321-MS ☒ W-PSNP-TQ ☒ W-CT-Q-R ☒ W-PCB-TQ-R ☒ W-CARB-AA (5 ml of MCAA** Buffer Solution)	☒ Ice		10	A
Phytoplankton (BP-1L)	☒ DTY-QN-C ☒ PKD-QN-BV Lugols not added	☒ Ice		1	XB

Name: Chyenne Hammell

Signature: Chyenne Hammell

Date: 5/10/2022

*2.0 ml of Preservative used unless noted otherwise.

**MCAA: Monochloroacetic acid buffer solution

add W-PCB-TQ-R
 W-TR50-R



FLORIDA DEPARTMENT OF ENVIRONMENTAL PROTECTION STRATEGIC MONITORING PROGRAM FIELD SHEET

January 2020

Meter Passed End
of Day CCV
Yes / No

WIN Station Name: Lake Ann at center

Date: 5/10/2022
(m/dd/yyyy)

WIN/ Field ID: G2CE0097

WBID: 2997B1

Latitude: 28.62719

(Decimal Degrees)

County: Seminole

ORG ID: 21FLCEN

Longitude: -81.30894

(Decimal Degrees)

Receiving Body of Water: Middle St. Johns

RQ-2022-05-09-55

Sampling Team Members	WQ Measurements	Sample Collection	Documentation	Preservation	Preservation Check
Cheyenne Hammell	X	X	X	X	X
Mailey Hazelwood		X	X		X

Sampling Equipment	
☒ Sample Container	☐ Van Dorn
☐ Syringe	☐ Pole
☐ Dipper	☐ Other
Depth Measured with	
Equipment ID	
Collection Method	
☐ Wading	☒ Canoe/Kayak
☐ From Shore	☐ Electric Motor
☐ Other	☐ Gasoline Motor

Water Level: Dry/ Pooled/ Low / <u>Normal</u> / High / Flooded		Meter ID# "maggie"	
Photos: Yes / No	Flow: No Flow / Flowing / <u>NA</u>	Tide: Rising/ Falling/ Slack/ NA	Tide Times: High Low
Biological Samples Collected: None HA SCI RPS Algae ID LVS LVI Other: Phytoplankton			
SBIO ID Numbers:	SBIO-ID:	HA-ID:	RPS-ID:
Macrophyte-ID:		LIMS#:	
Notes:			

Duplicate Sample

Time Zone: EST CEN	Time:	Field ID:	(WIN ID_DUP)
WIN DMT Activity ID:			

Blank

Time Zone: EST CEN	Time:	Field ID:	(Blank Type_DDDMMYYY)
DI Source:		Location:	
☐ Field Blank	☐ Equipment Blank	☐ Field Cleaned Equipment Blank	
Equipment ID:			

CEROC -DO NOT ENTER FIELD DATA INTO LIMS

LIMS EVENT ID: WIN Import ID:

Enter Field Parameters, Verify Station ID In LIMS DMT: QC Station ID, Field Parameters In LIMS DMT:

(Initials/Date)

(Initials/Date)

Scan/Save Field Sheets Migrate Data to WIN: Verify Data In WIN:

(Initials/Date)

(Initials/Date)

(Initials/Date)

Date of Request: 03-MAY-2022
 Created By: BEARDEN_M On: 03-MAY-2022
 Modified By: BEARDEN_M On: 03-MAY-2022
 Customer: CEN-DIST
 Project: SMP
 Division: Division of Environmental Assessment and Restoration
 District: Central District
 Event Description: Seminole Co Sampling - Lake Ann

Send Coolers To:

Phone: 407-897-4123
 FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Matthew Bearden
 Cooler Ship EMail: matthew.bearden@floridadep.gov

Priority: 3
 Event Status: P
 Criminal Investigation: NO
 Chemistry Request Reviewed By:
 Biology Request Reviewed By:
 Sampling Kit Required: YES Ship on: 03-MAY-2022
 Sampling Kit Shipped:
 Sampling Kit Packed By:
 Preservatives Needed: NO
 Date to Receive Samples: 12-MAY-2022
 Logged In By:

Send Final Report To:

FL Dept. of Environmental Protection
 3319 Maguire Blvd., Suite 232
 Orlando, FL 32803-3767
 Attn: Matthew Bearden
 Report Notification EMail:
 matthew.bearden@floridadep.gov; victoria.schwartz@floridadep.gov

Comments: Please log in PKD-QN-BV & DTY-QN-C under a separate event with priority 12, Bottle Group - B

Bottle Group A (Water) With 1 Samples:

Bottle Type:	Number of Bottles:	Preserved With:
CHLSUITE-W Template: DEFAULT	(SM 10200 H (mod.))	Phytoplankton chlorophyll-a corrected, uncorrected, and phaeophytin by spectrophotometry
Chlorophyll-a, Corrected		
Chlorophyll-a, Uncorrected		
Phaeophytin-a		
W-CARB-AA Template: DEFAULT	(EPA 8321B)	Carbamates in water matrices by HPLC/MS/MS
3-Hydroxycarbofuran		
Aldicarb		
Aldicarb Sulfone		
Aldicarb Sulfoxide		
Carbaryl		
Carbofuran		
Methiocarb		
Methomyl		
Oxamyl		
Propoxur		
W-CT-CI-R Template: DEFAULT	(EPA 8276)	Organochlorine pesticides in water matrices by GC/MS with Negative Chemical Ionization
Chlordane		
Toxaphene		
W-E8321-DI Template: DEFAULT	(EPA 8321B)	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
Acesulfame K		
AMPA		
Endothall		
Glufosinate		
Glyphosate		
Sucralose		
W-E8321-MS Template: SMP	(EPA 8321B)	Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
2,4-D		

Bottle Group A (Water) With 1 Samples:

Bottle Type:	Number of Bottles:	Preserved With:
W-E8321-MS	Template: SMP	(EPA 8321B) Pesticides, herbicides, and other chemicals in water matrices by HPLC/MS/MS
2,4,5-T		
Acetaminophen		
Acetamiprid		
Afidopyropen		
Bentazon		
Benzovindiflupyr		
Carbamazepine		
Clothianidin		
Dinotefuran		
Diuron		
Fenuron		
Fluridone		
Hydrocodone		
Ibuprofen		
Imazapyr		
Imidacloprid		
Linuron		
Mandestrobin		
MCPP		
Naproxen		
Primidone		
Pyraclostrobin		
Silvex		
Thiamethoxam		
Tolfenpyrad		
Triclopyr		
W-PCB-TQ-R	Template: DEFAULT	(EPA 8270E) PCBs in water matrices by GC/MS/MS
PCB-1016		
PCB-1221		
PCB-1232		
PCB-1242		
PCB-1248		
PCB-1254		
PCB-1260		
W-PCL-TQ-R	Template: DEFAULT	(EPA 8270E) Organochlorine pesticides, pyrethroids and tracers in water matrices by GC/MS/MS
*Beta-Cyfluthrin		
*Bifenthrin		
*Cis-Nonachlor		
*Dacthal		
*Deltamethrin		
*Dichlobenil		
*Esfenvalerate		
*Ethalfuralin		
*Fenpropathrin		
*Hexachlorobenzene		
*Kepone		
*Lambda-Cyhalothrin		
*Methoprene		
*MGK-264		
*Oxychlordane		
*Phenothrin		
*Piperonyl Butoxide		
*Prallethrin		
*Tau-Fluvalinate		
*Tetramethrin		
*Trans-Nonachlor		
*Triclosan Methyl		
Aldrin		
Alpha-BHC		

Bottle Group A (Water) With 1 Samples:

Bottle Type: W-PCL-TQ-R Number of Bottles: Preserved With: (EPA 8270E) Organochlorine pesticides, pyrethroids and tracers in water matrices by GC/MS/MS
 Template: DEFAULT

Alpha-Chlordane
 Beta-BHC
 Chlorothalonil
 Cypermethrin
 DDD-p,p'
 DDE-p,p'
 DDT-p,p'
 Delta-BHC
 Dicofof
 Dieldrin
 Endosulfan I
 Endosulfan II
 Endosulfan Sulfate
 Endrin
 Endrin Aldehyde
 Endrin Ketone
 Gamma-BHC
 Gamma-Chlordane
 Heptachlor
 Heptachlor Epoxide
 Methoxychlor
 Mirex
 Permethrin
 Trifluralin

W-PSNP-TQ Template: DEFAULT (EPA 8270E) Organonitrogen and phosphorus pesticides in water matrices by GC/MS/MS

*Azoxystrobin
 *Caffeine
 *Carfentrazone Ethyl
 *Chlorfenapyr
 *Coumaphos
 *Cyprodinil
 *Difenoconazole
 *Dimethenamid
 *Dimethomorph
 *Dithiopyr
 *Etridiazole
 *Fenbuconazole
 *Fipronil Desulfinyl
 *Fluazifop-P-butyl
 *Fludioxonil
 *Flumioxazin
 *Flutolanil
 *Fluxapyroxad
 *Imazalil
 *Iprodione
 *Loratadine
 *Myclobutanil
 *Naled
 *Napropamide
 *Oxyfluorfen
 *Phenytoin
 *Prodiamine
 *Pronamide
 *Propanil
 *Propargite
 *Propiconazole
 *Pyraflufen Ethyl
 *Pyridaben
 *Pyriproxyfen

Bottle Group A (Water) With 1 Samples:

Bottle Type: W-PSNP-TQ Number of Bottles: Preserved With:
 Template: DEFAULT (EPA 8270E) Organonitrogen and phosphorus pesticides in water matrices by GC/MS/MS

*Stirophos
 *Sulfentrazone
 *Tebuconazole
 *Thiobencarb
 *Triadimefon
 Acetochlor
 Alachlor
 Ametryn
 Atrazine
 Atrazine Desethyl
 Azinphos Methyl
 Bromacil
 Butylate
 Carbophenothion
 Chlorpyrifos Ethyl
 Chlorpyrifos Methyl
 Cyanazine
 Demeton
 Diazinon
 Disulfoton
 EPTC
 Ethion
 Ethoprop
 Fenamiphos
 Fipronil
 Fipronil Sulfide
 Fipronil Sulfone
 Fonofos
 Hexazinone
 Malathion
 Metalaxyl
 Metolachlor
 Metribuzin
 Mevinphos
 Molinate
 Norflurazon
 Oxadiazon
 Parathion Ethyl
 Parathion Methyl
 Pendimethalin
 Phorate
 Prometon
 Prometryn
 Simazine
 Terbufos
 Terbutylazine

W-TR-SQ-R Template: DEFAULT (EPA 8270E) Analysis of Sunscreen Compounds in Water by GC/MS-SIM

*Avobenzene
 *Octinoxate
 *Oxybenzone

Bottle Group B (Water) With 1 Samples:

Bottle Type: DTY-QN-C Number of Bottles: Preserved With:
 Template: DEFAULT (SOP-AB05_1) No. of diatom taxa of quantitative phytoplankton sample.
 *Phytoplankton-Quantitative-#Diatom Taxa
 PKD-QN-BV Template: DEFAULT (SOP-AB05) No. of wet taxa of quantitative phytoplankton sample w/speciation and cell counts.
 *Phytoplankton-Quant Biovolume-#Wet Taxa