

LSJR Coast

Central Laboratory Submittal Form

last revised Apr 7, 2016

Customer: NE-DIST

Requester: Jeremy M. Parrish

Field Report Prepared By:

A. Kalmbacher

Project ID: SMP

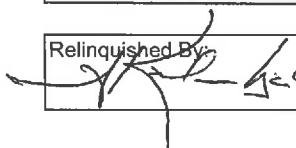

Collected By:

J. Parrish

Sampling Agency:

FDEP / NE ROC

Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 1115	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s) (See pg 2)
Field ID	G2NE0766 02202017	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 4.88 mg/L 99.6 % sat	Total Res. Chlorine (mg/L)	B
STORET #	Hopkins Creek @ Kings Rd STORET: 20030758	Temp (C) 19.0	pH 7.18	Sample Depth 0.3	Sp. Conductance (umho/cm) 31,957	
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) 19.9	Comments			
Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 11:50	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID	G2NE1136 02202017	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 7.65 mg/L 96.2 % sat	Total Res. Chlorine (mg/L)	A
STORET	ICW @ Isle of Palms Boat Ramp STORET: G2NE1136	Temp (C) 19.3	pH 7.62	Sample Depth 0.3	Sp. Conductance (umho/cm) 39,172	
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) 25.0	Comments			
Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 1210	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID	G2NE0703 02202017	Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen 8.87 mg/L 99.6 % sat	Total Res. Chlorine (mg/L)	B
STORET	Open Creek @ San Pablo Rd STORET: 20030695	Temp (C) 20.4	pH 7.30	Sample Depth 0.1	Sp. Conductance (umho/cm) 3266	
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt) 1.75	Comments			
Location		☐ Comp ☐ Grab	Collection (comp begin or grab) Date Time	☐ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID		Matrix (type, e.g., Salt, Fresh, etc)		Diss. Oxygen ☐ mg/L ☐ % sat	Total Res. Chlorine (mg/L)	
STORET #		Temp (C)	pH	Sample Depth ☐ ft ☐ m	Sp. Conductance (umho/cm)	
Latitude ☐ dd ☐ dms	Longitude ☐ dd ☐ dms	Salinity (ppt)	Comments			

Relinquished By: 	Date/Time: 2-20-2017	Shipping Method: FedEx	Number of Coolers Shipped: 2	Received By: 	Date/Time: 02/21/17 09:55a
---	----------------------	------------------------	------------------------------	--	----------------------------

1305

Time indicated on the container. TK
 Emailed to confirm collection time

Group: A	Bottle Type:	P-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-F W-SO4-IC W-TSS					
Group: A	Bottle Type:	BP-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CHLSUITE-W					
Group: A	Bottle Type:	P-120ML-WC-THI	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	NED-COL-EN					
Group: A	Bottle Type:	QPCR-P-250ML	# of Bottles: 2	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	PCR-FILTER					
Group: A	Bottle Type:	P-500ML	# of Bottles: 1	Preservative:	ICE And H2SO4	Enter Number of Bottles Sent to Lab _____
	W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC					
Group: A	Bottle Type:	P-125ML	# of Bottles: 1	Preservative:	ICE-FLTR	Enter Number of Bottles Sent to Lab _____
	W-PO4-F					
Group: A	Bottle Type:	BG-1L	# of Bottles: 1	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	W-SUC-AA-R W-UHERB-AA					
Group: B	Bottle Type:	P-1L	# of Bottles: <i>4</i>	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	ALKALINITY TURBIDITY W-F W-TSS					
Group: B	Bottle Type:	BP-1L	# of Bottles: <i>4</i>	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	CHLSUITE-W					
Group: B	Bottle Type:	P-120ML-WC-THI	# of Bottles: <i>4</i>	Preservative:	ICE	Enter Number of Bottles Sent to Lab _____
	NED-COL-EN					

Changed to 4

Central Laboratory Submittal Form

Customer: NE-DIST

Project ID: SMP

Requester: Jeremy M. Parrish

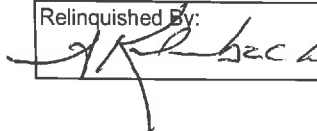

Collected By: J. Parrish

Field Report Prepared By:

Sampling Agency:

A. Kalmbacher
FDEP/NE ROC

Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 0910	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s) (See pg 2)
Field ID	G2NE1128 02202017	Matrix (type, e.g., Salt, Fresh, etc)	Diss. Oxygen 7.7 99	☒ mg/L ☒ % sat	Total Res. Chlorine (mg/L)	C
STORE	St. Johns R @ Scanlon BR Mayport STORET: G2NE1128	Temp (C) 18.8	pH 7.97	Sample Depth 0.3	Sp. Conductance (umho/cm) 48,316	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 31.6	Comments	
Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 0940	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID	G2NE0745 02202017	Matrix (type, e.g., Salt, Fresh, etc)	Diss. Oxygen 7.67 97.8	☐ mg/L ☒ % sat	Total Res. Chlorine (mg/L)	C
STORE	St Johns R @ Little Jetties Pier STORET: 20030737	Temp (C) 18.4	pH 7.97	Sample Depth 0.3	Sp. Conductance (umho/cm) 46,053	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 29.9	Comments	
Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 1010	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID	G2NE0020 02202017	Matrix (type, e.g., Salt, Fresh, etc)	Diss. Oxygen 6.59 83.3	☒ mg/L ☒ % sat	Total Res. Chlorine (mg/L)	B
STORE	Sherman Creek @ A1A bridge STORET: 27010002	Temp (C) 18.7	pH 7.67	Sample Depth 0.3	Sp. Conductance (umho/cm) 42,251	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 27.2	Comments	
Location	Field ID: 	☐ Comp ☒ Grab	Collection (comp begin or grab) Date 2-20-2017 Time 1035	☒ Eastern ☐ Central	Composite end Date Time	Bottle Group(s)
Field ID	G2NE1137 02202017	Matrix (type, e.g., Salt, Fresh, etc)	Diss. Oxygen 6.55 82.4	☒ mg/L ☒ % sat	Total Res. Chlorine (mg/L)	B
STORE	Greenfield Creek @ Wonderwood STORET: G2NE1137	Temp (C) 18.9	pH 7.55	Sample Depth 0.3	Sp. Conductance (umho/cm) 40,181	
Latitude	☐ dd ☐ dms	Longitude	☐ dd ☐ dms	Salinity (ppt) 25.7	Comments	

Relinquished By: 	Date/Time: 2-20-2017	Shipping Method: FedEx	Number of Coolers Shipped: 2	Received By: 	Date/Time: 02/21/17 09:55
---	----------------------	------------------------	------------------------------	--	---------------------------

~~Group A NED-COL-EN p120ml # bottles 1 ALS overbottled~~

Group: A Bottle Type: P-1L # of Bottles: 1 Preservative: ICE Enter Number of Bottles Sent to Lab 1

ALKALINITY
TURBIDITY
W-F
W-SO4-IC
W-TSS

Group: A Bottle Type: BP-1L # of Bottles: 1 Preservative: ICE Enter Number of Bottles Sent to Lab 1

CHLSUITE-W

Group: A Bottle Type: P-120ML-WC-THI # of Bottles: 1 Preservative: ICE Enter Number of Bottles Sent to Lab 1

NED-COL-EN

Group: A Bottle Type: QPCR-P-250ML # of Bottles: 2 Preservative: ICE Enter Number of Bottles Sent to Lab 2

PCR-FILTER

Group: A Bottle Type: P-500ML # of Bottles: 1 Preservative: ICE And H2SO4 Enter Number of Bottles Sent to Lab 1

W-NH3
W-NO2NO3
W-S-A-TP
W-TKN
W-TOC

Group: A Bottle Type: P-125ML # of Bottles: 1 Preservative: ICE-FLTR Enter Number of Bottles Sent to Lab 1

W-PO4-F

Group: A Bottle Type: BG-1L # of Bottles: 1 Preservative: ICE Enter Number of Bottles Sent to Lab 1

W-SUC-AA-R
W-UHERB-AA

Group: B Bottle Type: P-1L # of Bottles: 3 Preservative: ICE Enter Number of Bottles Sent to Lab 4

ALKALINITY
TURBIDITY
W-F
W-TSS

Group: B Bottle Type: BP-1L # of Bottles: 3 Preservative: ICE Enter Number of Bottles Sent to Lab 4

CHLSUITE-W

Group: B Bottle Type: P-120ML-WC-THI # of Bottles: 3 Preservative: ICE Enter Number of Bottles Sent to Lab 4

NED-COL-EN

Changed
to 4
JB

Group: B	Bottle Type: W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC	P-500ML	# of Bottles: 4	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab 4
Group: B	Bottle Type: W-PO4-F	P-125ML	# of Bottles: 4	Preservative: ICE-FLTR	Enter Number of Bottles Sent to Lab 4
Group: C	Bottle Type: ALKALINITY TURBIDITY W-F W-TSS	P-1L	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab 2
Group: C	Bottle Type: CHLSUITE-W	BP-1L	# of Bottles: 2	Preservative: ICE	Enter Number of Bottles Sent to Lab 2
Group: C	Bottle Type: W-ICP W-ICPMS	P-500ML	# of Bottles: 2	Preservative: HNO3	Enter Number of Bottles Sent to Lab 2
Group: C	Bottle Type: W-NH3 W-NO2NO3 W-S-A-TP W-TKN W-TOC	P-500ML	# of Bottles: 2	Preservative: ICE And H2SO4	Enter Number of Bottles Sent to Lab 2
Group: C	Bottle Type: W-PO4-F	P-125ML	# of Bottles: 2	Preservative: ICE-FLTR	Enter Number of Bottles Sent to Lab 2
Group: D	Bottle Type: NED-COL-EN	P-120ML-WC-THI	# of Bottles: 1	Preservative: ICE	Enter Number of Bottles Sent to Lab

Date of Request: 03-JAN-2017
 Created By: PARRISH_J On: 03-JAN-2017
 Modified By: WATTS_J On: 17-FEB-2017
 Customer: NE-DIST
 Project: SMP
 Division:
 District: Northeast District
 Sampling Event: LSJR Coast

Send Coolers To:

Phone: 904-256-1700
 8800 Baymeadows Way West

 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Program Module Number:
 Priority: 3
 Event Status: A
 Criminal Investigation: NO
 Chemistry Request Reviewed By: WATTS_J On: 17-FEB-2017
 Biology Request Reviewed By: WATTS_J On: 17-FEB-2017
 Sampling Kit Required: NO Ship on:
 Sampling Kit Shipped: YES On: 08-FEB-2017
 Sampling Kit Packed By: GREENWOO_J
 Preservatives Needed: NO
 Date to Receive Samples: 13-FEB-2017
 Received By:

Send Final Report To:

8800 Baymeadows Way West

 Jacksonville, FL 32256-7577
 Attn: Jeremy Parrish

Report Type: Final Only
 FTP Data: NO
 QC Report: YES
 Date Log: NO
 Authorization Log: NO

Comments:

Bottle Group A (Water) With 1 Samples:

Bottle Type: P-1L	Number of Bottles: 1	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO ₃ /L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-SO ₄ -IC	Template: DEFAULT	(EPA 300.0 Rev. 2.1) Sulfate in aqueous matrices
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BP-1L	Number of Bottles: 1	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, phaeophytin and ratio by spectrophotometry
Bottle Type:	Number of Bottles: 1	Preserved With: ICE
NED-COL-EN	Template: DEFAULT	(ASTM D6503-99) Enterococci by MPN by ALS Environmental Overflow Laboratory for NED
Bottle Type: QPCR-P-250ML	Number of Bottles: 2	Preserved With: ICE
PCR-FILTER	Template: DEFAULT	(SOP-PCR-4.0) Preparation of Samples by Filtration and held for qPCR Analysis
Bottle Type: P-500ML	Number of Bottles: 1	Preserved With: ICE And H ₂ SO ₄
W-NH ₃	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO ₂ NO ₃	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 1	Preserved With: ICE-FLTR
W-PO ₄ -F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: BG-1L	Number of Bottles: 1	Preserved With: ICE
W-SUC-AA-R	Template: DEFAULT	(EPA 8321B) Analysis of sucralose in water matrices by HPLC/MS/MS
W-UHERB-AA	Template: DEFAULT	(USGS O-2060-01) Urea herbicides and other chemicals in water matrices by HPLC/MS/MS

Bottle Group B (Water) With 4 Samples:

Bottle Type:	Number of Bottles: 4	Preserved With: ICE
NED-COL-EN	Template: DEFAULT	(ASTM D6503-99) Enterococci by MPN by ALS Environmental Overflow Laboratory for NED
Bottle Type: P-500ML	Number of Bottles: 4	Preserved With: ICE And H ₂ SO ₄

Bottle Group B (Water) With 4 Samples:

Bottle Type: P-500ML	Number of Bottles: 4	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 4	Preserved With: ICE-FLTR
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L
Bottle Type: P-1L	Number of Bottles: 4	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BP-1L	Number of Bottles: 4	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, phaeophytin and ratio by spectrophotometry

Bottle Group C (Water) With 2 Samples:

Bottle Type: P-1L	Number of Bottles: 2	Preserved With: ICE
ALKALINITY	Template: DEFAULT	(SM 2320 B-97) Alkalinity in aqueous matrices as mg CaCO3/L
TURBIDITY	Template: DEFAULT	(EPA 180.1 Rev. 2.0) Turbidity in aqueous matrices
W-F	Template: DEFAULT	(SM 4500 F-C-97) Fluoride in aqueous matrices, without distillation (not valid for NPDES monitoring)
W-TSS	Template: DEFAULT	(SM 2540 D-97) Total Suspended Solids in aqueous matrices
Bottle Type: BP-1L	Number of Bottles: 2	Preserved With: ICE
CHLSUITE-W	Template: DEFAULT	(SM 10200 H (mod.)) Phytoplankton chlorophyll-a corrected, uncorrected, phaeophytin and ratio by spectrophotometry
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: HNO3
W-ICP	Template:	(EPA 200.7 Rev. 4.4) Total Recoverable Metals analysis using ICP emission spectroscopy for aqueous samples supporting Clean Water Act Projects
Chromium		
Iron		
Zinc		
W-ICPMS	Template: PRTY	(EPA 200.8 Rev. 5.4) Total Recoverable Metals analysis using ICP-MS for aqueous samples supporting Clean Water Act Projects
Arsenic		
Cadmium		
Copper		
Lead		
Nickel		
Silver		
Bottle Type: P-500ML	Number of Bottles: 2	Preserved With: ICE And H2SO4
W-NH3	Template: DEFAULT	(EPA 350.1 Rev. 2.0) Ammonia in aqueous matrices as mg N/L
W-NO2NO3	Template: DEFAULT	(EPA 353.2 Rev. 2.0) Nitrite/Nitrate in aqueous matrices as mg N/L
W-S-A-TP	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Total Phosphorus in aqueous matrices as mg P/L
W-TKN	Template: DEFAULT	(EPA 351.2 Rev. 2.0) Total Kjeldahl Nitrogen in aqueous matrices
W-TOC	Template: DEFAULT	(SM 5310 B-00) Nonpurgeable Organic Carbon in aqueous matrices
Bottle Type: P-125ML	Number of Bottles: 2	Preserved With: ICE-FLTR
W-PO4-F	Template: DEFAULT	(EPA 365.1 Rev. 2.0) Ortho-phosphate, dissolved, in filtered, aqueous matrices as mg P/L

* - The laboratory is not NELAP certified for this analyte/method, or certification is not applicable.

RQ- 2017-02-13-11

Log-in Checklist

Shipping Method: FedexDate/Time of Receipt: 02/21/17 9:55 am

Cooler ID	Cooler Temperature*	No. Sample Containers in Cooler	Evidence Tape				Tracking # (fill out only if waybill copy is damaged)
			Present?		*Intact?		
			Yes	No	Yes	No	
Red	-0.6	18		✓			811171119267
Red	-1.1	18		✓			811171119256

*If the temperature of a cooler is above 6.0 °C (or above 10.0 °C for W-1-4-DIOX), or if Evidence Seal is damaged, identify the containers in the affected cooler(s) on back of this form.

****Note:** If "No" is checked in any of the fields below, fill out the back of this form with additional details (Field ID, Test IDs, etc.) and generate an NCR.

**Chain of Custody/ Field Sheet(s) Included? Yes ☒ No ☐

CONTAINER CHECK

**Evidence Tape on Bottles? Yes ☐ No ☒ If yes, is it intact? Yes ☐ No ☐

**Caps on tight? Yes ☒ No ☐ **Containers intact? Yes ☒ No ☐

**Sufficient Sample Volume: Yes ☒ No ☐

CHLORINE CHECK (Blue dot on container)

Check the Box marked "Yes" or "No" for the Presence of Chlorine. If Cl detected, an NCR is required.					
Analysis	Yes	No	Analysis	Yes	No
W-1,4 DIOX			W-PC-AA-SF		
W-AHERB-AA (-AHB-AA-R)			W-PCL-SQ (-R)		
W-BNA (-625, -R)			W-PDQUAT		
W-CARB-AA (-CAB-AA-R)			W-PESTNP-R		
W-ENDO-AA			W-PSCL-TQ		
W-GLYPH			W-PSNP-TQ		
W-NP-AA-SF			W-PST-CL-R		
W-PAH (-R)			W-TR-TQ		
W-PCB-R			W-CT-CI-R		

PRESERVATION CHECK (EXCLUDING SAMPLES SENT TO OVERFLOW LABS, "OV-")

**Acid Preserved Samples: pH ≤ 2.0? Yes ☒ No ☐ NA ☐ Init: WK

**W-1-4-DIOX (Green dot on container) preserved to pH < 4.0? Yes ☐ No ☐ NA ☒ Init: WK

Coolers Unpacked/Checked by: WK Date: 02/21/17 NCRs (Y/N)? N

Event ID: NE-DIST-2017-02-21-02 NCR #

Log-in Checklist

Samples with Incorrect pH Preservation or presence of Chlorine

Field ID	Bottle Test ID(s)	pH / Cl	Action Taken

Samples in Coolers with Incorrect Preservation or Damaged Evidence Tape

Cooler ID	Field ID	Bottle Test ID(s)

Bottles Not intact

Field ID	Bottle Test ID(s)	Loose Cap	Damaged Cap		Damaged Container		Evidence Tape Not Intact
			CK	BR	CK	BR	

Samples with Insufficient Volume for Analyses

Field ID	Bottle Test ID(s)	Action Taken

ENCORE SAMPLES

S-VOC-MS samples in Encores must be frozen within 48 hours of collection.

Were Encore samples received? Yes ☐ No ☒

Date and time placed in freezer _____

Were all samples placed in freezer within 48 hours of collection? Yes ☐ No ☐

If no, were samples shipped on dry ice? Yes ☐ No ☐

FOR CLEAN LAB USE ONLY – Total Mercury Preservation Check (W-HG-AF; W-HG-AF-F):

Samples preserved within 48 hours? Yes ☐ No ☐

Date and time samples preserved: _____

Additional Comments: